



Trainings ▾

Test


Check the location of the drive belt on the belt tensioner pulley. The belt **must** be centered on, or centered close to the middle of the pulley. Belts aligned either too far forward or backward can cause belt wear, belt roll-off, or increase uneven tensioner wear.

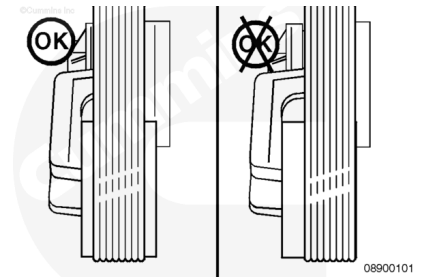


Check the belt deflection at the longest span of the belt. The deflection **must** be checked at the center of the span. See arrow. The maximum deflection allowed in the belt is 9.5 to 12.7 mm [0.375 to 0.5 in].

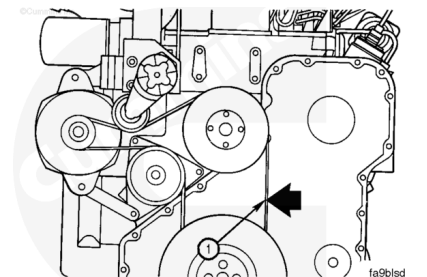

Use belt gauge, Part Number ST-1293, to measure the tension in the drive belt.

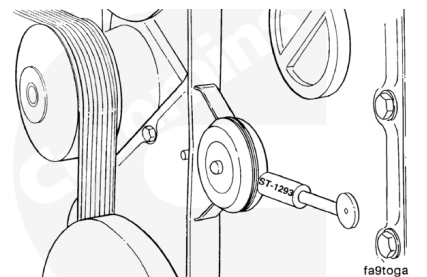


Check the tensioner arm, pulley, and stops for cracks. If any cracks are found, the tensioner **must** be replaced.

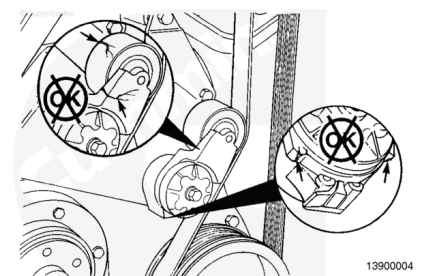

With the belt on, verify that neither of the tensioner arm stops, are in contact with the spring case stops. If either stop is touching, the drive belt **must** be replaced.

After replacing the belt, if the tensioner arm stops are still in contact with the spring case stops, replace the tensioner.

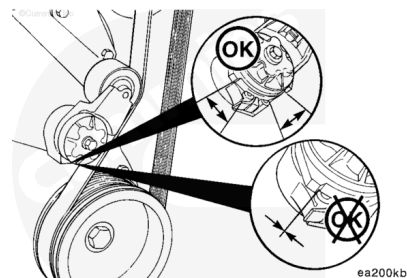


Remove the drive belt and check the tensioner capscrew torque.

Tensioner Capscrew	43 n.m	[32 ft-lb]
--------------------	--------	------------


After checking the torque, use a 3/8-inch breaker bar with an extension to rotate the tensioner slowly away from the area of contact. If the arm rotates with any roughness or hesitancy, replace the tensioner.




Check the belt for damage. Transverse cracks (across the belt width) are acceptable. Longitudinal cracks (along the length of the belt) that intersect with the transverse cracks are **not** acceptable. If the belt is frayed or has any piece of material missing, the belt **must** be replaced.

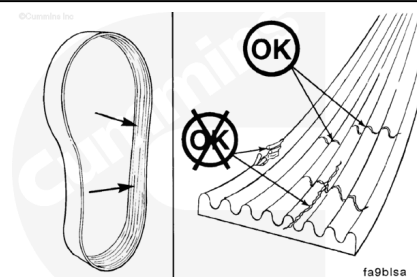


With the belt removed, verify that the tensioner arm stops are in contact with the spring case stops. If these two are **not** touching, the tensioner **must** be replaced.

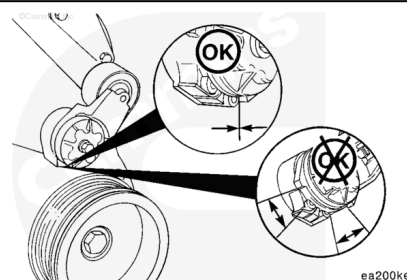

With the drive belt removed, check to be sure the tensioner pulley rotates freely.

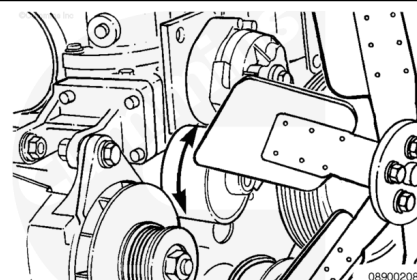

Measure the clearance between the tensioner spring case and the tensioner arm to verify wear-out and uneven bearing wear. If the clearance exceeds 3 mm [0.12 in] at any point, the tensioner **must** be replaced as a complete assembly. Experience has revealed that tensioners generally show a larger clearance gap near the lower portion of the spring case, resulting in the upper portion rubbing against the tensioner arm. **Always** replace the belt when the tensioner is replaced.

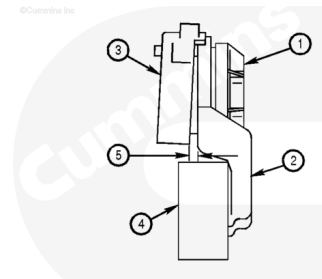

Tensioner parts list:

1. Tensioner cap
2. Tensioner arm
3. Spring case
4. Tensioner pulley
5. Clearance gap.

Inspect the tensioner for evidence of the tensioner arm touching the tensioner cap. If there is evidence of the two areas making contact, the pivot tube bushing and the tensioner **must** be replaced.

