


Trainings ▾

General Information

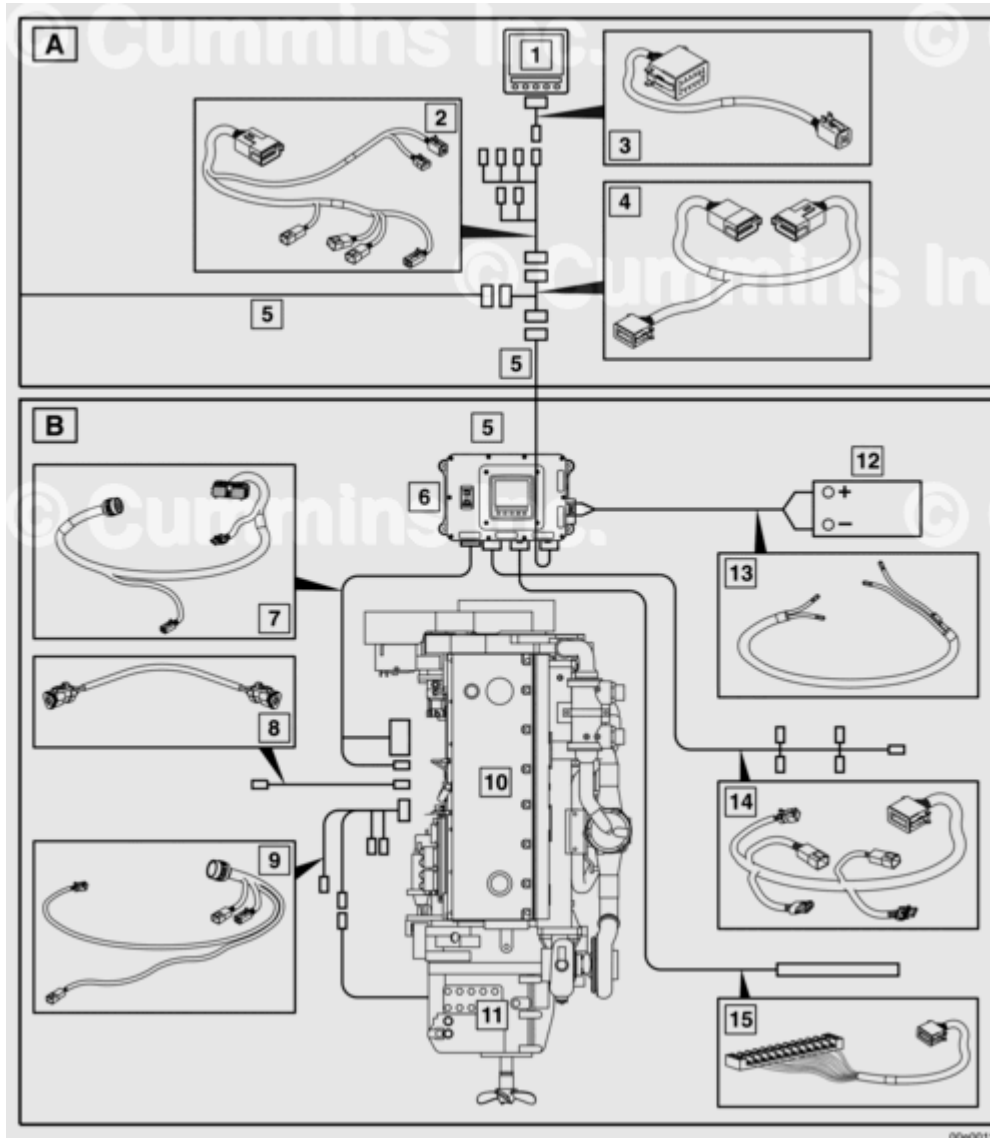

C Command Connect Premier - Single or Multi-Engine, Single or Multi-Station

A. Station 1

B. Engine room.

1. J1939 display (Cummins® or original equipment manufacturer (OEM)-supplied)


2. Helm wiring harness and helm components (Cummins® or OEM-supplied)

- System enable switch
- Start switch
- Stop switch
- External alarm horn

3. Display adapter wiring harness (Standard, Advanced, or Twin engine) (Cummins® or OEM-supplied)
 - Optional dimmer
4. Main extension wiring harness tee (Multi-station **only**) (Cummins® or OEM-supplied)
5. Main extension wiring harness (Cummins® or OEM-supplied)
6. Customer interface box (CIB) (Standard or Premier; Premier shown) (Cummins®-supplied)
7. Engine interface wiring harness (Cummins®-supplied)
8. Application dependent J1939 trunk wiring harness used when both engines need to be connected to a common canbus. (Unique engine control module (ECM) calibration required) (OEM-supplied)
9. Drive application wiring harness (Cummins® or OEM-supplied)
10. Engine (Cummins®)
11. Transmission (Cummins® or OEM-supplied)
12. Battery bank (OEM-supplied)
13. Battery system wiring harness (Cummins® or OEM-supplied)
14. OEM interface wiring harness (Standard or Terminal strip) (Cummins® or OEM-supplied)
15. OEM sensor wiring harness (Premier CIB **only**; Cummins® or OEM-supplied).

Not Shown:

- Transmission gear oil pressure and temperature sensors with adapter harness located at the marine gear oil cooler or transmission, if equipped (Cummins® or OEM-supplied)
- Exhaust temperature sensor/switch located in exhaust plumbing (Cummins® or OEM-supplied)
- Water in fuel sensor extension wiring harness located at suction side filter mounted off engine (Cummins® or OEM-supplied)
- Throttle adapter wiring harness (Cummins® or OEM-supplied).

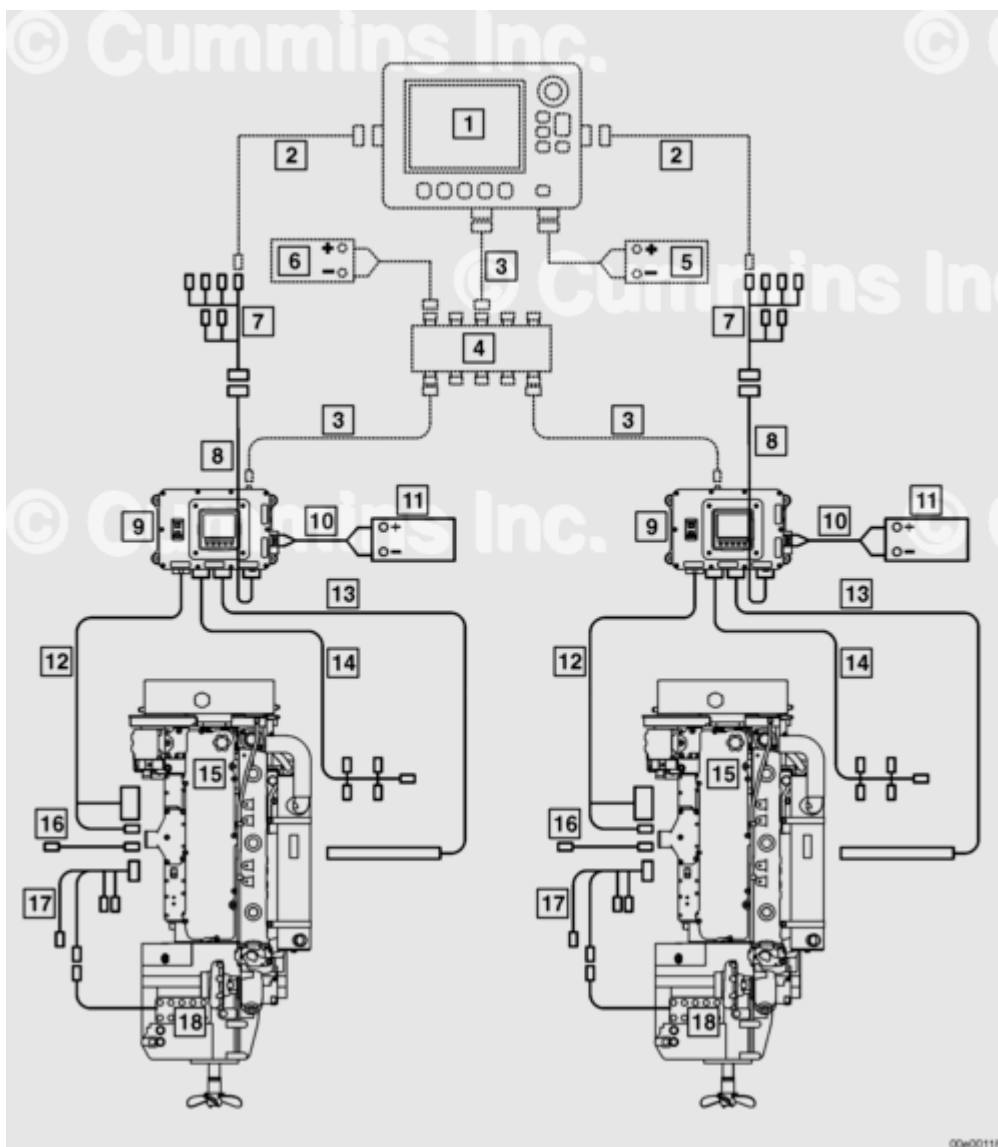


00e00115

C Command Connect Premier - Twin Engine, Non-Cummins J1939, or NMEA 2000® Display at Helm

1. J1939 or NMEA (National Marine Electronics Association) 2000 display (OEM-supplied)
2. J1939 extension wiring harness (OEM-supplied)
3. NMEA 2000® extension wiring harness (OEM-supplied)
4. NMEA 2000® network (OEM-supplied)
 - Tees
 - Harnesses
 - Terminating resistors
5. NMEA 2000® device power supply (OEM-supplied)
6. NMEA 2000® network power supply (OEM-supplied)
7. Helm wiring harness and helm components (Cummins® or OEM-supplied)
 - System enable switch
 - Start switch
 - Stop switch
 - External alarm horn
8. Main extension wiring harness (Cummins® or OEM-supplied)
9. CIB (Premier shown) (Cummins®-supplied)
10. Battery system wiring harness (Cummins® or OEM-supplied)

11. Battery bank (OEM-supplied)
12. Engine interface wiring harness (Cummins®-supplied)
13. OEM sensor wiring harness (Premier CIB **only**; Cummins® or OEM-supplied)
14. OEM interface wiring harness (Standard or Terminal strip) (Cummins® or OEM-supplied)
15. Engine (Cummins®)
16. Application dependent J1939 trunk wiring harness used when both engines need to be connected to a common canbus. (Unique ECM calibration required) (OEM-supplied)
17. Drive application wiring harness, if equipped (Cummins® or OEM-supplied)
18. Transmission (OEM-supplied).

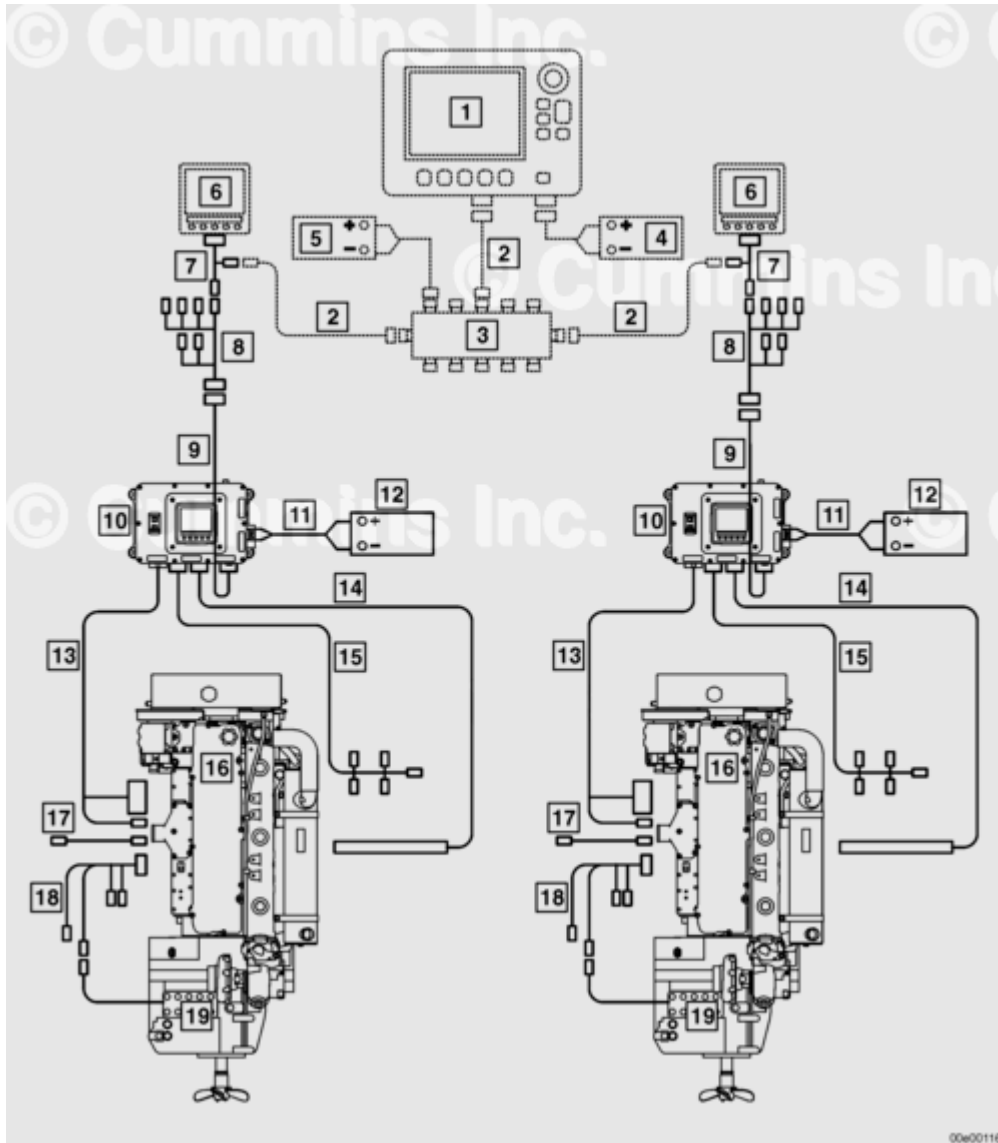

C Command Connect Premier - Twin Engine, Twin Display, Non-Cummins NMEA 2000® Display at Helm

1. NMEA 2000® display (OEM-supplied)
2. NMEA 2000® extension wiring harness (OEM-supplied)
3. NMEA 2000® network (OEM-supplied)
 - Tees
 - Harnesses
 - Terminating resistors

4. NMEA 2000® device power supply (OEM-supplied)
5. NMEA 2000® network power supply (OEM-supplied)
6. ED-4 display (Cummins®-supplied)
7. Display adapter wiring harness (Standard, Advance, or Twin engine) (Cummins® or OEM-supplied)
 - Optional dimmer
8. Helm wiring harness and helm components (Cummins® or OEM-supplied)
 - System enable switch
 - Start switch
 - Stop switch
 - External alarm horn
9. Main extension wiring harness (Cummins® or OEM-supplied)
10. CIB (Premier shown) (Cummins®-supplied)
11. Battery system wiring harness (Cummins® or OEM-supplied)
12. Battery bank (OEM-supplied)
13. Engine interface wiring harness (Cummins®-supplied)
14. OEM sensor wiring harness (Premier CIB only; Cummins® or OEM-supplied)
15. OEM interface wiring harness (Standard or Terminal strip) (Cummins® or OEM-supplied)
16. Engine (Cummins®)
17. Application dependent J1939 trunk wiring harness used when both engines need to be connected to a common canbus. (Unique ECM calibration required) (OEM-supplied)
18. Drive application wiring harness, if equipped (Cummins® or OEM-supplied)
19. Transmission (Cummins® or OEM-supplied).