


Trainings ▾

Remove

The rotational part of the seal is removed from the shaft and gear housing when removing the pulley. This **must** be removed from the pulley and discarded.

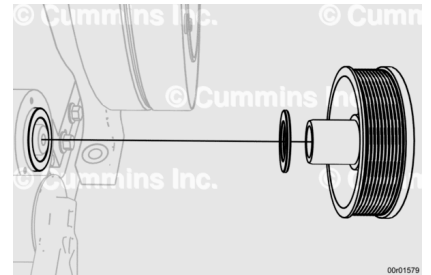

Remove and discard the stationary part of the seal assembly from the gear cover and shaft.

Remove the spacer from the end of the shaft.

