


Trainings ▾

Remove

Remove the two capscrews from the thrust bearing plate through the openings in the camshaft gear.

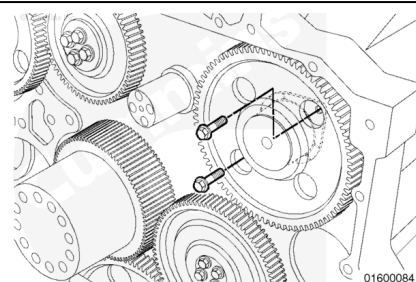


⚠ CAUTION ⚠

Pilots must be used to prevent damage to the camshaft and the bushings.

Use camshaft tool kit, Part Number 3163195. Install the c-clips **only** on the inner base circle of the valve lobes as defined and center the clips on the camshaft. Install all clips before removing or installing the camshaft.

The c-clip locations can be seen in the chart below.

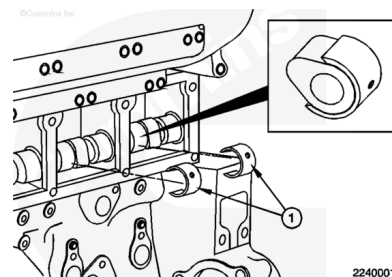

Camshaft Guide Installation Chart

QSK 45 Camshaft Lobes		QSK60 Camshaft Lobes	
Left Bank	Right Bank	Left Bank	Right Bank
Exhaust - 2, 4, 5, and 6	Exhaust - 2, 3, and 5	Exhaust - 4, 6, and 8	Exhaust - 2, 4, and 7
Intake - 2 and 5	Intake - 2, 3, and 5	Intake - 2, 4, and 8	Intake - 2, 3, and 4

- Move the camshaft forward enough to enable installation of the camshaft support on the rear of the camshaft.


⚠ WARNING ⚠

This component or assembly weighs greater than 23 kg [50 lb]. To prevent serious personal injury, be sure to have assistance or use appropriate lifting equipment to lift this

component or assembly.

⚠ CAUTION ⚠

To reduce the possibility of damage to the camshaft or bushings during disassembly, turn the camshaft gently clockwise and counterclockwise slightly while pulling it out.

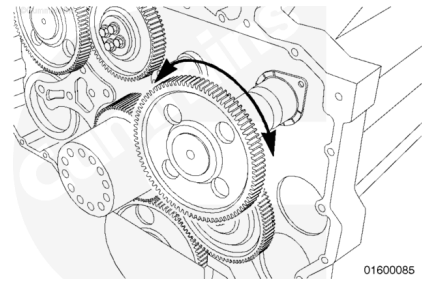

⚠ CAUTION ⚠

Rotating the camshaft too far in any direction will cause the camshaft tools to lock up the camshaft.

Note : One of the pilots must always be on the bottom part of the camshaft bushing.

Slightly rotate the camshaft back and forth during removal, if necessary.

Once the camshaft extends approximately half the length of the camshaft, use a lift strap to support the camshaft and complete the removal.

Remove the camshaft from the cylinder block.