


Trainings ▾

Preparatory Steps

⚠ WARNING ⚠


This component weighs 23 kg [50 lb] or more. To reduce the possibility of personal injury, use a hoist or get assistance to lift this component.

Remove the vibration damper. Refer to Procedure 001-052 (</qs3/pubsys2/xml/en/procedures/56/56-001-052-tr.html>).

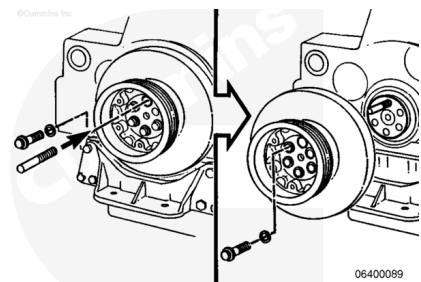

Remove

Remove the crankshaft adapter capscrews and the crankshaft adaptor.

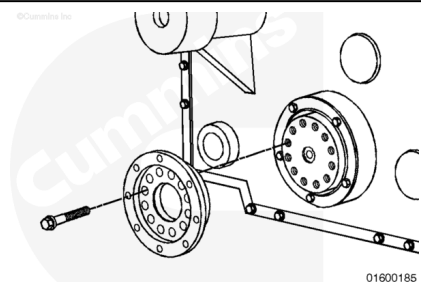


Install

Install the roll pin into the crankshaft nose. This pin will align the crankshaft adapter to the crankshaft.

Measure the crankshaft adapter roll pin protrusion.


mm		in
21.0	MIN	0.83
23.0	MAX	0.91

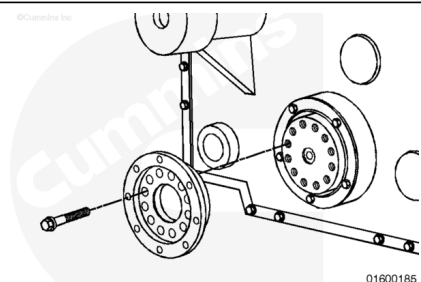

Make sure the roll pin is lined up with the hole in the crankshaft adapter.

Install the crankshaft adapter.


Lubricate the crankshaft adapter capscrew threads and flange surfaces with clean engine oil.

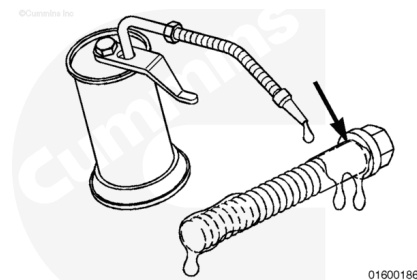

Install the crankshaft adapter capscrews.

Tighten the capscrews in the sequence shown.

Torque Value:	Step 1	200 n.m [148 ft-lb]
	Step 2	380 n.m [280 ft-lb]
	Step 3	685 n.m [505 ft-lb]

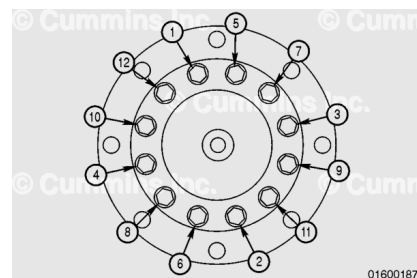

Finishing Steps

⚠ WARNING ⚠

This component weighs 23 kg [50 lb] or more. To reduce the possibility of personal injury, use a hoist or get assistance to lift this component.

Install the vibration damper. Refer to Procedure 001-052 (</qs3/pubsys2/xml/en/procedures/56/56-001-052-tr.html>).

