


Trainings ▾

Disassemble

Remove the crankshaft gear with the hydraulic gear remover, Part Number 3164375.


Remove the key from the keyway in the crankshaft.

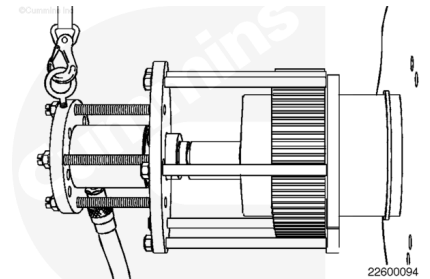

Clean and Inspect for Reuse

⚠ WARNING ⚠

When using solvents, acids or alkaline materials for cleaning, follow the manufacturer's recommendations for use. Wear goggles and protective clothing to reduce the possibility of personal injury.

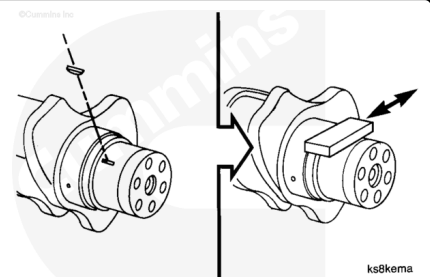

⚠ WARNING ⚠

Wear appropriate eye and face protection when using compressed air. Flying debris and dirt can cause personal injury.

Clean the crankshaft gear with solvent and dry with compressed air.


Use a honing stone to polish the outside diameter of the crankshaft, at the location the gear is located.

Make sure any small scratches, burrs, or small grooves are removed.

Measure the outside diameter of the crankshaft.

Crankshaft Outside Diameter (Front Gear Location)

mm		in
184.12	MIN	7.249
184.16	MAX	7.251

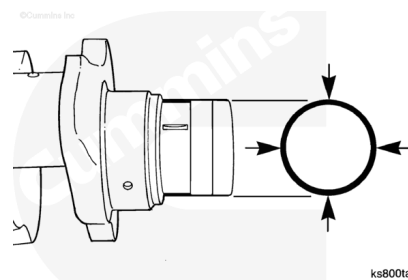


ks800ta

If the crankshaft is **not** within specifications. The crankshaft **must** be replaced.

Measure the inside diameter of the front crankshaft gear.

Front Crankshaft Gear Inside Diameter

mm		in
183.97	MIN	7.243
184.10	MAX	7.248

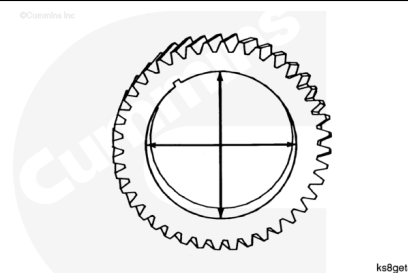


ks8geta

If the crankshaft gear is **not** within specifications. The crankshaft gear **must** be replaced.

Assemble

Install a new key into the crankshaft.

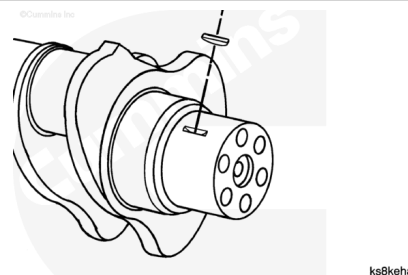


ks8keha

⚠ WARNING ⚠

To reduce the possibility of severe burns, wear protective gloves when installing the heated crankshaft gear.

⚠ CAUTION ⚠

When heating the crankshaft gear, do not exceed the specified time or temperature. Damage to the crankshaft gear and to the crankshaft gear teeth will result.

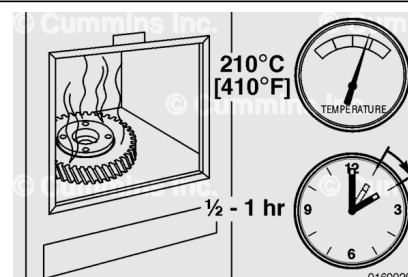

01600291

⚠ CAUTION ⚠

**Do not attempt to install the crankshaft gear without heat.
Damage to the crankshaft gear and to the crankshaft gear
teeth will result.**


Heat the crankshaft gear in an oven, at a maximum temperature of 210°C [410°F], for a minimum of 1/2 hour to a maximum of 1 hour. The inside diameter of the crankshaft gear will become larger and simplify the installation of the crankshaft gear onto the crankshaft.

⚠ WARNING ⚠

To reduce the possibility of severe burns, wear protective gloves when installing the heated crankshaft gear.

⚠ CAUTION ⚠

Allow the air to cool the crankshaft gear. The use of water or oil to reduce the cooling time can cause the crankshaft gear to crack.

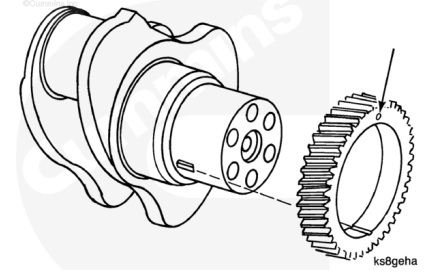

Lubricate the outside diameter of the crankshaft, at the crankshaft gear location, with Lubriplate® 105 or equivalent.

Remove the crankshaft gear from the oven.

The timing marks on the crankshaft gear **must** be visible from the front of the crankshaft after the gear is installed.

Align the key way on the crankshaft gear with the key in the crankshaft and install the crankshaft gear.