

Trainings ▾


General Information

Note : There are two different piston and liner combinations available for this engine platform. The ferrous cast ductile (FCD) piston **must** be used in combination with a nitrided cylinder liner. The steel piston **must** be used in combination with a high boron liner. It is important that these parts are used in this combination stated and **never** mixed. An engine **must never** be run with a mixture of FCD and steel pistons. It **must** contain **only** a full set of FCD pistons or a full set of steel pistons. The liners can be distinguished from each other by appearance. The nitride liners will have a matte appearance on the outer circumference. The high boron liners are bright and shiny in appearance.


Remove

Use the cylinder liner puller, Part Number 3163745, and puller plate, Part Number 3162886, to remove the cylinder liner.

Wind down the threaded rod to extend the arm. Turn the arm to the side to enable passage through the liner.

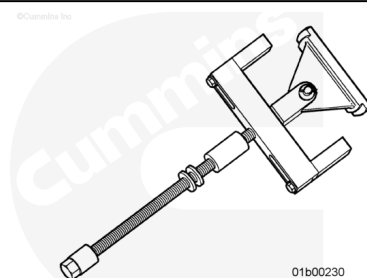


Install the cylinder liner puller, Part Number 3163745, in the cylinder liner. The puller feet **must not** touch the top of the liner. The puller arms **must** be positioned firmly on the bottom of the liner.

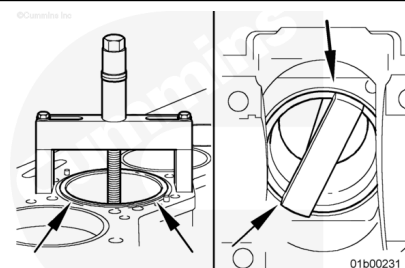

Turn the puller screw until the liner loosens in the block.

Remove the tool and the liner.

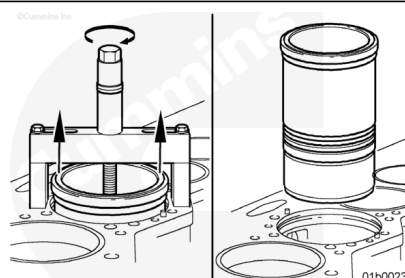

Use a liquid metal marker to mark the cylinder number and bank on each liner. Mark the cylinder liner on the camshaft side of the cylinder liner.

If sealing rings were used, use a tag to mark the cylinder number.

Measure in several places and record the thickness of the sealing rings used in each cylinder. The thickness of the sealing ring is one factor in determining liner protrusion. This information **must** be known when the liners are installed in the engine.

