


Trainings ▾

Remove

with Mechanically Actuated Injector

⚠ WARNING ⚠

This assembly weighs 23 kg [50 lb] or more. To reduce the possibility of personal injury, use a hoist or get assistance to lift this assembly.

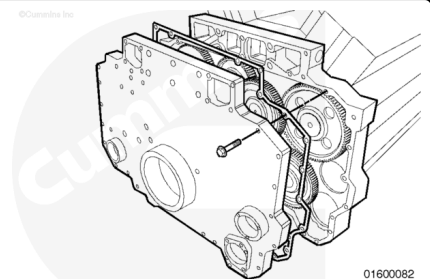

The front cover has capscrews that go up through the oil pan adapter and into the front gear cover.

Remove the 28 capscrews and washers.


Use the guide pins to support the front gear cover, slide it forward, and install the lifting eye into the threaded hole in the top center of the front gear cover.

Remove the front gear cover and gear cover gasket.

The front gear cover gasket is an edge-molded gasket. Inspect the gasket; if any damage is found, the gasket **must** be replaced.

with Electronically Actuated Injector

Remove the five capscrews that go up through the oil pan adapter and into the front gear cover.

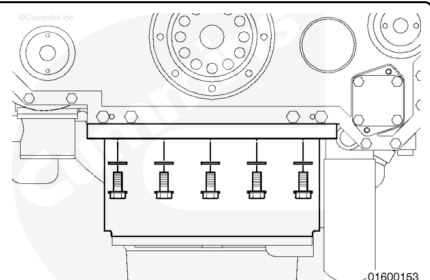

⚠ WARNING ⚠

This assembly weighs 23 kg [50 lb] or more. To reduce the possibility of personal injury, use a hoist or get assistance to lift this assembly.

Remove the front gear cover capscrews and washers.

Note : The number of capscrews depends on the engine options.

Use the guide pins to support the front gear cover, slide it forward, and install the lifting eye into the threaded hole in the top center of the front gear cover.

Remove the front gear cover and gear cover gasket.

The front gear cover gasket is an edge-molded gasket. Inspect the gasket; if any damage is found, the gasket **must** be replaced.

