


Trainings ▾

Install

⚠ CAUTION ⚠

To reduce wear on the idler shaft, it must be installed in the correct position.

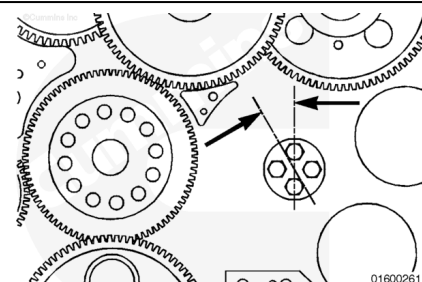

Install a guide stud into the uppermost mounting hole location for the idler shaft.

Install the idler shaft over the guide stud with the oil hole in the 11 o'clock position and mate the shaft to the cylinder block face.

Install the thrust washer over the idler shaft, the grooved side **must** point outward from the block.

Lightly oil the face of the thrust washer with clean engine oil.


Lubricate the gear bushing with clean engine oil.

Install the drive gear onto the idler shaft with the small diameter gear towards the cylinder block.

Install the second thrust washer with the grooved side toward the engine.

Lubricate the thrust washer with clean engine oil.

Install the idler shaft retaining washer over the guide stud and line up with the mounting holes.

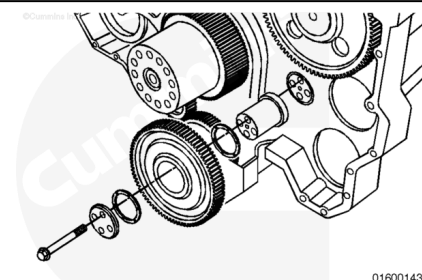


Install two capscrews.

Remove the guide stud and install the remaining two capscrews.

Tighten the capscrews in the sequence shown.

Torque Value:


1. 80 n•m [59 ft-lb]
2. 165 n•m [122 ft-lb]
3. 280 n•m [207 ft-lb]

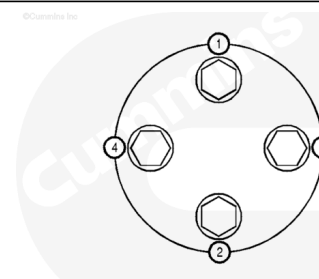

Use a dial indicator to measure the idler gear end clearance.

Hydraulic Pump Idler Gear - End Clearance

mm		in
0.15	MIN	0.006
0.33	MAX	0.013

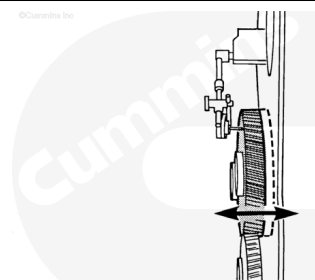

IF4001a

If the clearance is **not** within specifications, check for foreign material between the parts, or check for proper location of the thrust washer. Oversize thrust washers are available.

Last Modified: 23-Aug-2018
