

Trainings ▾


Measure

This check **must** be performed after the gear cover is removed or before installation.

The adjacent (engaging) gear **must not** turn as the gear being measured is turned.

Position a dial indicator so the tip is contacting the surface of the gear tooth as shown. Do **not** allow the mating gear to turn.

Rotate the gear being measured **clockwise**. Position the indicator to "0." Rotate the gear **counterclockwise**, and read the indicator.

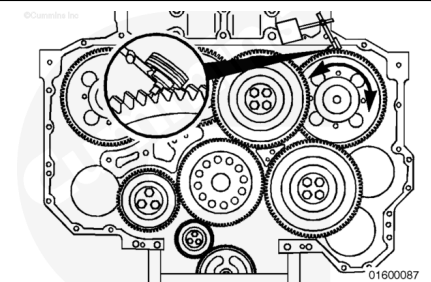

mm		in
0.07	MIN	0.003
0.51	MAX	0.020