


Trainings ▾

Preparatory Steps

⚠ WARNING ⚠

Some state and federal agencies have determined that used engine oil can be carcinogenic and cause reproductive toxicity. Avoid inhalation of vapors, ingestion, and prolonged contact with used engine oil. If not reused, dispose of in accordance with local environmental regulations.

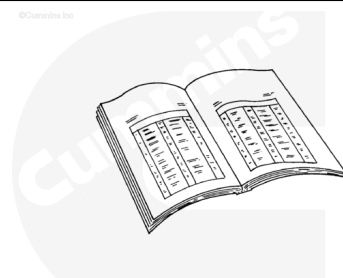

ck800wa

⚠ WARNING ⚠

To reduce the possibility of personal injury, avoid direct contact of hot oil with your skin.

⚠ WARNING ⚠

This component weighs 23 kg [50 lb] or more. To reduce the possibility of personal injury, use a hoist or get assistance to lift this component.

- Drain the engine lubricating oil. Refer to Procedure 007-037 (</qs3/pubsys2/xml/en/procedures/56/56-007-037-tr.html>).
- Remove the lubricating oil pan. Refer to Procedure 007-025 (</qs3/pubsys2/xml/en/procedures/56/56-007-025-tr.html>).
- Remove the lubricating oil pan adapter. Refer to Procedure 007-027 (</qs3/pubsys2/xml/en/procedures/56/56-007-027-tr.html>).
- Remove the lubricating oil suction tube. Refer to Procedure 007-035 (</qs3/pubsys2/xml/en/procedures/56/56-007-035-tr.html>).
- Remove the lubricating oil transfer tube. Refer to Procedure 007-040 (</qs3/pubsys2/xml/en/procedures/56/56-007-040-tr.html>).


- Remove the lubricating oil pump. Refer to Procedure 007-031 (/qs3/pubsys2/xml/en/procedures/56/56-007-031-tr.html).

Remove

⚠ WARNING ⚠

This component weighs 23 kg [50 lb] or more. To reduce the possibility of personal injury, use a hoist or get assistance to lift this component.


Remove the block stiffener plate mounting capscrews and the block stiffener plate.

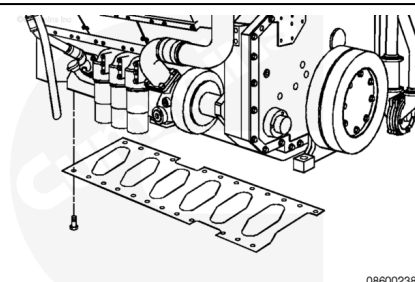

Install

The block stiffener plate use has been discontinued for the QSK45 and QSK60 engines.

Do **not** install the block stiffener plate.

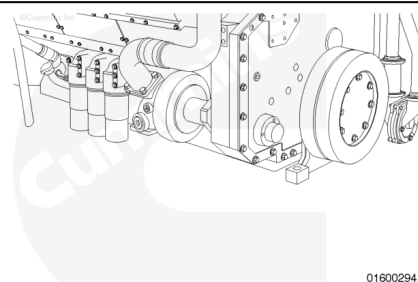

Finishing Steps

⚠ WARNING ⚠

This component weighs 23 kg [50 lb] or more. To reduce the possibility of personal injury, use a hoist or get assistance to lift this component.

- Install the lubricating oil pump. Refer to Procedure 007-031 (/qs3/pubsys2/xml/en/procedures/56/56-007-031-



tr.html).

- Install the lubricating oil suction tube. Refer to Procedure 007-035 (/qs3/pubsys2/xml/en/procedures/56/56-007-035-tr.html).
- Install the lubricating oil transfer tube. Refer to Procedure 007-040 (/qs3/pubsys2/xml/en/procedures/56/56-007-040-tr.html).
- Install the lubricating oil pan adapter. Refer to 007-027 (/qs3/pubsys2/xml/en/procedures/56/56-007-027-tr.html).
- Install the lubricating oil pan. Refer to Procedure 007-025 (/qs3/pubsys2/xml/en/procedures/56/56-007-025-tr.html).
- Fill the engine with clean engine oil. Refer to Procedure 007-037 (/qs3/pubsys2/xml/en/procedures/56/56-007-037-tr.html).
- Operate the engine until the coolant temperature reaches 70°C [160°F].
- Check the engine for oil leaks.