


Trainings ▾

Leak Test

⚠ WARNING ⚠


Wear safety glasses or a face shield, as well as protective clothing, to prevent personal injury when using a steam cleaner or high-pressure water.

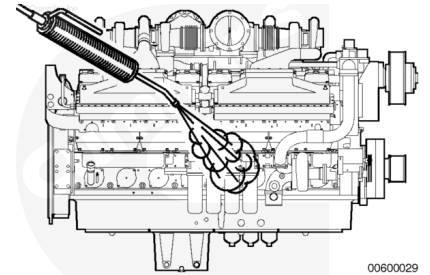

Use steam or high-pressure water. Clean the exterior of the engine.


Operate the engine at low idle.

Check for oil or coolant leaks between the cylinder head and the engine block.

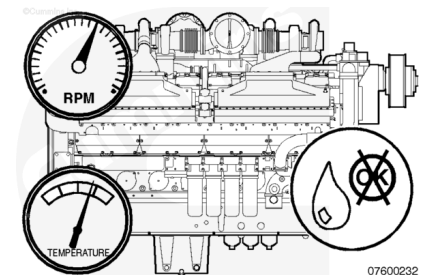


Listen for a chirping sound between the cylinder head and engine block.

A chirping sound, usually during engine acceleration, indicates a combustion leak.

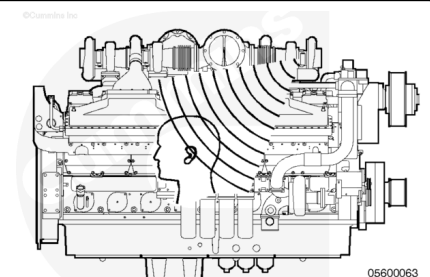


⚠ WARNING ⚠

This assembly weighs 23 kg [50 lb] or more. To avoid personal injury, use a hoist or get assistance to lift this assembly.

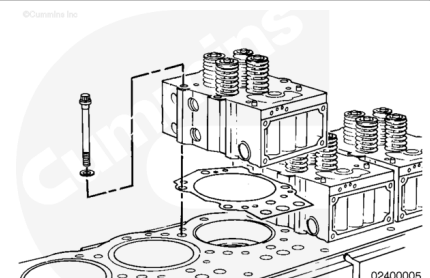

If a leak is found, remove the cylinder head. Refer to Procedure 002-004 (</qs3/pubsys2/xml/en/procedures/56/56-002-004-tr.html>).

Pressure check the cooling system to make sure the leak was at the head gasket and **not** at the liner counterbore. Refer to Procedure 008-018 (/qs3/pubsys2/xml/en/procedures/56/56-008-018-tr.html) for coolant leaks at the counterbore.

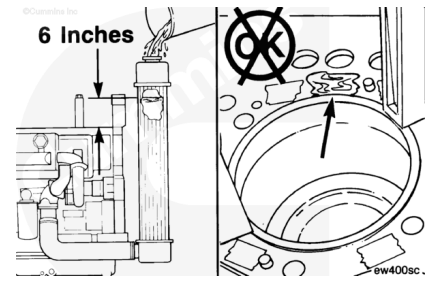

Install the cylinder head and all related components. Refer to Procedure 002-004 (/qs3/pubsys2/xml/en/procedures/56/56-002-004-tr.html).

