


Trainings ▾

Remove


Box Type

Remove the capscrew, nut and P-clip from the outlet hose brace.


Remove the outlet hoses from the brace.

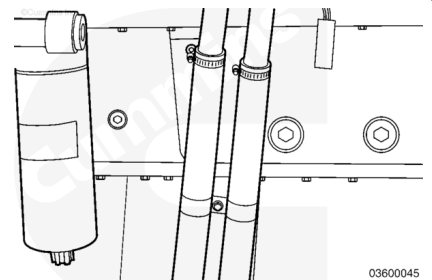


Remove the P-clip.

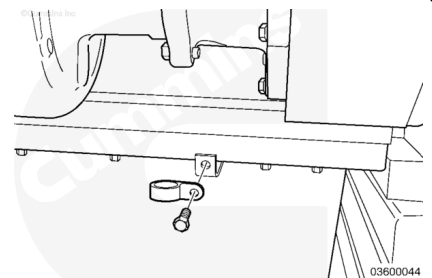

Loosen the hose clamps, as necessary.

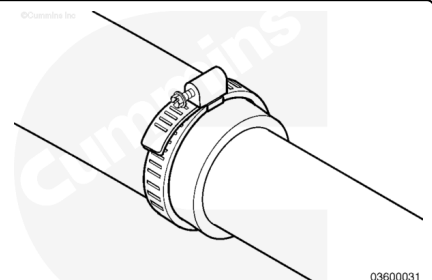


Remove the hose (14) from the blowby sensor outlet.

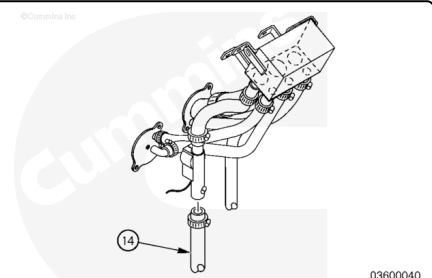


Remove the blowby sensor (15).


Remove the reducer hose (16).

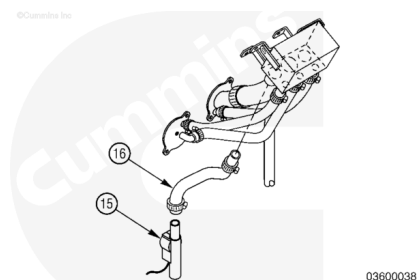


Remove the hose (12) from the right-hand rear crankcase breather box outlet.

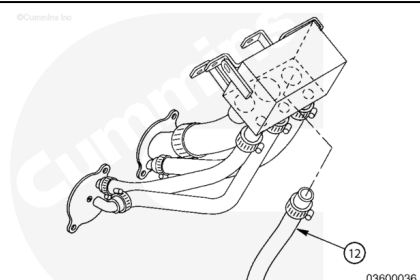


Remove the hose (10) between the front right-hand crankcase breather box outlet and the hand hole cover in the left bank number six location.

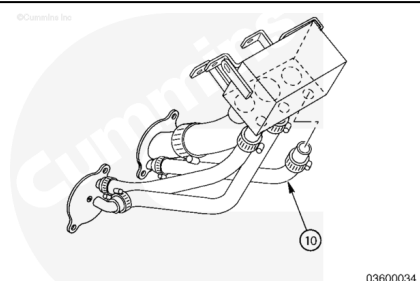


Remove the hose (11) between the front center crankcase breather box outlet and the hand hole cover in the left bank number five location.

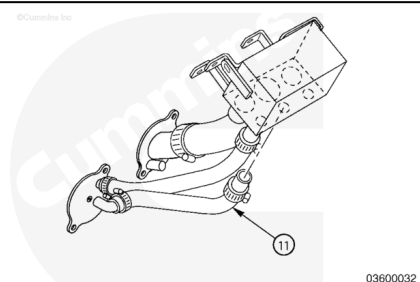

Remove the hose (7) between the front left-hand crankcase breather box outlet and the hand hole cover in the left bank number five location.

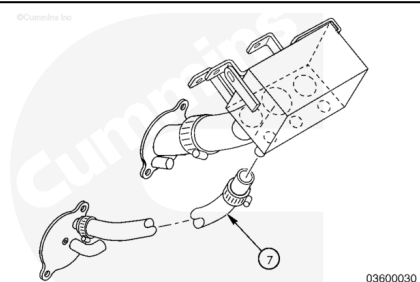


Remove the breather outlet hose.

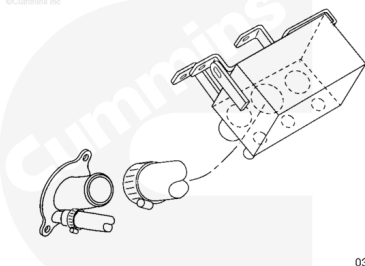

03600029


Remove the capscrews and breather box from the bracket.

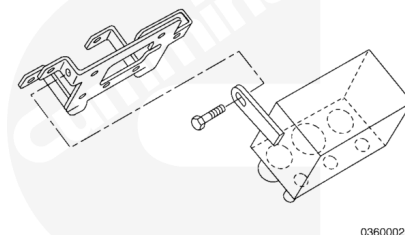

03600028

Remove the bracket mounting capscrews.


Remove the bracket from the cam follower cover.

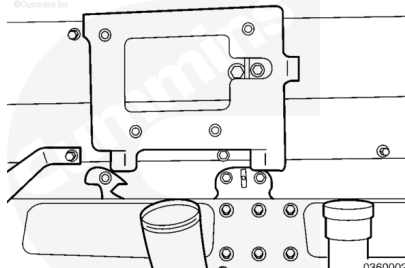

03600026


Purse Type

Loosen the hose clamps as necessary.

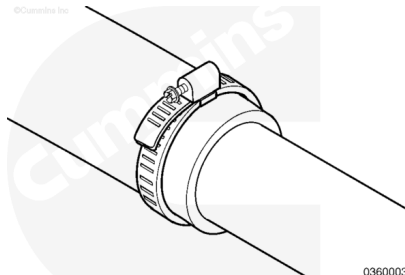

03600031


Remove the capscrews and hose braces from the outlet tubes and cylinder block.

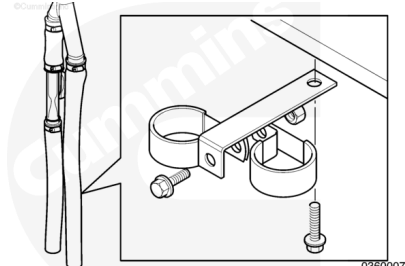

03600070


Remove the long blowby hose from the bottom of the blowby sensor.

Remove the long outlet tube parallel to the blowby sensor.

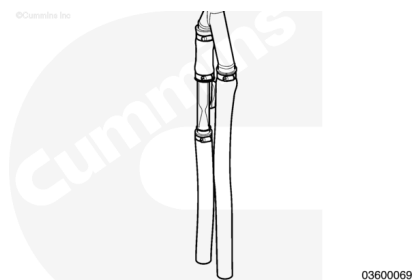


Remove the clamp which secures the blowby “Y” tube to the support brace.

Remove the blowby tube mounting capscrews from the dipstick hand hole cover.

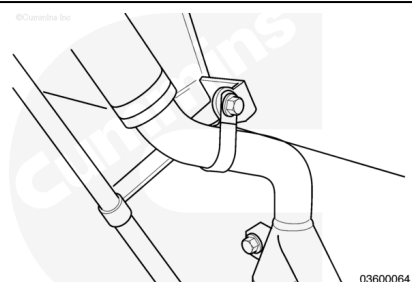


Remove the “Y” tube from the breather box.

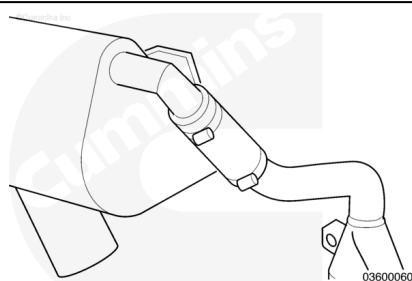


Remove the two hoses connecting the breather box to the oil pan elbow connector.

Remove the oil pan elbow and plug the orifice with an M42 plug, if necessary.

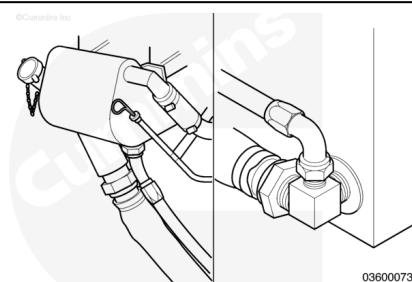


Remove the capscrews which mount the breather box to the cam follower cover.

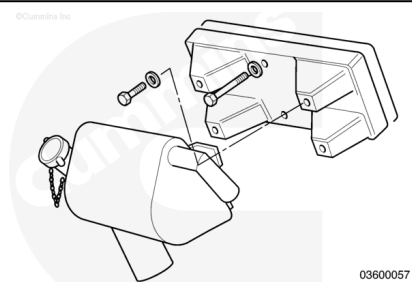


with Electronically Actuated Injector


Remove the P-clips securing the flexible hoses.

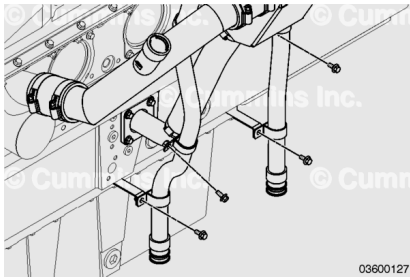


Remove the hose clamps securing the flexible hoses to the breather and remove the flexible hose.

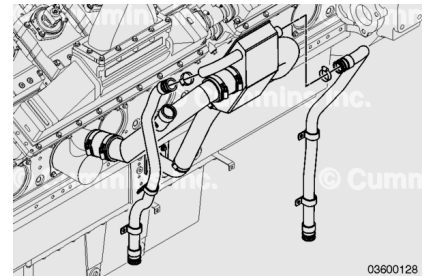


Loosen the hose clamps on the breather tube (with oil fill) and remove the breather tube.

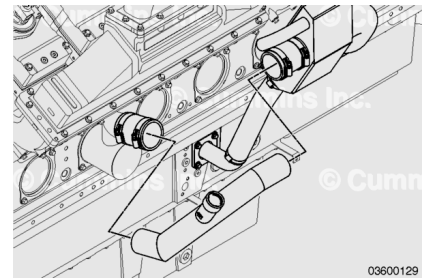


Loosen the hose clamps and remove the hoses.

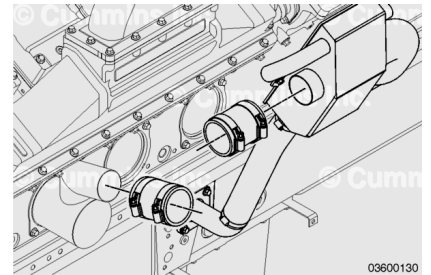


Loosen the hose clamps and remove the molded hose.

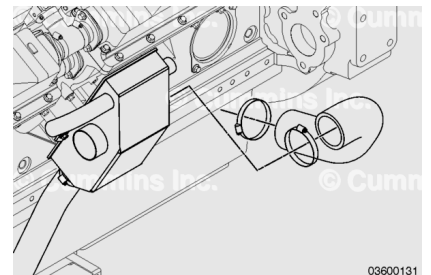

Loosen the hose clamps and remove the breather drain tube.

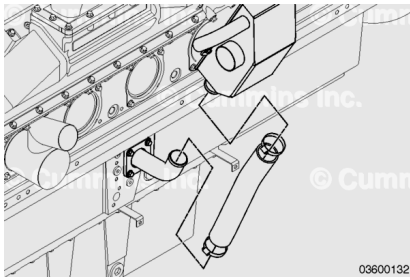

Remove the four capscrews, drain pipe, and gasket. Discard the gasket.

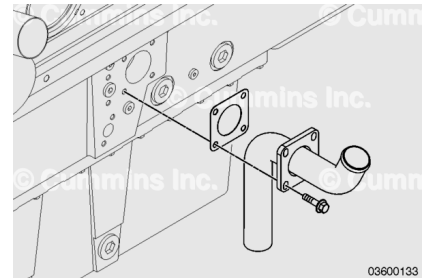

Remove the mounting capscrews and crankcase breather.

