

Trainings ▾

Install


with Mechanically Actuated Injector

Use engine oil to lubricate the sockets in the cam followers.

The injector push rods are wider in diameter and are located in the center of the three push rods. The exhaust and intake push rods are both the same thickness.

Install the push rods.

The push rods **must** be seated correctly in the cam followers.

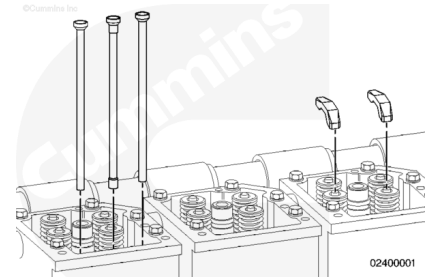

with Electronically Actuated Injector

Use engine oil to lubricate the sockets in the cam followers.

Install the push rods.

The push rods **must** be seated correctly in the cam followers.

