

Trainings ▾

Remove

with Mechanically Actuated Injector

⚠ WARNING ⚠


When using a steam cleaner, wear safety glasses or a face shield, as well as protective clothing. Hot steam can cause serious personal injury.

⚠ WARNING ⚠

When using solvents, acids, or alkaline materials for cleaning, follow the manufacturer's recommendations for use. Wear goggles and protective clothing to reduce the possibility of personal injury.

⚠ CAUTION ⚠

Cover all engine openings and electrical equipment to reduce the risk of water damage.

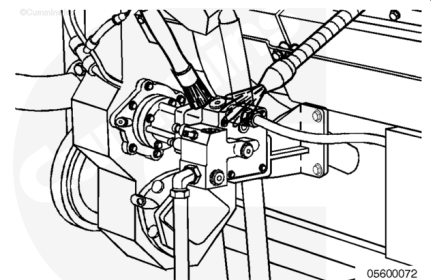


Clean the fuel pump and the surrounding area.

Steam is the best method for cleaning a dirty fuel pump or piece of equipment. If steam is **not** available, use a solvent to wash the engine.

⚠ WARNING ⚠

Fuel is flammable. Keep all cigarettes, flames, pilot lights, arcing equipment, and switches out of the work area and areas sharing ventilation to reduce the possibility of severe personal injury or death when working on the fuel system.

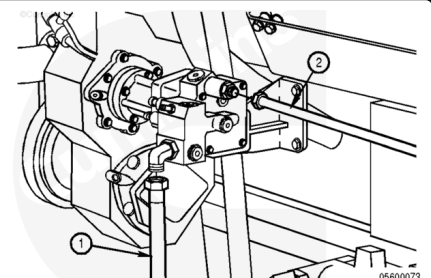

Disconnect the pressure sensor harness connection and the fuel pump actuator harness connection.

Disconnect the fuel inlet line (1).


Disconnect the electronic fuel control valve supply line (2).

Remove the o-rings.

Remove the four fuel pump mounting capscrews, two mounting bracket capscrews, and the fuel pump.


Remove the jaw coupling spider.

Remove and discard the gasket.

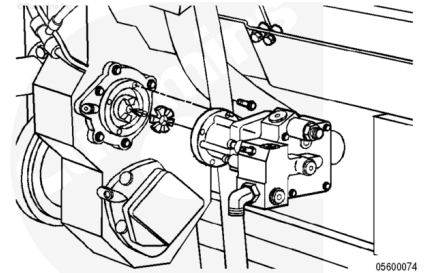


with Electronically Actuated Injector


Disconnect the wiring harness to the fuel pump pressurizing assembly and injector metering rail 1 pressure sensor.

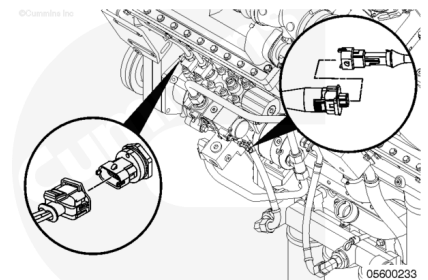


Remove the P-clip securing the wiring of the inlet metering valve to the upper fuel pump support.

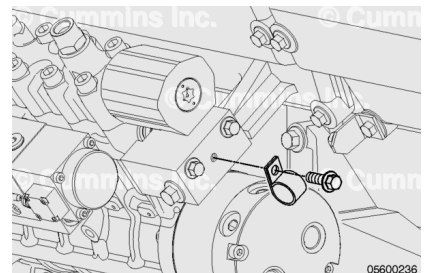


Remove the capscrew securing the upper fuel pump support bracket to the cam cover.

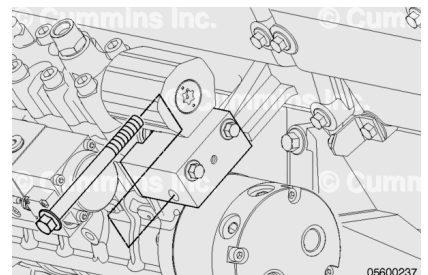


Remove the two capscrews and spacers securing the upper fuel support bracket to the fuel pump. Retain the two spacers.

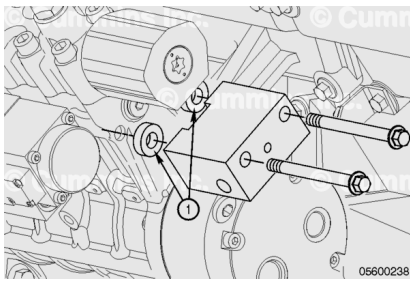

Remove the two capscrews (3) securing the fuel pump support bracket (2) to the support bracket (4).

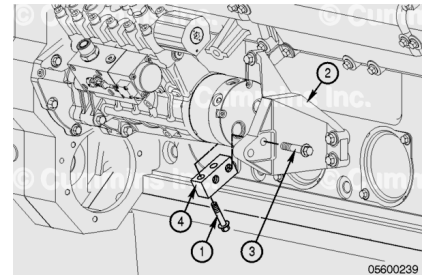


Remove the four intake manifold capscrews.

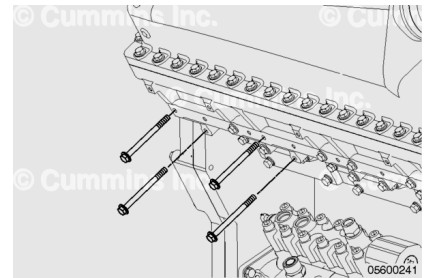


Install the mounting bracket from the fuel pump lifting fixture kit, Part Number 5299015, or equivalent, to the cylinder block.
Install the two spacers and capscrews. Tighten the capscrews.

Torque Value: 68 n•m [50 ft-lb]

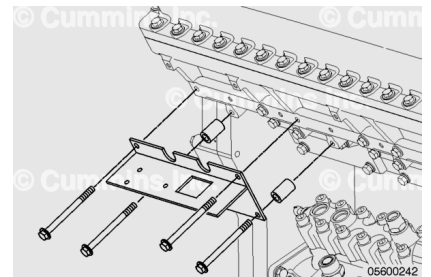


Install the winch onto the mounting bracket. Install the three capscrews, lock washers, and nuts. Tighten the capscrews.

Torque Value: 68 n•m [50 ft-lb]

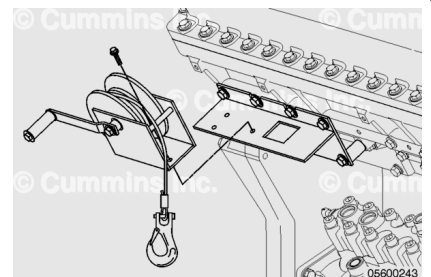


Install the lifting bracket on the fuel pump. Install and tighten the two capscrews.

Torque Value: 45 n•m [33 ft-lb]

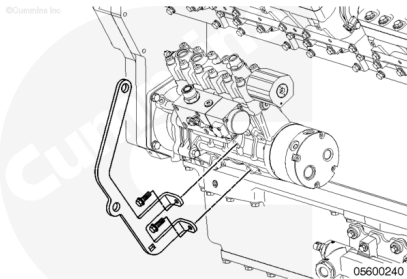


Attach the lifting hook to the lifting bracket.

Turn the winch handle until the lifting cable is tight.

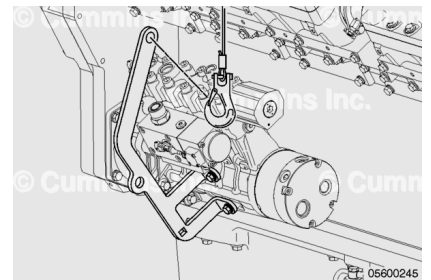


Attach a 1/2-inch breaker bar in the square notch of the lifting bracket. This will aid in the removal, installation, and maneuvering of the fuel pump.

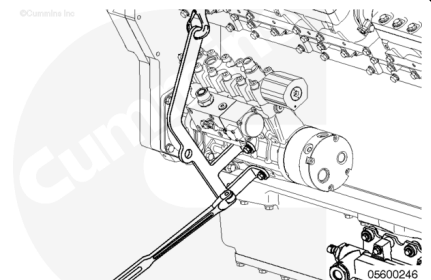

⚠ WARNING ⚠

This component or assembly weighs greater than 23 kg [50 lb]. To prevent serious personal injury, be sure to have assistance or use appropriate lifting equipment to lift this component or assembly.

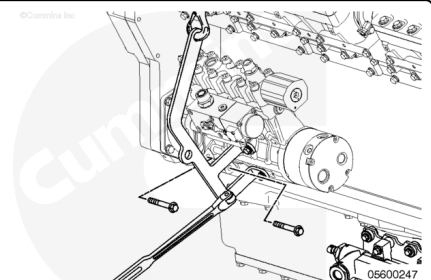


Remove the six capscrews securing the fuel pump to the fuel pump drive.

Use the 1/2-inch breaker bar to negotiate the fuel pump out of the fuel pump drive. Remove the fuel pump from the engine.

Lower the fuel pump using the hand winch.


Remove the hook from lifting bracket.

Remove the 1/2-inch breaker bar from the lifting bracket.

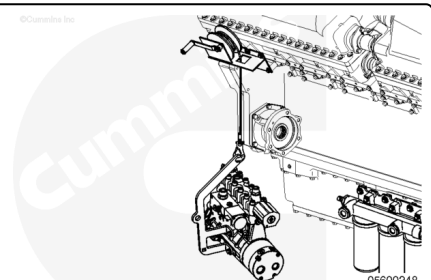

Remove and discard the o-ring used to seal the oil drilling from the fuel pump drive to the fuel pump.

Remove and discard the o-ring used to seal the fuel pump to the fuel pump drive.

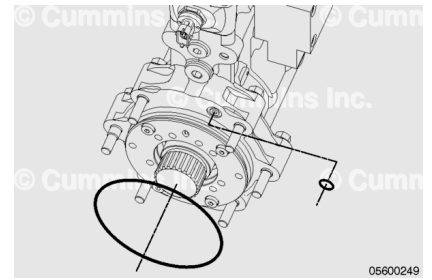

Remove the four capscrews (1) securing the fuel pump support bracket (2) to the engine block.

