


Trainings ▾

Remove

The fuel transfer block and tube assembly mounts to the engine between cylinder head number 3 and cylinder head number 4 on the QSK45 engine and between cylinder head number 4 and cylinder head number 5 on the QSK60 engine.

Remove the four capscrews (1) through the fuel manifold (2) and fuel transfer manifold block (3).

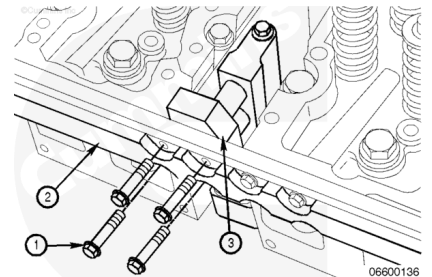

Remove the two capscrews (4) and banjo bolt (7) through the fuel transfer deck block into the engine deck.

Remove the fuel transfer tubes and block assembly (5).

Remove and discard the old gasket (6).

