


Trainings ▾

Remove

The fuel transfer block and tube assembly mounts to the engine between cylinder head number 3 and cylinder head number 4 on the QSK45 engine and between cylinder head number 4 and cylinder head number 5 on the QSK60 engine.


Remove the four capscrews (1) through the fuel manifold (2) and fuel transfer manifold block (3).

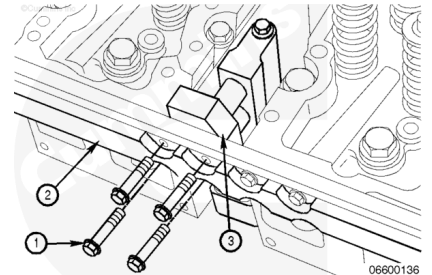

Remove the two capscrews (4) and banjo bolt (7) through the fuel transfer deck block into the engine deck.

Remove the fuel transfer tubes and block assembly (5).

Remove and discard the old gasket (6).

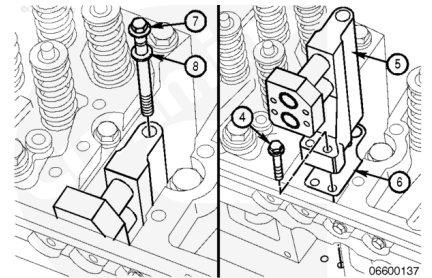


Remove and discard the o-rings (9) and separate the fuel transfer manifold block (3) from the two transfer tubes (8).

Remove the two transfer tubes (8) and o-rings (7) from the fuel transfer deck block (5).

Discard the old o-rings (7).


If the old style fuel transfer block is used, o-rings (9) are **not** required. The old style fuel transfer manifold block has molded-in seals.

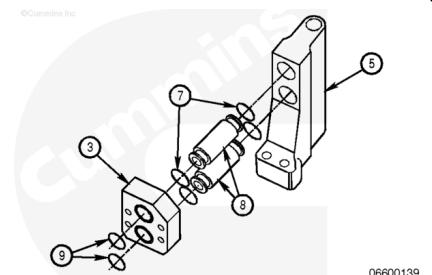

Remove

The fuel transfer block and tube assembly mounts to the engine between cylinder head number 3 and cylinder head number 4 on the QSK45 engine and between cylinder head number 4 and cylinder head number 5 on the QSK60 engine.


Remove the four capscrews (1) through the fuel manifold (2) and fuel transfer manifold block (3).

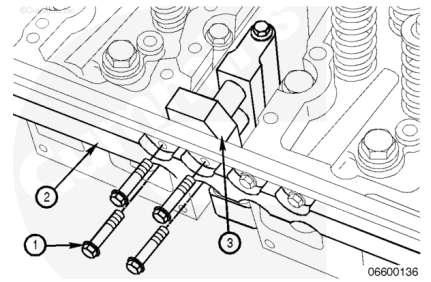

Remove the two capscrews (4) and banjo bolt (7) through the fuel transfer deck block into the engine deck.

Remove the fuel transfer tubes and block assembly (5).

Remove and discard the old gasket (6).

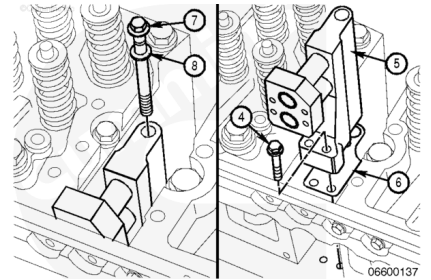


Disassemble

Remove and discard the o-rings (9) and separate the fuel transfer manifold block (3) from the two transfer tubes (8).

Remove the two transfer tubes (8) and o-rings (7) from the fuel transfer deck block (5).

Discard the old o-rings (7).


If the old style fuel transfer block is used, o-rings (9) are **not** required. The old style fuel transfer manifold block has molded-in seals.

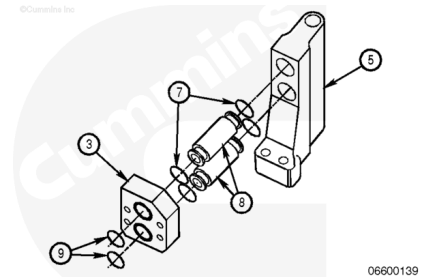

Clean and Inspect for Reuse

⚠ WARNING ⚠

When using solvents, acids or alkaline materials for cleaning, follow the manufacturer's recommendations for use. Wear goggles and protective clothing to reduce the possibility of personal injury.

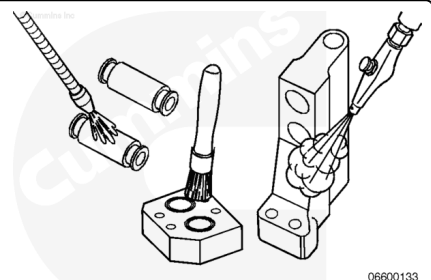


⚠ WARNING ⚠

Wear appropriate eye and face protection when using compressed air. Flying debris and dirt can cause personal injury.

Clean all parts using solvent and dry using compressed air.

Check that all gasket material has been removed from the fuel transfer deck block and mounting surface.


Inspect the tubes and block for cracks and any sign of damage. If any damage is noticed, replace the component.

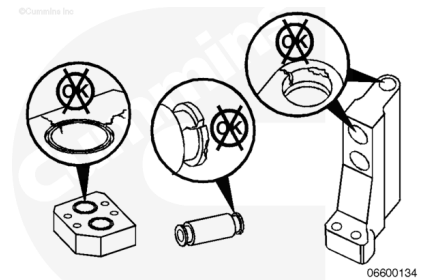

Assemble

⚠ CAUTION ⚠

The tubes, o-rings, and blocks must be free from dirt and damage. Fuel leaks will result with use of damaged material causing internal engine damage and possible crankcase explosion.

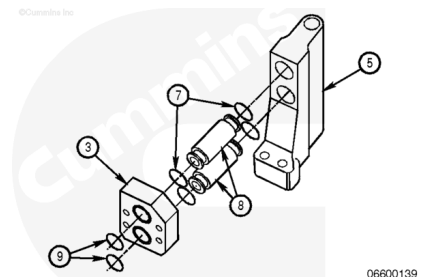

Lubricate the o-ring (7) with clean engine oil prior to assembly.

Install the two fuel transfer tubes (8) with new o-rings (7) into the fuel transfer deck block (5).

Install the fuel transfer manifold block (3) onto the transfer tubes (8).


Lubricate the new o-rings (9) with clean engine oil and install them into the fuel block connection (3).

If the old style fuel transfer block is used, o-rings (9) are **not** required. The old style fuel transfer manifold block has molded-in seals.

Install

⚠ CAUTION ⚠

The tubes, o-rings, and blocks must be free from dirt and damage. Fuel leaks will result with use of damaged material causing internal engine damage and possible crankcase explosion.

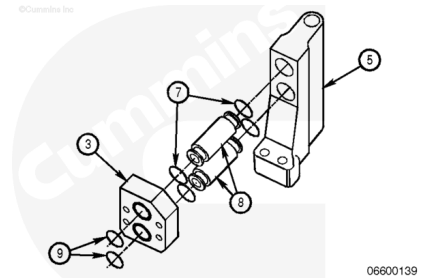

Lubricate the o-ring (7) with clean engine oil prior to assembly.

Install the two fuel transfer tubes (8) with new o-rings (7) into the fuel transfer deck block (5).

Install the fuel transfer manifold block (3) onto the transfer tubes (8).

Lubricate the new o-rings (9) with clean engine oil and install them into the fuel block connection (3).

If the old style fuel transfer block is used, o-rings (9) are **not** required. The old style fuel transfer manifold block has molded-in seals.

The fuel transfer head deck block mounts to the engine between cylinder head number 3 and cylinder head number 4 on the QSK45 engine. The head deck block mounts between cylinder head number 4 and cylinder head number 5 on the QSK60 engine.


Install the fuel transfer head deck block gasket (6) to the correct position on the left or right bank.

Slide the fuel transfer tubes and block assembly (5) into location. Take care that alignment with the gasket (6) is maintained during assembly.

Install the washer (8) onto the banjo bolt (7).

Install the two mounting capscrews (4) and the banjo bolt (7) and washer (8) through the fuel transfer head deck block (5) and gasket (6) into the engine deck.


Finger tighten capscrews (4) and banjo bolt (7).

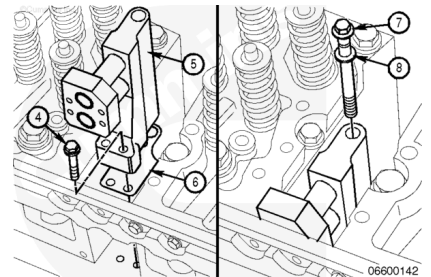

Install the four capscrews (1) through the fuel manifold (2) into the fuel transfer manifold block (3).

Tighten the four capscrews.

Torque Value: 9 n•m [79 in-lb]

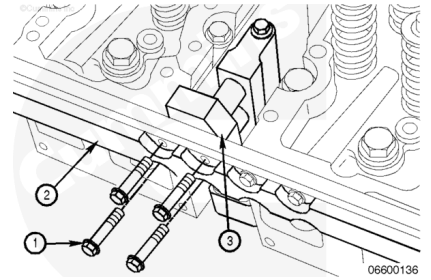

Tighten the two capscrews (4) through the fuel transfer deck block into the engine deck.

Torque Value: 23 n•m [17 ft-lb]

Tighten the banjo bolt (7).

Torque Value: 72 n•m [53 ft-lb]

