

Trainings ▾


Remove

with Mechanically Actuated Injector

Note : This portion of the Remove section is for engines with mechanically actuated injectors and the new style fuel drain line bracket.

Remove the fuel return line from the engine. Refer to the OEM service manual.


Remove the fuel drain tube.

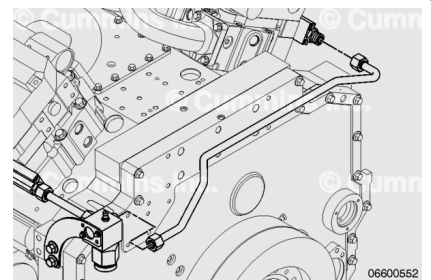

Note the location and orientation of the check valve and coupling. They **must** be installed in the same location.


Remove the two capscrews securing the bracket to the tee line connector block.

Remove the two capscrews securing the bracket to the front of the gear housing.

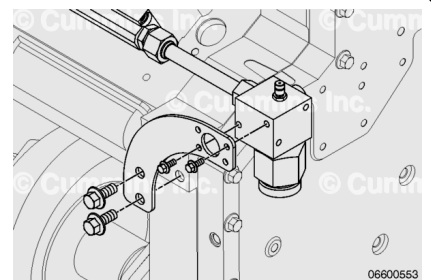


Loosen the fuel drain nut closest to the fuel manifold.

Remove the fuel drain line and tee line connector assembly from the front of the right bank fuel manifold.

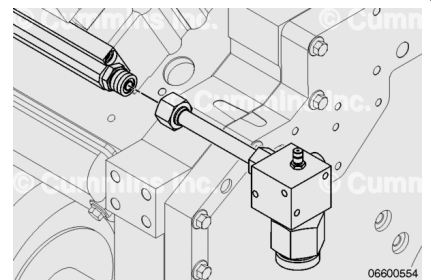


Remove the fuel drain line, check valve, and coupling from the tee line connector. This can require a vise.

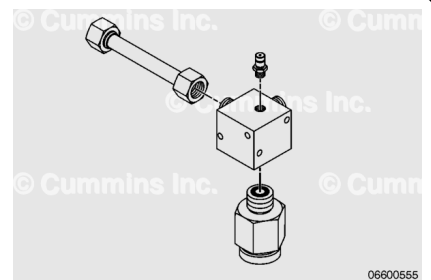

Note : This portion of the Remove section is for engines with mechanically actuated injectors and the old style fuel drain line bracket.


Note : The option illustrated is a left rear fuel drain location. The fuel drain can also be located at the right rear, left front, and right front.

Remove the fuel drain hose from the fuel drain line connector.

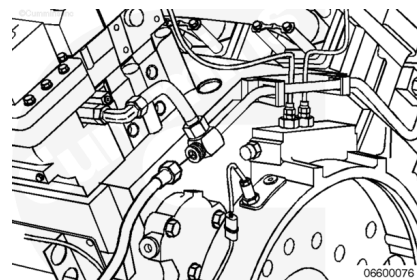


Remove the two capscrews from each fuel drain line support block.

Remove the support block cap from the support block.

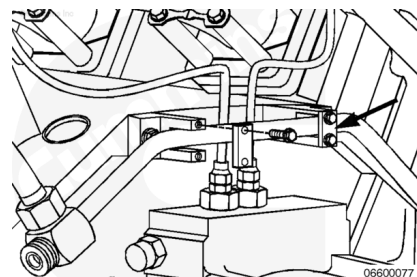


Disconnect the fuel drain line from each fuel manifold.

Remove the fuel drain line assembly.

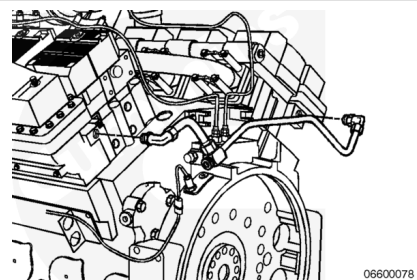


with Electronically Actuated Injector

Remove the capscrew and p-clip which clamp the drain line between the mechanical dump valve and the drain manifold block, to the brace that secures it to the engine.

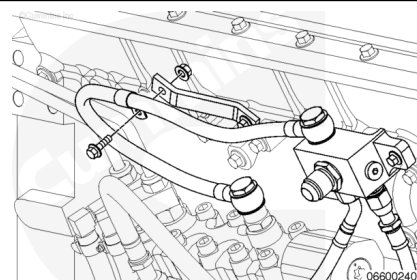


Remove the banjo capscrews and the sealing washers securing the drain line between the mechanical dump valve and the drain manifold block. Discard the sealing washers.

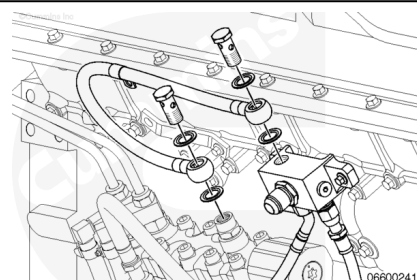


Remove the banjo capscrew and sealing washers securing the air bleed line from the drain manifold block to the fuel pump (1). Discard the sealing washers.


Remove the air bleed line from the drain manifold block (2). Discard the o-ring.

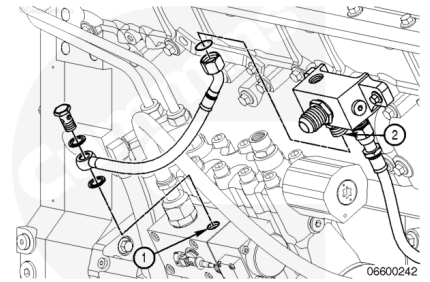


Remove the capscrew, nut, and p-clip which clamp the fuel drain line between the drain manifold block and the fuel block manifold, to the brace that secures it to the engine.

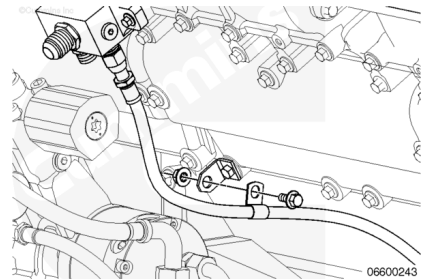


Remove the fuel drain line that connects the drain manifold to the fuel block manifold. Discard the o-rings.

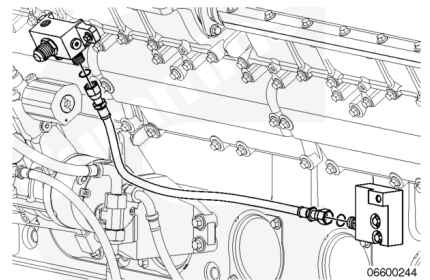

If it is necessary to remove the main fuel manifold, the aftercooler assembly will need to be removed. Refer to Procedure 010-002 in Section 10.
(</qs3/pubsys2/xml/en/procedures/56/56-010-002-tr.html>)

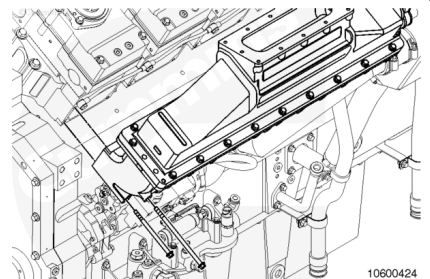


Remove the double banjo capscrew and sealing washers that secure the main fuel drain manifold to the block. Discard the sealing washers.

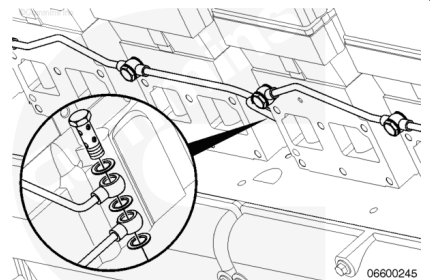

Remove the remaining eight banjo capscrews, sealing washers, and fuel drain manifold. Discard the sealing washers.


Repeat these procedures on the opposite cylinder bank.

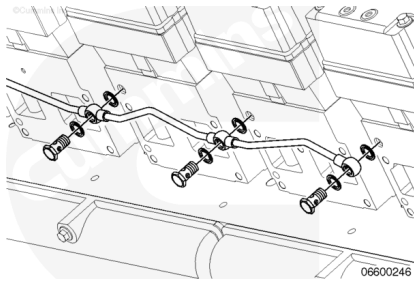

For Generator Model DQKAN with Low NOx Emissions Capability

There are four fuel drain lines that connect to the fuel drain manifold:

1. Fuel pressure relief valve return
2. High-pressure pump return
3. Fuel manifold Drain line
4. Injector return line

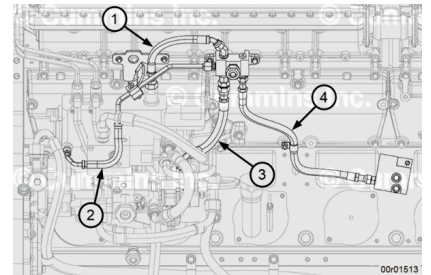


There is an injector return manifold that runs the length of four cylinders

located behind the aftercooler assemblies on each bank.

Disconnect fittings at the fuel pressure relief valve and fuel drain manifold.


Remove fuel pressure relief valve return line.

Discard O-rings.

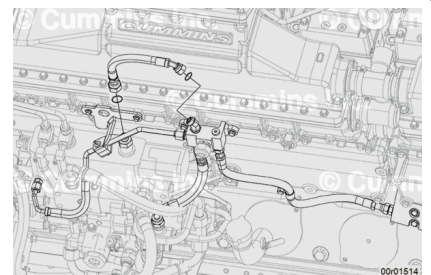

⚠ WARNING ⚠

The high-pressure pump return line may be hot. Do not touch the line while the engine is running, and allow adequate time for the line to cool before servicing.

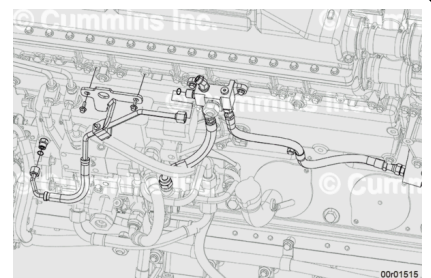

Loosen the block securing the pump return line to the bracket.


Disconnect the fittings securing the pipe to the high-pressure pump and fuel drain manifold.

Discard the o-rings.

Remove the line.

Disconnect the fitting at the fuel pump gerotor and drain manifold block.


Discard the o-rings.

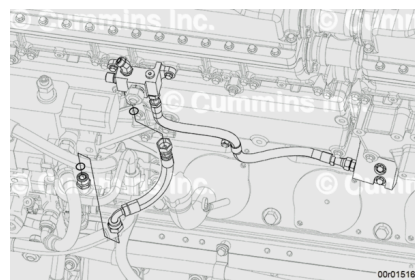

Remove p-clip from camshaft follower housing.

Disconnect the fitting at the drain manifold block and fuel manifold block.

Discard the o-rings.

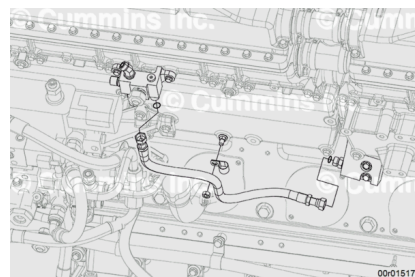

The procedure for removal of the main fuel manifold, if necessary, is the same as detailed above for standard product.