


Trainings ▾

Remove QSK45 Engines

Remove the 24 fuel manifold mounting capscrews.

Remove the left-bank fuel manifold.

Repeat this process for the removal of the right-bank fuel manifold.

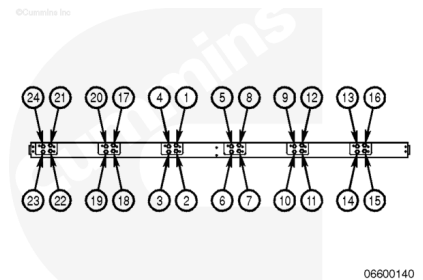

Two Piece Fuel Manifold

Remove the transfer tubes and o-rings. Discard the o-rings.




QSK60 Engines

Remove the 32 fuel manifold mounting capscrews.


Remove the left-bank fuel manifold.

Repeat this process for the removal of the right-bank fuel manifold.

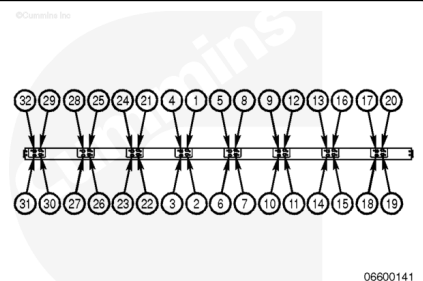

Two Piece Fuel Manifold

Remove the transfer tubes and o-rings. Discard the o-rings.

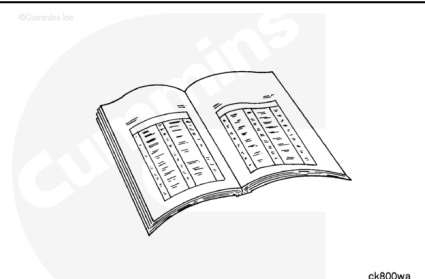

Last Modified: 21-Nov-2008
