

Trainings ▾

Remove

with Mechanically Actuated Injector


Note : The hold-down clamp can **not** be removed until the injector is removed.

Remove the injector hold-down capscrew and washer, and discard. Remove the injector and injector hold-down clamp.

Use injector puller, Part Number 3823579, or equivalent, to remove the injectors. Insert the pin of the tool in the hole provided in the body of the injector. The hole faces the front of the engine.

Note : If the injector puller is **not** available, carefully use a pry bar. Pry upward on the injector against the cylinder head.


Cover the injection bore to prevent foreign objects from entering the cylinder.

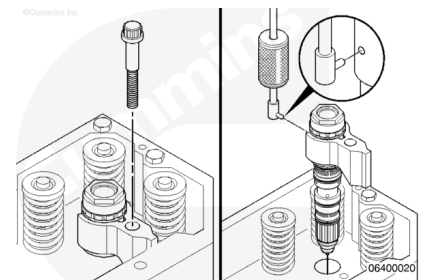

with Electronically Actuated Injector


Note : Do not reuse protective plugs. The protective plugs must be used immediately upon removal from the plastic wrapping. If they are **not** used immediately, the protective plugs must be discarded. If the protective plugs are fouled in any manner before use, the protective plugs must be discarded and a new set used.

If **not** already completed, plug the ports in each side of the injector tee-piece with the injector protective plugs before removing the injector. Make sure that the plugs are wedged firmly into place. This will prevent debris from entering and causing damage to the injector.

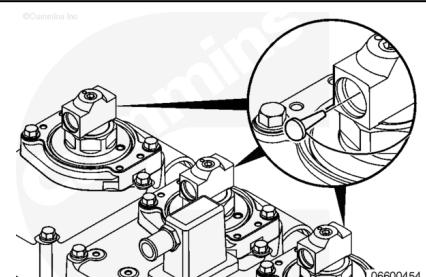

⚠ CAUTION ⚠

DO NOT reuse the injector hold down capscrew or injector combustion seal. The reuse of those components can result in engine damage.

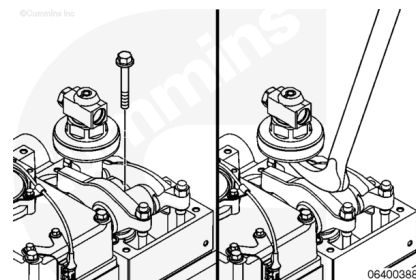

Note : On applications with high drain line head pressure, such as a fuel tank mounted higher than the engine, shut off the fuel drain line valve and evacuate the fuel drain line of fuel before removing the injector.


Remove and discard the injector hold-down capscrew.

Use a heel bar to remove the injector. Place the heel between the injector body and the exhaust rocker lever and gently pry the injector from the injector bore.


Note : On applications with high drain line head pressure, such as a fuel tank mounted higher than the engine, it is possible for fuel to leak from the drain line into the cylinder when the injector is removed. After removing the injector, check for fuel dripping into the cylinder and evacuate the fuel before continuing in the removal procedure.

Cover the injector bore in the cylinder head to prevent foreign objects from entering and causing damage to the bore and combustion chamber.


Remove and discard the seal on the end of the injector.

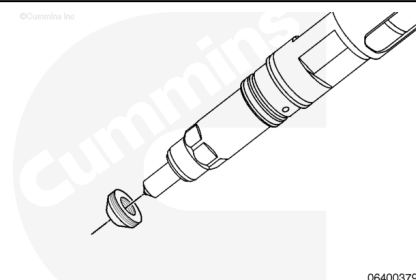

Remove and discard the two o-rings on the injector.

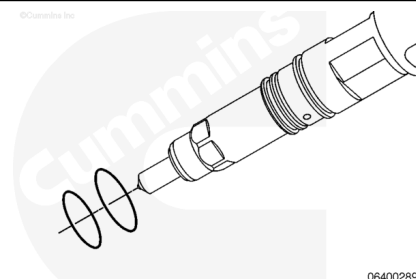

Do **not** remove the o-ring/damper at this time.

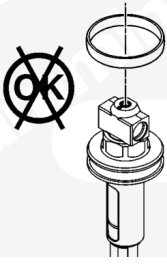

06600267

Last Modified: 12-Nov-2025
