


Trainings ▾

Remove

⚠ CAUTION ⚠

Do not damage the oil cooler elements by prying with tools that have sharp or pointed edges or corners. The sharp tools can penetrate the oil cooler element and cause a leak.

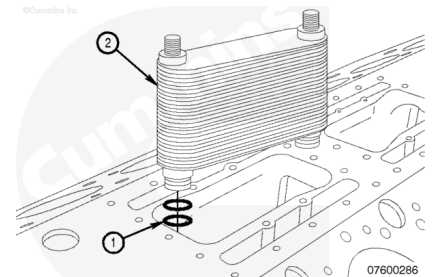

Remove the three oil cooler elements (2) on the QSK45 engine or the four oil cooler elements (2) on a QSK60 engine.

Remove and discard four o-rings (1) from each oil cooler element (2).