


Trainings ▾

Remove

Standard Tube

⚠ WARNING ⚠

Some state and federal agencies have determined that used engine oil can be carcinogenic and cause reproductive toxicity. Avoid inhalation of vapors, ingestion, and prolonged contact with used engine oil. If not reused, dispose of in accordance with local environmental regulations.

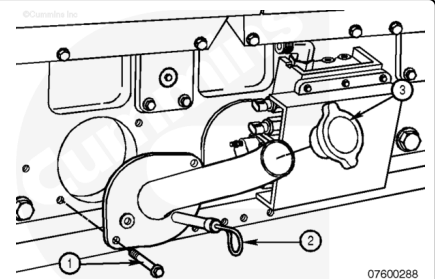

⚠ WARNING ⚠


To reduce the possibility of personal injury, avoid direct contact of hot oil with your skin.

Note : The location of the hand hole cover incorporating the dipstick tube is dependent on the application of the engine.


Remove the two capscrews (1), securing the dipstick tube (2) or the dipstick tube and oil fill tube and cap (3).

Extended Tube

Remove the capscrews and the upper dipstick tube supporting bracket (1).

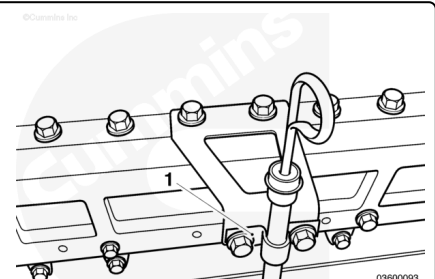


Remove the capscrew and p-clip (1) supporting the dipstick tube.

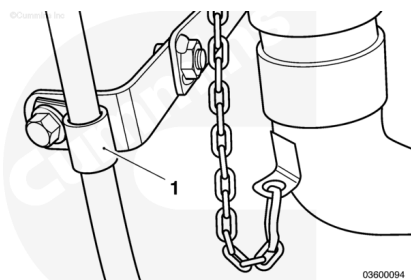

Loosen the clamps, and slide the sleeve (3) away from the hand hole cover (1).


Remove the two capscrews (2) and remove the hand hole cover (1).

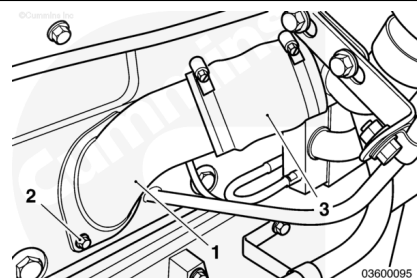

with Electronically Actuated Injector

⚠ WARNING ⚠

Some state and federal agencies have determined that used engine oil can be carcinogenic and cause reproductive toxicity. Avoid inhalation of vapors, ingestion, and prolonged contact with used engine oil. If not reused, dispose of in accordance with local environmental regulations.

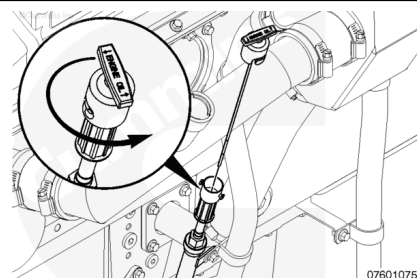


⚠ WARNING ⚠


To reduce the possibility of personal injury, avoid direct contact of hot oil with your skin.

Remove the dipstick by grasping the handle, turning **counterclockwise** then pulling straight out.


If the engine is equipped with a short dipstick tube, remove the plastic oil dipstick tube and discard the o-ring.

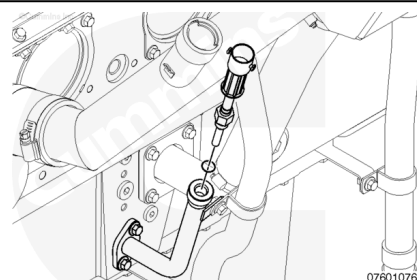


If the engine is equipped with a long dipstick tube, remove the upper two capscrews, plate and clamps.

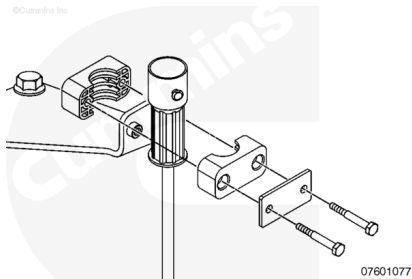

If the engine is equipped with a long dipstick tube, remove the plastic oil dipstick tube and discard the o-ring.

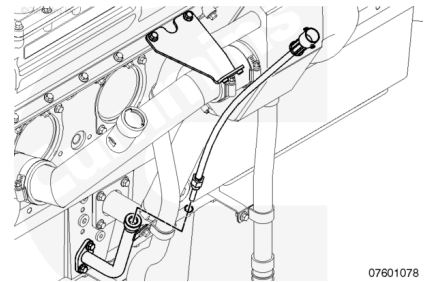

Remove the nut and bolt securing the p-clip to the metal dipstick tube tab.

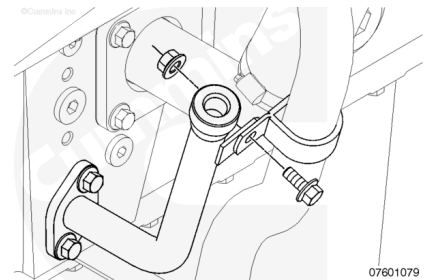

Remove the two capscrews securing the metal dipstick tube to the engine block. Remove the metal dipstick tube and discard the gasket.

