


Trainings ▾

Remove

Standard Tube

⚠ WARNING ⚠

Some state and federal agencies have determined that used engine oil can be carcinogenic and cause reproductive toxicity. Avoid inhalation of vapors, ingestion, and prolonged contact with used engine oil. If not reused, dispose of in accordance with local environmental regulations.

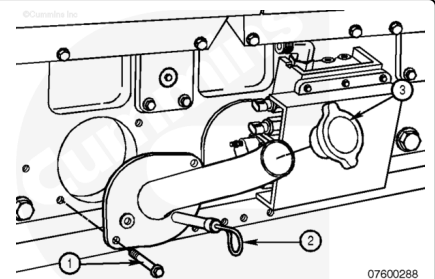

⚠ WARNING ⚠

To reduce the possibility of personal injury, avoid direct contact of hot oil with your skin.


For hand hole cover removal, Refer to Procedure 001-035 (</qs3/pubsys2/xml/en/procedures/56/56-001-035-tr.html>).

Note : The location of the hand hole cover incorporating the dipstick tube is dependent on the application of the engine.


Remove the two capscrews (1), securing the dipstick tube (2) or the dipstick tube and oil fill tube and cap (3).

Extended Tube

Remove the capscrews and the upper dipstick tube supporting bracket (1).

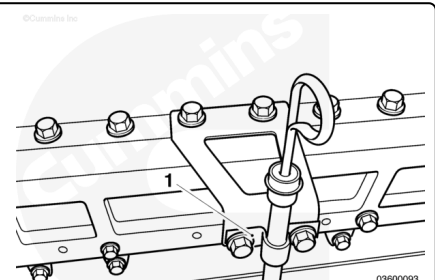


Remove the capscrew and p-clip (1) supporting the dipstick tube.

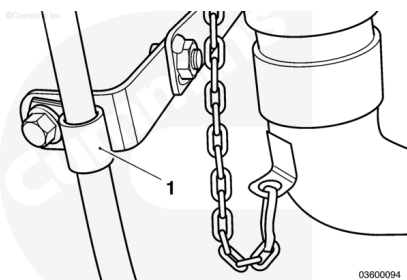

Loosen the clamps, and slide the sleeve (3) away from the hand hole cover (1).


Remove the two capscrews (2) and remove the hand hole cover (1).

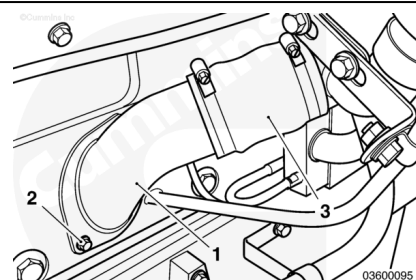

with Electronically Actuated Injector

⚠ WARNING ⚠

Some state and federal agencies have determined that used engine oil can be carcinogenic and cause reproductive toxicity. Avoid inhalation of vapors, ingestion, and prolonged contact with used engine oil. If not reused, dispose of in accordance with local environmental regulations.

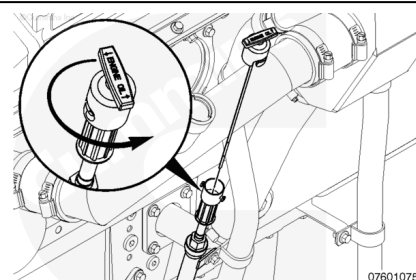


⚠ WARNING ⚠


To reduce the possibility of personal injury, avoid direct contact of hot oil with your skin.

Remove the dipstick by grasping the handle, turning **counterclockwise** then pulling straight out.


If the engine is equipped with a short dipstick tube, remove the plastic oil dipstick tube and discard the o-ring.

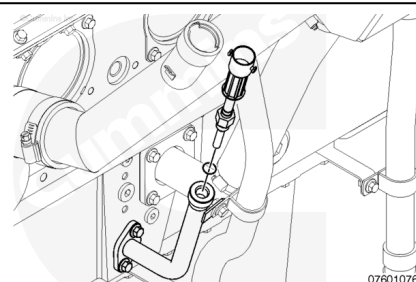


If the engine is equipped with a long dipstick tube, remove the upper two capscrews, plate and clamps.

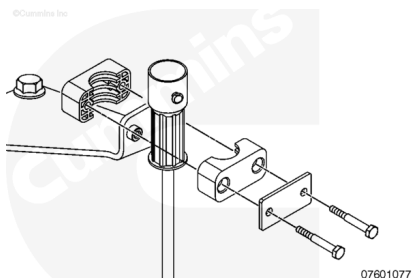


If the engine is equipped with a long dipstick tube, remove the plastic oil dipstick tube and discard the o-ring.

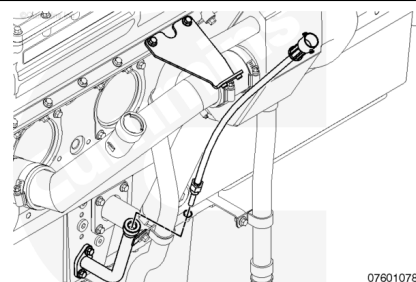

Remove the nut and bolt securing the p-clip to the metal dipstick tube tab.

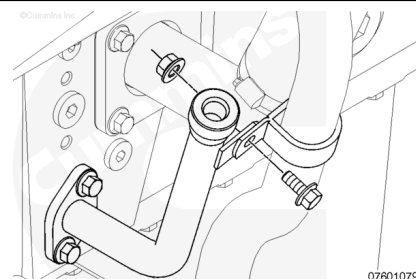

Remove the two capscrews securing the metal dipstick tube to the engine block. Remove the metal dipstick tube and discard the gasket.

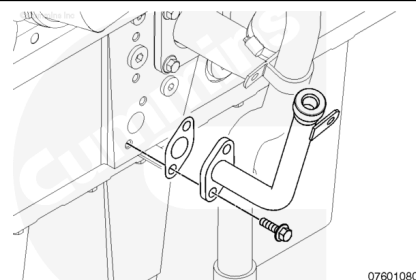

Clean and Inspect for Reuse

Standard Tube

⚠ WARNING ⚠


When using solvents, acids, or alkaline materials for cleaning, follow the manufacturer's recommendations for use. Wear goggles and protective clothing to reduce the possibility of injury.

⚠ WARNING ⚠

Wear appropriate eye and face protection when using compressed air. Flying debris and dirt can cause personal injury.

Clean the dipstick tube hand hole cover with solvent and dry it with compressed air.


Inspect the dipstick tube hand hole cover for cracks and other damage.

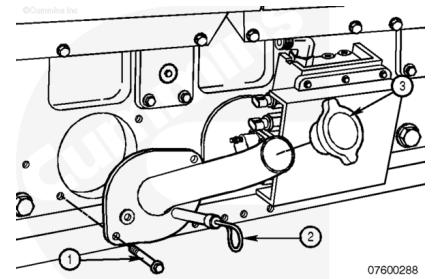

with Electronically Actuated Injector

⚠ WARNING ⚠

When using solvents, acids, or alkaline materials for cleaning, follow the manufacturer's recommendations for use. Wear goggles and protective clothing to reduce the possibility of injury.

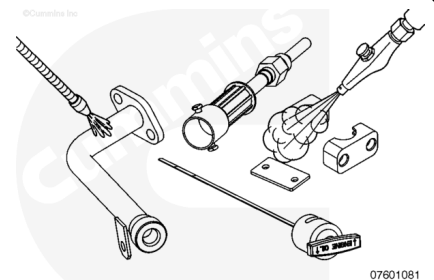

⚠ WARNING ⚠


Wear appropriate eye and face protection when using compressed air. Flying debris and dirt can cause personal injury.

Clean all parts with parts cleaner, Cummins® Part Number, 3824510 or equivalent.


Dry using compressed air.

Protect the open hole in the block to prevent cleaner from contaminating the engine lubricating oil.


Clean the mating surface of the engine block where the metal dipstick tube attaches with parts cleaner, Cummins® Part Number, 3824510 or equivalent and an abrasive hand pad Cummins® Part Number, 3824541.

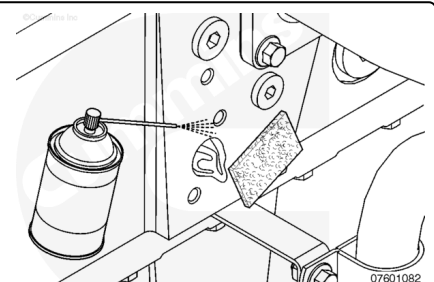


Inspect the dipstick tube for cracks, corrosion, proper and legible oil level identification markings. Replace if damaged.

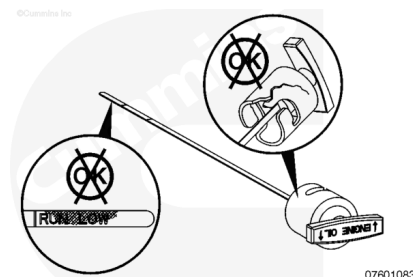

Inspect the plastic dipstick tube for cracks, stripped threads, and damage. Replace if damaged.

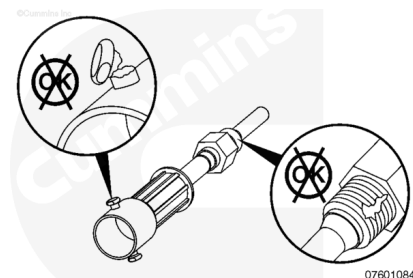

Inspect the metal dipstick tube for corrosion, stripped threads, and damage. Replace if damaged.

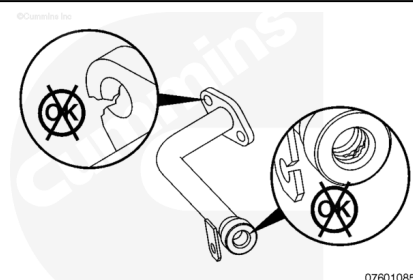

Install


Standard Tube

For hand hole cover installation Refer to Procedure 001-035 (</qs3/pubsys2/xml/en/procedures/56/56-001-035-tr.html>).

Note : The location of the hand hole cover incorporating the dipstick tube and oil filler tube can vary depending on the application of the engine.

Note : For Low NOx emissions capability products, the dipstick hand hole cover is reversed, with dipstick on the left, and filling point on the right. Ensure this is fitted, to prevent interference between the filling cap and Fuel Tubes.

Install the dipstick and dipstick tube (2), or the dipstick tube and oil filler tube assembly (3) with the two mounting capscrews (1).

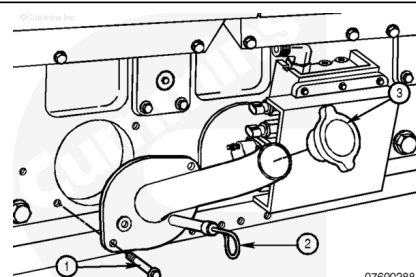

Tighten the two capscrews (1).

Torque Value: 45 n•m [33 ft-lb]

Extended Tube


Install the dipstick hand hole cover (1) and two capscrews (2).

Tighten the capscrews.

Torque Value: 45 n•m [33 ft-lb]

Slide the sleeve (3) over the filler tube and tighten the clamps.


Torque Value: 6 n•m [53 in-lb]

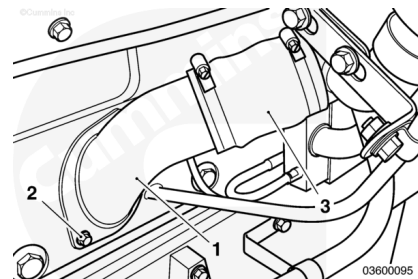

Install the p-clip (1) and capscrew supporting the dipstick tube.

Tighten the capscrew.


Torque Value: 45 n•m [33 ft-lb]

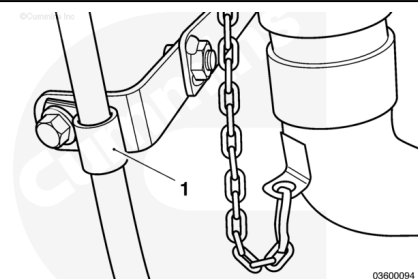

Install the upper dipstick support bracket (1) and two capscrews.

Tighten the capscrews.

Torque Value: 45 n•m [33 ft-lb]

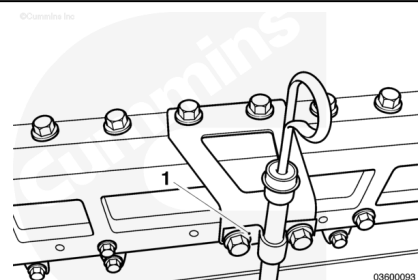


with Electronically Actuated Injector

Install the metal dipstick tube and new gasket to the engine.


Tighten the capscrews.

Torque Value: 45 n•m [35 ft-lb]

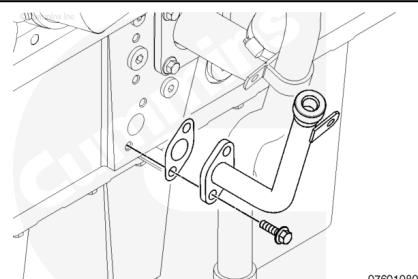


Install the dipstick tube p-clip.

Torque Value: 45 n•m [35 ft-lb]

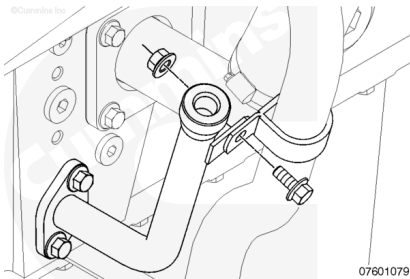


Install a new o-ring on the plastic dipstick tube and install it onto the metal dipstick tube.

Torque Value: 27 n•m [20 ft-lb]

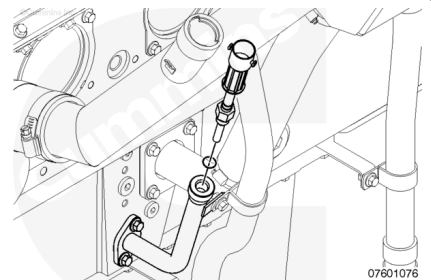

If the engine is equipped with a long dipstick tube, secure the dipstick tube to the upper bracket with clamps, plate and capscrews.

Torque Value: 7 n•m [80 in-lb]

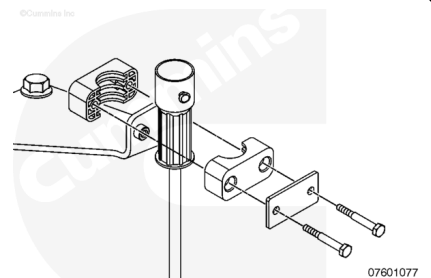

Install the dipstick by inserting, pushing down on the handle and turning it **clockwise**.

Operate the engine and check for leaks.

