


Trainings ▾

Remove

Two-Piece Filter Head, Spin-on Filter

⚠ WARNING ⚠

This component or assembly weighs greater than 23 kg [50 lb]. To prevent serious personal injury, be sure to have assistance or use appropriate lifting equipment to lift this component or assembly.

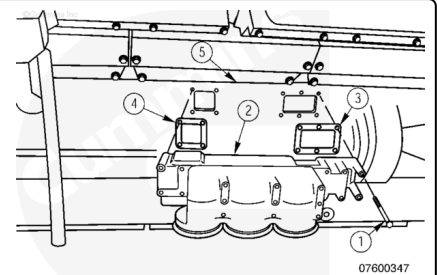

Use guide pins for removal and installation of the lubricating oil filter head.


If the engine is equipped with pre-oil filter and post-oil filter sensors, remove the sensors.

Remove the 12 capscrews (1), filter head (2), and two gaskets (3 and 4) from the engine (5).

One-Piece Filter Head, Spin-on Filter

⚠ WARNING ⚠

This component or assembly weighs greater than 23 kg [50 lb]. To prevent serious personal injury, be sure to have assistance or use appropriate lifting equipment to lift this component or assembly.

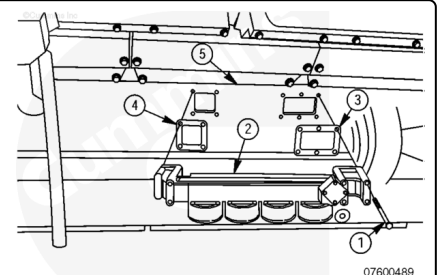

Use guide pins for removal and installation of the lubricating oil filter head.

If the engine is equipped with pre-oil filter and post-oil filter sensors, remove the sensors.

Remove the eight capscrews (1), filter head (2), and two gaskets (3 and 4) from the engine (5).

