


Trainings ▾


Inspect for Reuse

Inspect for the following defects:


- Electrical wiring that is broken
- Sending unit malfunction
- Plumbing that is loose or broken.

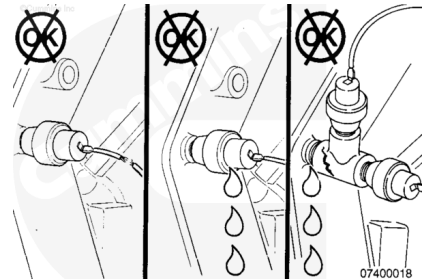

Inspect the connector to verify a good connection to the suspect gauge.

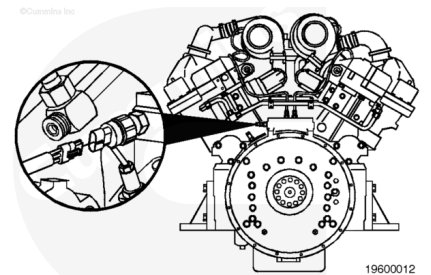


Use a reference gauge of known accuracy to verify the reading of the suspect gauge.

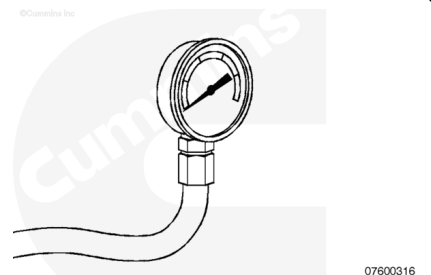

Connect the line from the master gauge at location (1).

If the line from the master gauge is **not** accessible, remove the plug on the output side of the lubricating oil filter head (2).

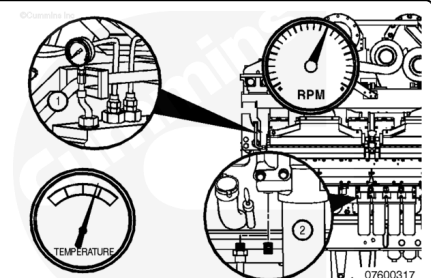

Measurements

	kpa	psi
Minimum Gauge Capacity:	830	120

Operate the engine. Compare the pressure reading of the master gauge and the suspect gauge.

The sending unit **must** be replaced if it is defective.

Last Modified: 21-Jul-2005
