


Trainings ▾

Install

S-Shape type

Note : Arrangement consists of lubricating oil pump connection (3) and block connection (1), with a steel tube (2) bridging the connections (1) and (3). Connection (1) has three mounting capscrews. Steel tube has slight bend in its section.

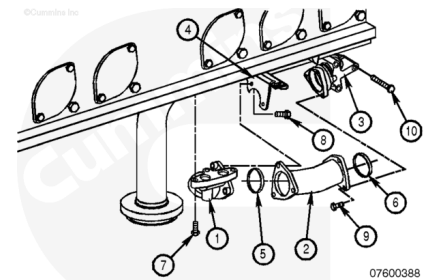

Lubricate the seals (5) and (6) with clean grease prior to installation.

Attach connector (1) to engine block with capscrews (10).

Install the lubricating oil transfer tube (2) with seal (5) with the three capscrews (9) into connector (1).

Attach connector (3) to the lubricating oil transfer tube (2) with seal (6).

Attach connector (3) with capscrews (10).

Tighten the capscrews except for the two bracket capscrews (8).

Torque Value:

M10 Capscrews

1.45 n•m [33 ft-lb]

Torque Value:

M12 Capscrews

1.80 n•m [59 ft-lb]

Loosen the capscrews that attaches bracket (4) to the cylinder block.

Note : Loosen the capscrews only enough to allow the bracket to move. The bracket must remain flat against the cylinder block.

Tighten the two capscrews (8) that fasten the bracket (4) and clamp to connector (1).

Tighten the two capscrews in the bracket to cylinder block connection.

Torque Value: 45 n•m [33 ft-lb]

Elbow type

Note : Arrangement consists of block connection (1), with a steel tube (2) which bridges from block connections (1) directly to lubricating oil pump.

Lubricate the seals (3) with clean grease prior to installation.


Install bracket (4) secure with two capscrews (11) to cylinder block.

Install oil transfer tube (2) to lubricating oil pump and secure with three off capscrews (6).

Install block connector (1) and secure with capscrews (7), (8), and (9) to cylinder block.

Install remaining capscrews (6) to transfer tube clamp (2) and block connector (1).

Install tube brace (5) and secure with capscrews (10) and nuts (12).

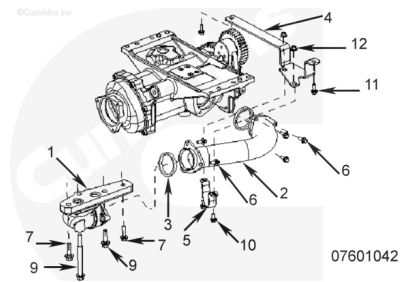

Torque Value:

M10 Capscrews

1. 45 n•m [33 ft-lb]

Torque Value:

M12 Capscrews

1. 80 n•m [59 ft-lb]

Straight type

Note : Arrangement consists of lubricating oil pump connection (2) and block connection (6), with a steel tube (4) bridging the connections (2) and (6). Connection (6) has four mounting capscrews. Steel tube is straight in section.


Lubricate seals (5) with clean grease prior to installation.

Install connector (6) with capscrews (7), (8), and (9).

Install the lubricating oil transfer tube (4) with seal (5), with three capscrews (10) into connector (6).

Install sleeve (1) into bore of lubricating oil pump.

Attach connector (2) to the lubricating oil transfer tube (4), with seal (5) and three capscrews (10).

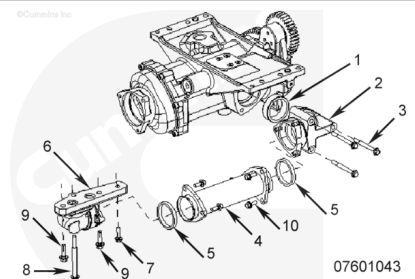

Attache connector (2) with capscrews (3).

Torque Value:

M10 Capscrews

1. 45 n•m [33 ft-lb]

Torque Value:

M12 Capscrews

1. 80 n•m [59 ft-lb]

Last Modified: 14-May-2010
