


Trainings ▾

Remove

S-Shape type

Note : Arrangement consists of lubricating oil pump connection (3) and block connection (1), with a steel tube (2) bridging the connections (1) and (3). Connection (1) has three mounting capscrews. Steel tube has slight bend in its section.

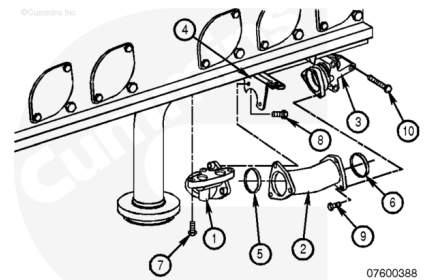

Remove the three capscrews (10) from the forward connector (3).


Remove the three capscrews (7) from the lubricating oil transfer tube to block connector (1).

Remove the two capscrews (8) from the bracket (4). Remove capscrews (9) from the lubricating oil transfer tube clamp and remove the lubricating oil transfer tube.

Remove remaining capscrews (9) from the lubricating oil transfer tube and connections.

Elbow type

Note : Arrangement consists of block connection (1), with a steel tube (2) which bridges from block connections (1) directly to lubricating oil pump.

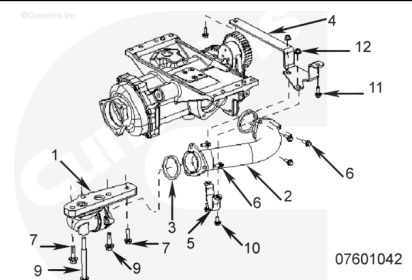

Remove the two capscrews (10) and nuts (12) from the brackets (4) and (5). Remove tube brace (5).

Remove the four capscrews (7), (8), and (9), from the block connector (1).

Remove the capscrews (6) from the lubricating oil transfer tube to lubricating oil pump.

Remove the remaining capscrews (6) from the oil transfer tube (2) and connection (1).

Remove capscrews (11) and remove bracket (4).

Straight type

Note : Arrangement consists of lubricating oil pump connection (2) and block connection (6), with a steel tube (4) bridging the connections (2) and (6). Connection (6) has four mounting capscrews. Steel tube is straight in section.

Remove the three capscrews (3) from the forward connector (2).

Remove the four capscrews (7), (8), and (9), from the block connector (6).

Remove the capscrews (10) from the lubricating oil transfer clamp tube (4) and remove the lubricating oil transfer tube.

