


Trainings ▾

Remove

The QSK45 engine has three oil cooler covers and the QSK60 single- and two-stage engines have four oil cooler covers. All covers are removed the same way. Each cover contains two threaded holes that can be used to aid in the removal of the cover. **Only** the QSK60 two-stage engine has frame support brackets welded on the two center covers.

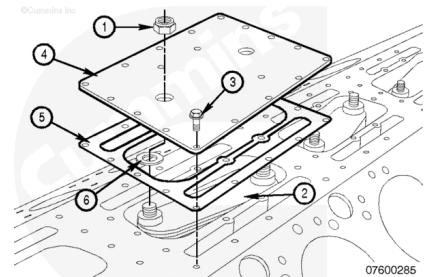

Remove two locknuts (1) from the oil cooler element mounting studs (2).

Remove all twenty capscrews (3).

Install two capscrews (3) in the threaded holes of the cover (4).

Thread the capscrews in evenly to remove the cover.

Remove the cover (4) and discard the gaskets (5 and 6).