

Trainings ▾

Preparatory Steps

QSK60 Marine Applications

⚠ WARNING ⚠


This component or assembly weighs greater than 23 kg [50 lb]. To prevent serious personal injury, be sure to have assistance or use appropriate lifting equipment to lift this component or assembly.

- Remove the exhaust manifold heat shields. Refer to Procedure 011-015 in Section 11 (</qs3/pubsys2/xml/en/procedures/56/56-011-015-tr.html>).
- Remove the aftercooler heat shields. Refer to Procedure 010-129 in Section 10 (</qs3/pubsys2/xml/en/procedures/56/56-010-129-tr.html>).

Fluorescent Dye Tracer


Add one unit of florescent tracer, Part Number 3376891, to each 38 liters [10.0 gal] of engine oil.

Idle the engine for 5 to 10 minutes or until normal operating temperature is reached to allow the dye to circulate through the lubricating system.

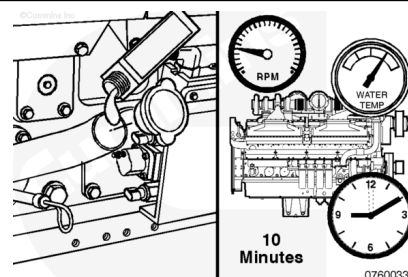

⚠ WARNING ⚠

The exhaust and exhaust components can become heated during troubleshooting. To avoid the risk of fire, property damage, burns, or other serious personal injury, allow the exhaust system to cool before beginning any procedure or repair and make sure that no combustible materials are located where they are likely to come in contact with hot exhaust or exhaust components.

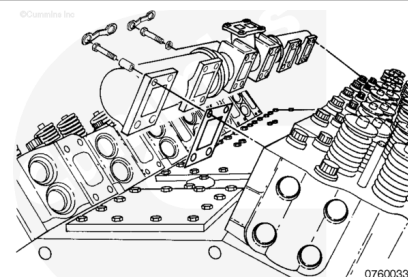

⚠ WARNING ⚠


This component or assembly weighs greater than 23 kg [50 lb]. To prevent serious personal injury, be sure to have assistance or use appropriate lifting equipment to lift this component or assembly.

⚠ CAUTION ⚠


Engine must not be run without manifold on.

- To check for single-cylinder oil consumption, remove the exhaust manifold. Refer to Procedure 011-007 in Section 11 (</qs3/pubsys2/xml/en/procedures/56/56-011-007-tr.html>).


Use a high-intensity black light. Inspect the exhaust ports. A yellow glow indicates a fuel leak. A dark blue glow indicates an oil leak.

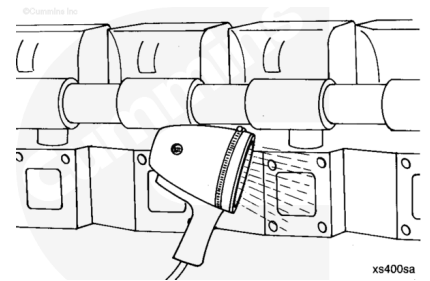

Inspect the cylinder heads. Refer to Procedure 002-004 in Section 2 (</qs3/pubsys2/xml/en/procedures/56/56-002-004-tr.html>).

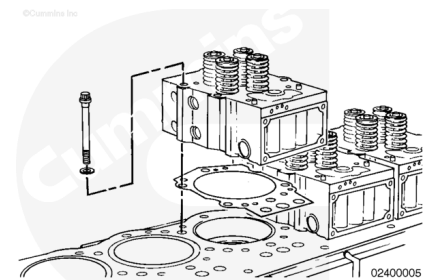

Check the pistons and rings. Refer to Procedure 001-054 in Section 1 (</qs3/pubsys2/xml/en/procedures/56/56-001-054-tr.html>).

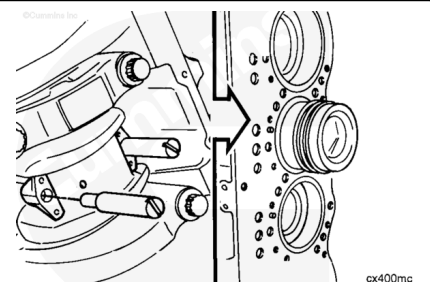


Finishing Steps

Industrial and Power Generation

⚠ WARNING ⚠

This component or assembly weighs greater than 23 kg [50 lb]. To prevent serious personal injury, be sure to have assistance or use appropriate lifting equipment to lift this component or assembly.

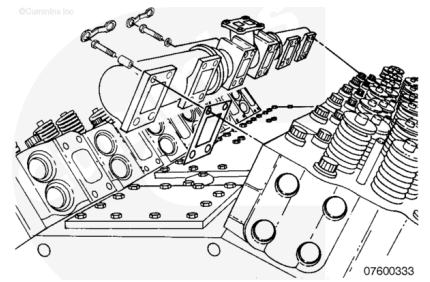

- Install the exhaust manifold. Refer to Procedure 011-007 in Section 11 (</qs3/pubsys2/xml/en/procedures/56/56-011-007-tr.html>).

QSK60 Marine Applications

⚠ WARNING ⚠

This component or assembly weighs greater than 23 kg [50 lb]. To prevent serious personal injury, be sure to have assistance or use appropriate lifting equipment to lift this component or assembly.

- Install the exhaust manifold. Refer to Procedure 011-007 in Section 11 (</qs3/pubsys2/xml/en/procedures/56/56-011-007-tr.html>).
- Install the exhaust manifold heat shields. Refer to Procedure 011-015 in Section 11 (</qs3/pubsys2/xml/en/procedures/56/56-011-015-tr.html>).
- Install the aftercooler heat shields. Refer to Procedure 010-129 in Section 10 (</qs3/pubsys2/xml/en/procedures/56/56-010-129-tr.html>).