

Trainings ▾

Install

The following explains the installation of the "High Volume" PRELUB™ pump.

Install the bracket and tighten the capscrews.

Torque Value:


M12

1. 80 n•m [59 ft-lb]

Torque Value:

M10

1. 45 n•m [33 ft-lb]

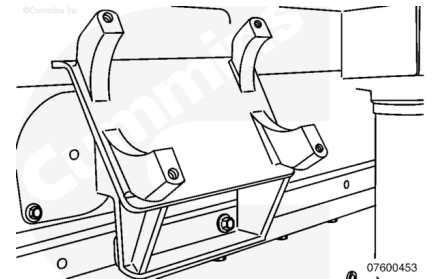

Apply Loctite™ 641 to the capscrew threads.


Place the PRELUB™ pump into the machined blocks of the bracket.

Place the two U-shaped brackets over the PRELUB™ pump.

Install the capscrews and tighten in an alternating sequence.


Torque Value: 30 n•m [22 ft-lb]

Make sure the gap is even under each side of the clamp.

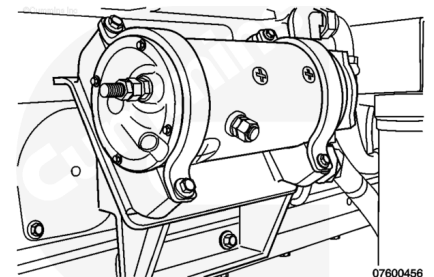

Install the elbow into the oil pan and tighten. The final position of the elbow after it has been tightened will be facing toward the rear of the engine.

Torque Value: 74 n•m [55 ft-lb]

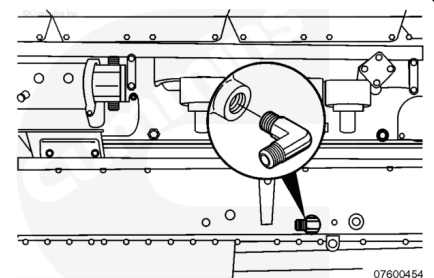

Connect the supply hose to the PRELUB™ pump.


Connect the other end of the hose to the filter head male adapter.

Tighten the fittings.

Torque Value: 163 n•m [120 ft-lb]

Attach the hose to the hose bracket and tighten the capscrew.

Torque Value: 45 n•m [33 ft-lb]

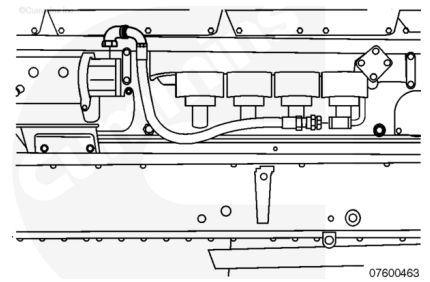

Connect the suction hose to the PRELUB™ pump.


Connect the other end of the suction hose to the elbow in the oil pan.

Tighten the fittings.


Torque Value: 190 n•m [140 ft-lb]

Attach a p-clip to the hose and secure it to an oil pan adapter capscrew.

Torque Value: 45 n•m [33 ft-lb]

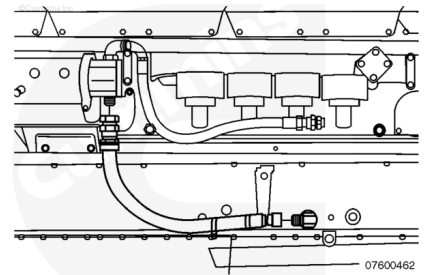

Install the post timer relay wire (1) and the ground wire (2) to the PRELUB™ pump.

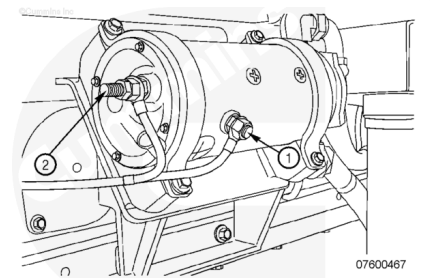

The following steps explain the installation of the "

Compact" PRELUB™ Pump Installation

- Install the bracket and tighten the capscrews.

Torque Value:


M12

1. 80 n•m [59 ft-lb]

Torque Value:


M10

1. 45 n•m [33 ft-lb]

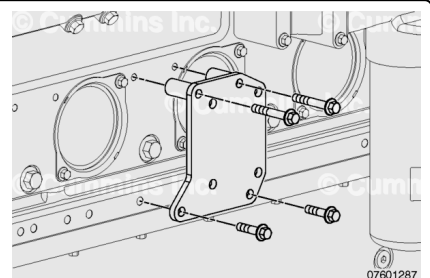

If the single piece 'loop' clamps are installed then loosely fit the lower capscrews (1) retaining the clamps to the mounting bracket. Install the pump into the clamps. Install the upper capscrews (2). Tighten the 4 retaining capscrews in an alternating sequence.

Torque Value: 45 n•m [33 ft-lb]

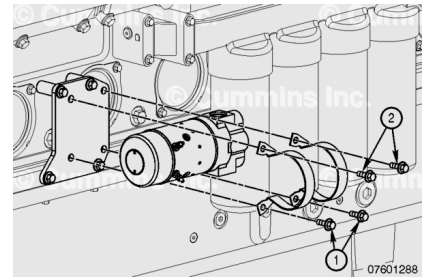

If the 2 piece 'U shaped' clamp is installed fit the clamps to the mounting bracket.

Tighten **only** the lower capscrews (1).

Torque Value: 45 n•m [33 ft-lb]

Install the pump into the clamps.


Loosely install the nuts and bolts that join the ends of the clamps (3).

Tighten the upper capscrews (2).

Torque Value: 45 n•m [33 ft-lb]


Tighten the clamping nut and bolt (3).

Torque Value: 30 n•m [22 ft-lb]

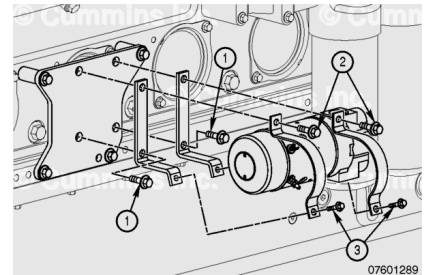

Install the elbow into the oil pan and tighten. The final position of the elbow, after it has been tightened, **must** be correct for the suction tube routing.

Torque Value: 74 n•m [55 ft-lb]

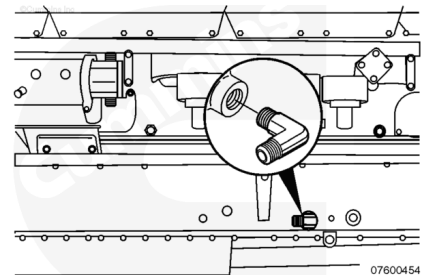


Connect the supply hose to the PRELUB™ pump.

Connect the other end of the hose to the filter head male adapter.

Tighten the fittings.

Torque Value: 163 n•m [120 ft-lb]

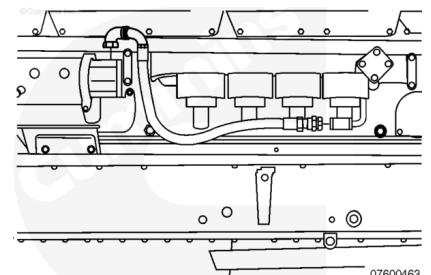


Connect the suction hose to the PRELUB™ pump.

Connect the other end of the suction hose to the elbow in the oil pan.

Tighten the fittings.

Torque Value: 190 n•m [140 ft-lb]

Replace any hose clips that were removed.

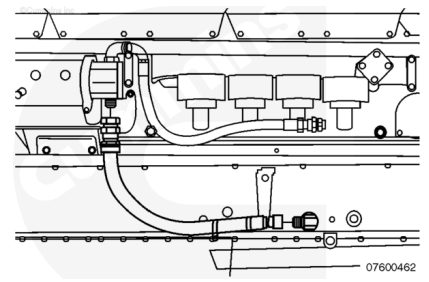

Install the positive wire (1) and the ground wire (2) to the PRELUB™ pump.

Note : Make sure of correct polarity for the connections. The pump may be orientated in the opposite direction as compared to the illustration.

