


Trainings ▾

Exploded View

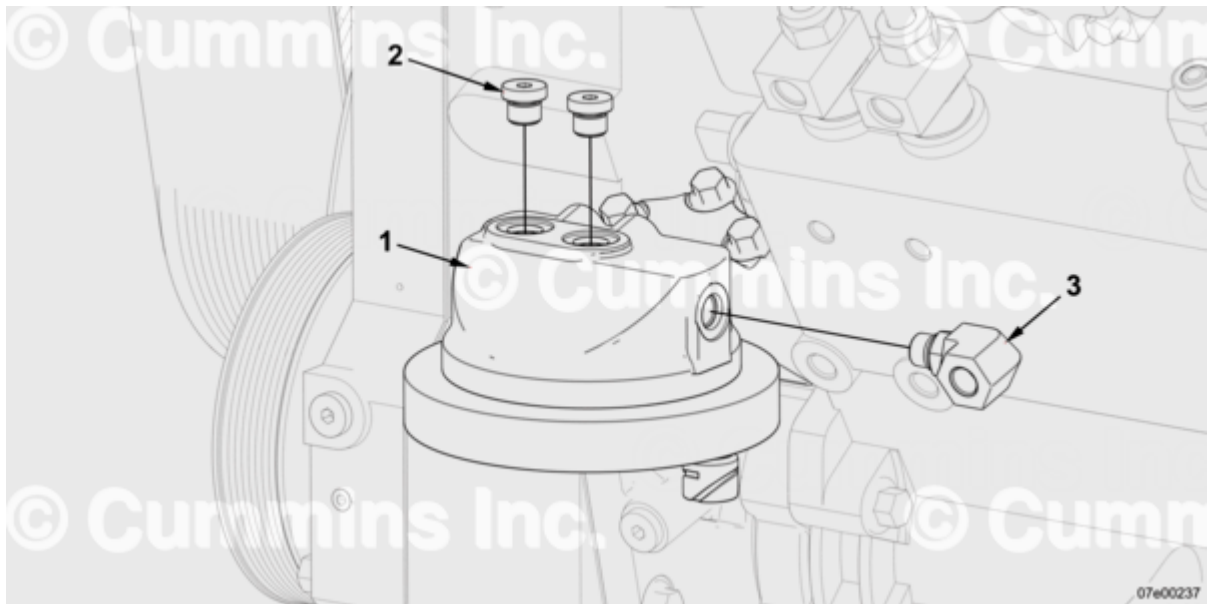

Fuel Pump Drive Lubricating Oil Filter Head Exploded View

1. Fuel pump drive lubricating oil filter head
2. Straight thread o-ring plugs
3. Male union elbow.

Select Service Tools

Recommended Cummins® Service Tools

- No Cummins® service tools required.


Additional Service Items

- No additional service items required.

General Information

The fuel pump drive lubricating oil filter head is mounted on the gear housing near the high-pressure fuel pump drive. The filter head receives oil flow from the main oil rifle through an oil supply hose.

All components handled in this procedure weigh less than 23 kg [50 lb].

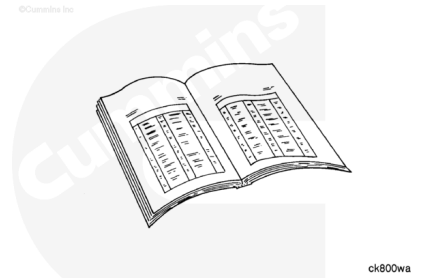

Preparatory Steps

⚠ WARNING ⚠

To reduce the possibility of personal injury, avoid direct contact of hot oil with your skin.

⚠ WARNING ⚠

Some state and federal agencies have determined that used engine oil can be carcinogenic and cause reproductive toxicity. Avoid inhalation of vapors, ingestion, and prolonged contact with used engine oil. If not reused, dispose of in accordance with local environmental regulations.

⚠ WARNING ⚠

Batteries can emit explosive gases. To reduce the possibility of personal injury, always ventilate the compartment before servicing the batteries. To reduce the possibility of arcing, remove the negative (-) battery cable first and attach the negative (-) battery cable last.


- Disconnect batteries and power supplies. See equipment manufacturer service information.
- Remove high-pressure fuel pump lubricating oil filter. Refer to Procedure 007-110 in Section 7.
(/qs3/pubsys2/xml/en/procedures/56/56-007-110-tr.html)




Remove

Note : Always cover exposed ports and fittings using protective caps from appropriate clean care kit.


Remove fitted filter can from fuel pump drive lubricating oil filter head.

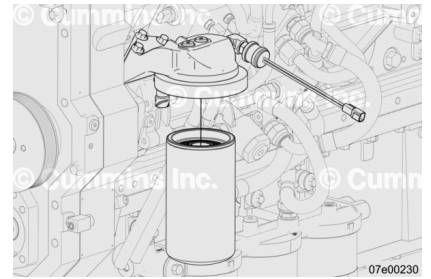


Remove the pressure switch from the elbow.

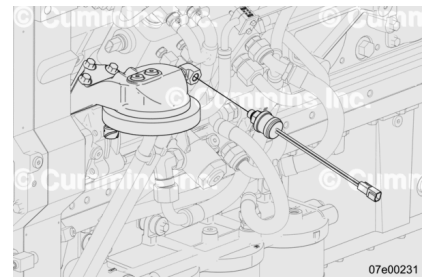


Remove three capscrews from the fuel pump drive lubricating oil filter head.

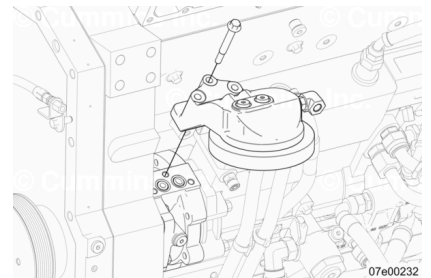


Discard the two o-rings from the recessed holes on the fuel pump drive.

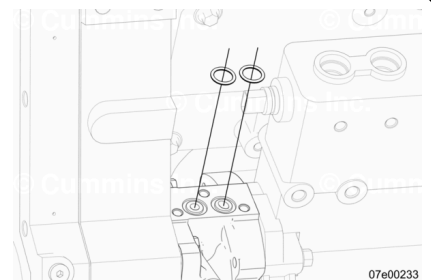

Remove the elbow from the fuel pump drive lubricating oil filter head.

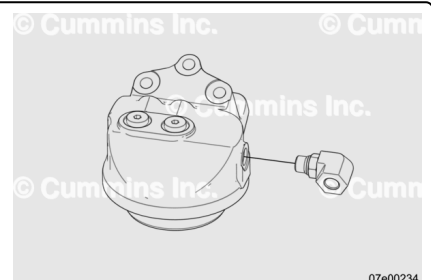


Remove the pressure sensor from the fuel pump drive lubricating oil filter head behind the can.

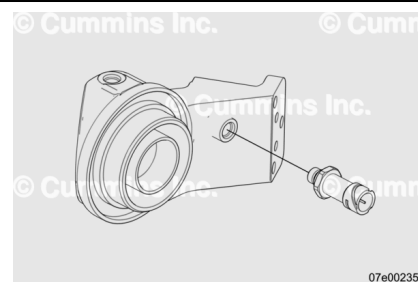

Remove the two plugs from the fuel pump drive lubricating oil filter head.


Remove the fuel pump drive lubricating oil filter head.

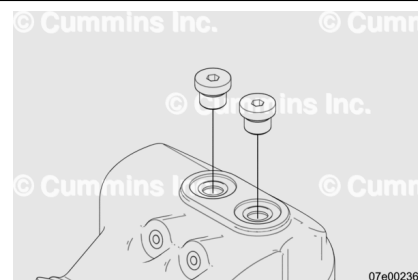

Clean and Inspect for Reuse

⚠ WARNING ⚠

When using solvents, acids, or alkaline materials for cleaning, follow the manufacturer's recommendations for use. Wear goggles and protective clothing to reduce the possibility of personal injury.

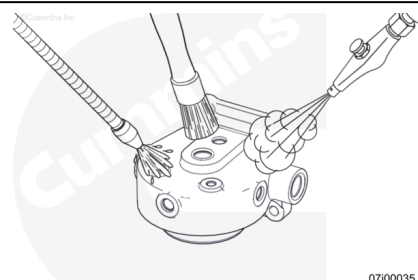

⚠ WARNING ⚠


Wear appropriate eye and face protection when using compressed air. Flying debris and dirt can cause personal injury.

Use solvent to clean the fuel pump drive lubricating oil filter head, male unions, and lubricating oil supply hoses.

Dry with compressed air.

Inspect lubricating oil filter head.


Replace filter head if cracked or damaged.

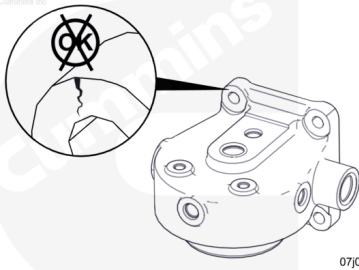

07J00036

Inspect each male union.


Replace component if corroded or damaged.

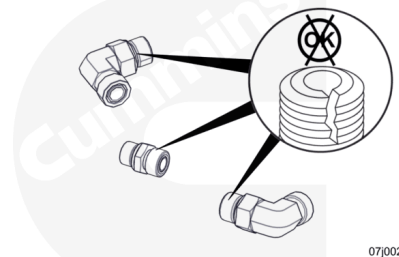

07J00276

Inspect each straight-thread o-ring plug.

Replace plug if corroded or damaged.

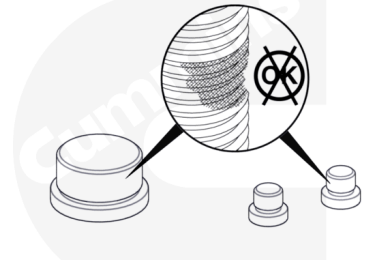


07J00151

Install

Install two plugs in the fuel pump drive lubricating oil filter head.

Torque Value: 27 n•m [20 ft-lb]

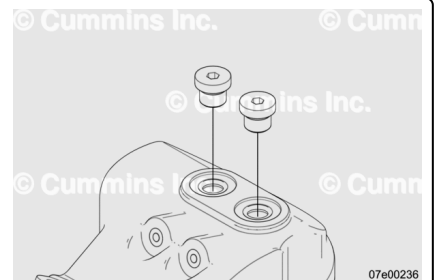


07e00236

Fit one pressure sensor into the fuel pump drive lubricating oil filter head behind the can.

Torque Value:

1.15 n•m [133 in-lb]

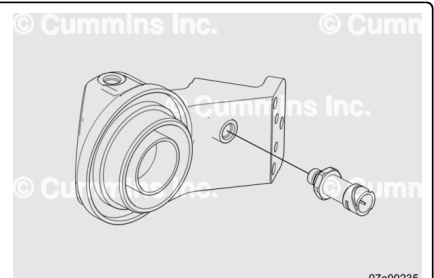


07e00235


Fit one off elbow to filter head.

Torque Value:

1. 45 n•m [33 ft-lb]

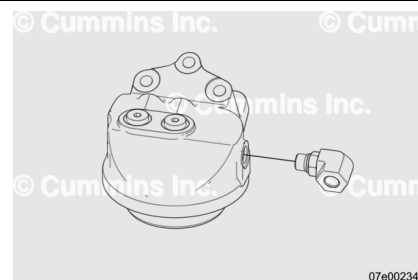


Fit two o-rings into the recessed holes on the fuel pump drive.

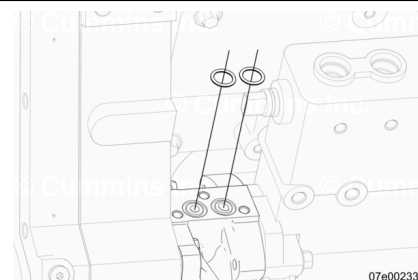


Using three capscrews, fit the fuel pump drive lubricating oil filter head to the fuel pump drive. Tighten capscrews.

Torque Value: 46 n•m [34 ft-lb]

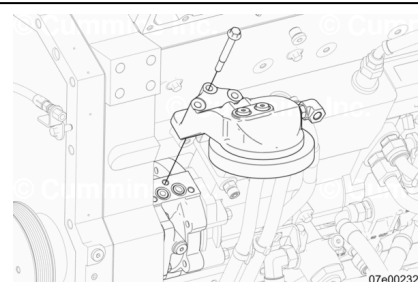

Fit the pressure switch into the elbow.


Torque Value: 15 n•m [133 in-lb]

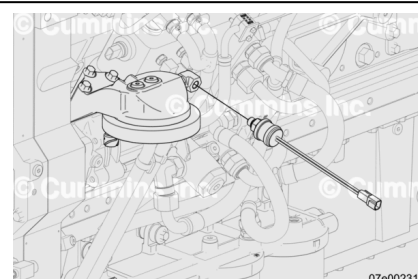

Install fuel pump drive lubricating oil filter can to fuel pump drive lubricating oil filter head.

Torque Value:


1. 45 n•m [33 ft-lb]

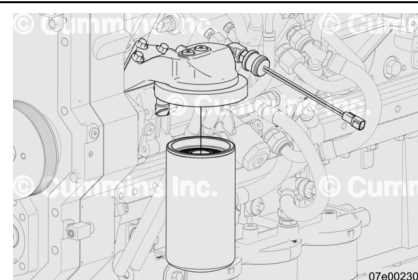

Finishing Steps

⚠ WARNING ⚠

Batteries can emit explosive gases. To reduce the possibility of personal injury, always ventilate the compartment before servicing the batteries. To reduce the possibility of arcing, remove the negative (-) battery cable first and attach the negative (-) battery cable last.

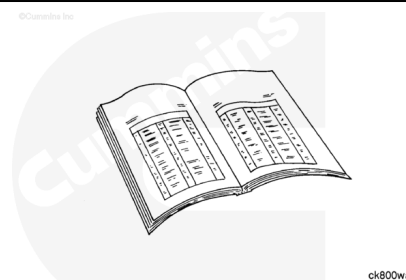

ck800wa

- Install high-pressure fuel pump lubricating oil filter. Refer to Procedure 007-110 in Section 7.
(/qs3/pubsys2/xml/en/procedures/56/56-007-110-tr.html)
- Confirm lubricating oil level in oil pan is to FULL mark.
- Connect batteries and power supplies. See equipment manufacturer service information.
- Operate engine. Check for leaks.