


Trainings ▾

Drain

⚠ WARNING ⚠

Do not remove the pressure cap from a hot engine. Wait until the coolant temperature is below 50°C [120°F] before removing the pressure cap. Heated coolant spray or steam can cause personal injury.

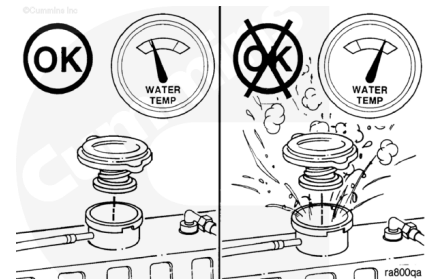

The QSK45 and QSK60 industrial engines use a two-pump/two-loop cooling system. The primary radiator provides cooling for the engine using the water pump mounted on the right-bank side of the engine. An LTA water pump is mounted on the left-bank side of the engine on the front gear cover. The LTA water pump circulates coolant through the two-pass core of the LTA radiator and back through the aftercoolers. The two center thermostats control temperature as the coolant passes through the thermostat housing.


Remove the radiator cap after the engine is cool.

Open the petcocks on each turbocharger.

Aftercooled Engines

⚠ WARNING ⚠

Coolant is toxic. Keep away from children and pets. If not reused, dispose of in accordance with local environmental regulations.

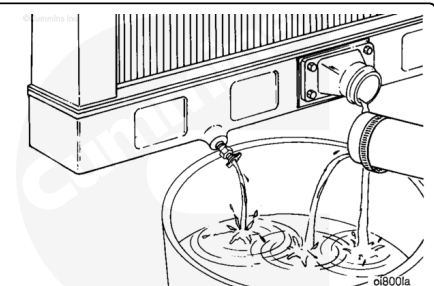

This cooling system uses the same radiator to cool the aftercoolers as is used to cool the engine. Refer to Procedure 200-003 in Section F.

(/qs3/pubsys2/xml/en/procedures/56/56-200-003.html)

Open the draincock at the bottom of the radiator.

Remove the lower radiator hose.


Drain the cooling system.

Do **not** allow the cooling system to dry out.

LTA

⚠ WARNING ⚠

Coolant is toxic. Keep away from children and pets. If not reused, dispose of in accordance with local environmental regulations.

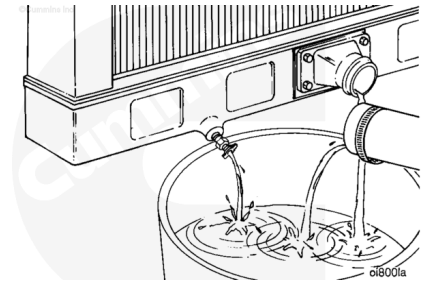

This system cools the aftercoolers, using a radiator separate from that used to cool the engine. Refer to Procedure 200-003 in Section F. (</qs3/pubsys2/xml/en/procedures/56/56-200-003.html>)

Drain the coolant.

The low-temperature aftercooling (LTA) cooling system is drained by opening the draincock in the LTA radiator or disconnecting the piping.

Do **not** allow the cooling system to dry out.