


Trainings ▾

Install

Jacket

⚠ WARNING ⚠

This component weighs 23 kg [50 lb] or more. To reduce the possibility of personal injury, use a hoist or get assistance to lift this component.

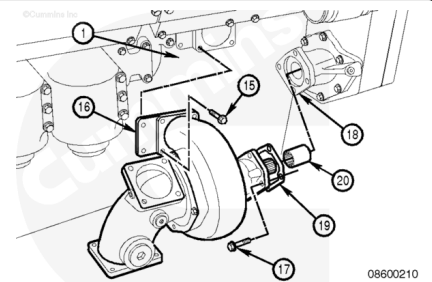

Position the collar (20) on the water pump drive assembly (18).

The collar can be installed on the water pump shaft or the water pump drive assembly shaft. It is usually easier to install on the water pump drive assembly.

Install the water pump and gasket (19) on the water pump drive assembly (18) with four capscrews (17).

Tighten the capscrews.

Torque Value: 80 n•m [59 ft-lb]

Install the water pump adapter (16) on the engine (1) with four capscrews (15).


Tighten the capscrews.

Torque Value: 45 n•m [33 ft-lb]

Install the water pump support bracket (11) on the water pump (2) and the engine (1) with two spacers (14), one screw (13), two screws (12), and two screws (10).

Tighten the capscrews.

Torque Value: 45 n•m [33 ft-lb]

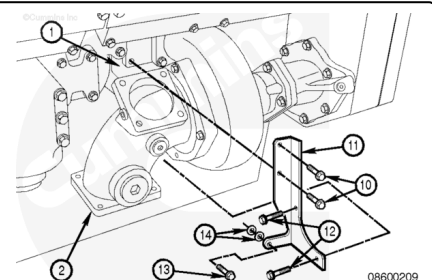

Install the inlet tube (8) and gasket (9) on the water pump inlet with four capscrews (7).

Tighten the capscrews.

Torque Value: 45 n•m [33 ft-lb]

Install the bypass tube (5) and gasket (6) on the water pump inlet with four capscrews (4).


Tighten the capscrews.

Torque Value: 45 n•m [33 ft-lb]


Install the bypass tube hose clamp (3).

Tighten the clamp.

Torque Value: 8 n•m [71 in-lb]

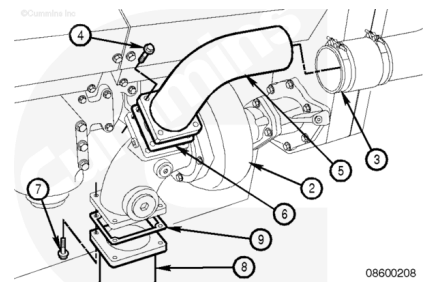

Close the draincock on the engine (1) and on the water pump (2).

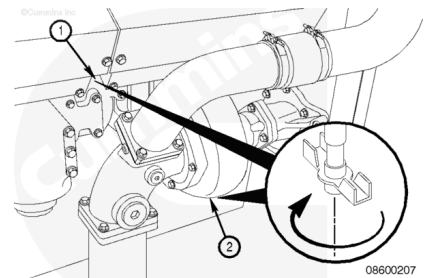

Dual Impeller

⚠ WARNING ⚠


This assembly weighs 23 kg [50 lb] or more. To reduce the possibility of personal injury, use a hoist or get assistance to lift this assembly.

Install the water pump (2) into the gear housing (3) using the six capscrews (1) and a new gasket.

Install the four capscrews (4) to the engine block (5) using a new gasket.

Tighten the capscrews.

Torque Value: 45 n•m [33 ft-lb]

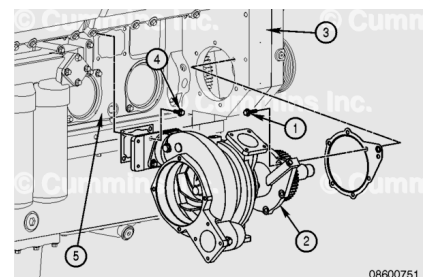


Install the capscrews (2) and the water pump support bracket (3) to the water pump (4), and the engine block (1).

Install the two capscrews (2) to the water pump (4), and the water pump support bracket (3).

Install the two capscrews (2) to the engine block (1) and the water pump support bracket (3).


Torque Value: 45 n•m [33 ft-lb]

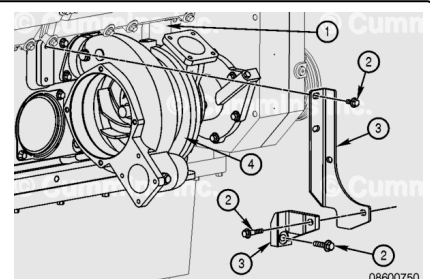

Lubricate the new o-ring on the jacket water inlet.


Install the jacket water inlet and capscrews onto the water pump.

Torque Value: 45 n•m [33 ft-lb]

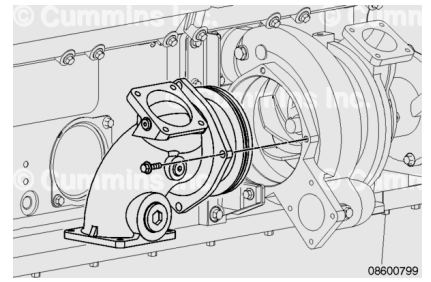

Install the jacket water radiator inlet connection, gasket, and four capscrews.

Torque Value: 45 n•m [33 ft-lb]

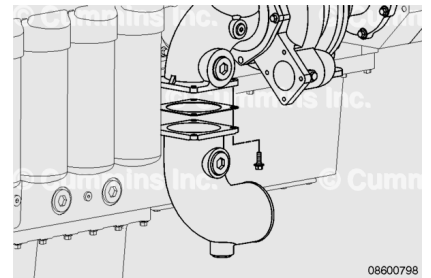


Install the bypass pipe (2).

Install the hose clamp (3) on the low temperature aftercooler bypass pipe (2).

Install the bracket/clamp (1) to the low temperature aftercooler bypass pipe (2).

Torque Value: 45 n•m [33 ft-lb]

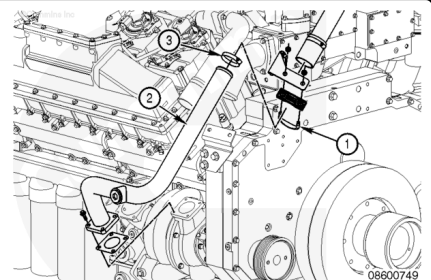


Install the jacket water bypass pipe (3), gaskets, and four capscrews (6).

Install the low temperature outlet pipe (2), gasket, and four capscrews (5).

Install the U-clamp (4) to the jacket water bypass pipe (3).

Install the hose clamps (1) to the low temperature aftercooler outlet (2) and the jacket water bypass pipe (3).


Torque Value: 45 n•m [33 ft-lb]

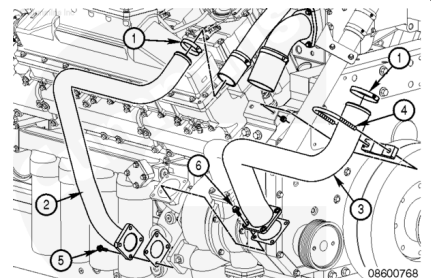


Install the bracket and U-clamps (1) to the low temperature aftercooler outlet (2) and jacket water bypass pipe (3)

Tighten the U clamps.

Torque Value: 45 n•m [33 ft-lb]

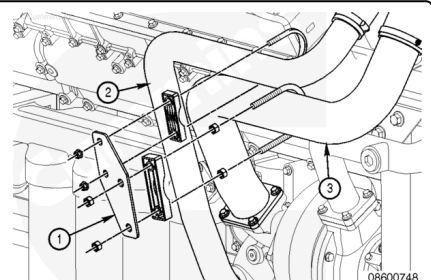

Close the draincock on the engine block (1) and on the water pump (2).

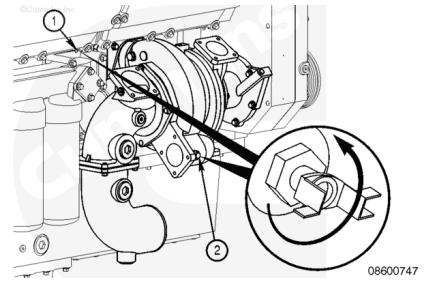

Last Modified: 30-Oct-2023
