


## Trainings ▾

### Install

#### **⚠ WARNING ⚠**

**This component or assembly weighs greater than 23 kg [50 lb]. To prevent serious personal injury, be sure to have assistance or use appropriate lifting equipment to lift this component or assembly.**

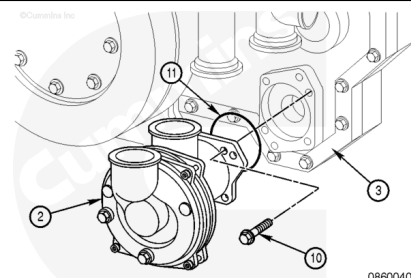

Do **not** support the weight of the pump on the shaft end.

Install the low-temperature aftercooler water pump (2), and o-ring (11), onto the engine (3) with the four capscrews (10).

Tighten the capscrews.

**Torque Value:** 80 N·m [ 59 ft-lb ]


Position the two gaskets (9) on the low-temperature aftercooler water pump and bypass pipe (8) and inlet pipe (7).

Install the two clamps (6) on the bypass (8) and inlet (7) pipes with the four capscrews (5) and nuts (4).

Tighten the nuts.

**Torque Value:** 20 N·m [ 177 in-lb ]


**Note :** Do not cause undue loading on the pump with the piping.

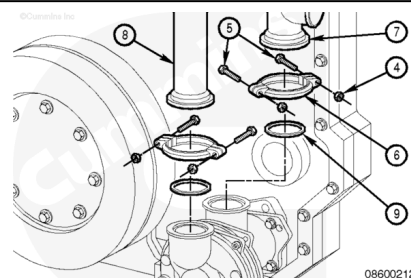

Install the banjo capscrew (1) and new sealing washers (2) to the low-temperature aftercooler water pump.

Tighten the banjo capscrew.


**Torque Value:** 37 N·m [ 27 ft-lb ]

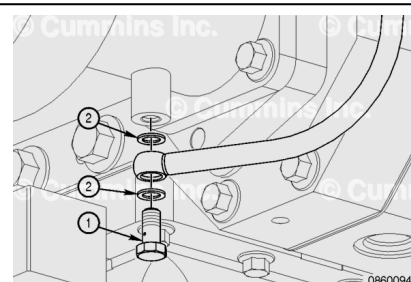

Connect the oil feed hose (2) to the elbow (1) on the front gear housing.

Tighten the hose fitting.

**Torque Value:** 16 n•m [ 142 in-lb ]

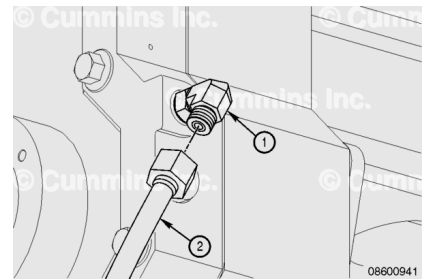

Install the capscrew that attaches the oil feed hose and P-clip (1) to the front gear housing.

Tighten the capscrew.

**Torque Value:** 80 n•m [ 59 ft-lb ]

