


Trainings ▾

Preparatory Steps

QSK60 Two Stage

⚠ WARNING ⚠

Do not remove the pressure cap from a hot engine. Wait until the coolant temperature is below 50°C [120°F] before removing the pressure cap. Heated coolant spray or steam can cause personal injury.

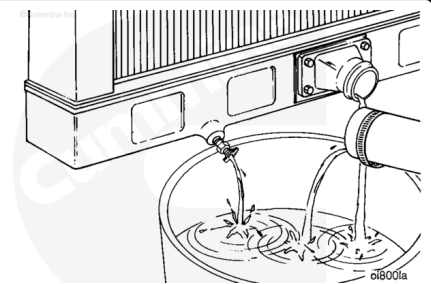


⚠ WARNING ⚠

Coolant is toxic. Keep away from children and pets. If not reused, dispose of in accordance with local environmental regulations.


Drain the cooling system. Refer to Procedure 008-018 (</qs3/pubsys2/xml/en/procedures/56/56-008-018-tr.html>).

Remove

Remove the p-clips (1), capscrews (2), and nuts (3) that mount the water transfer tubes assembly to the 2-stage frame.

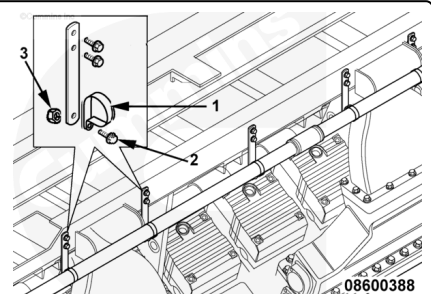


Remove the p-clip (1), capscrew (2), and spacer (3) that mount the water transfer tubes assembly to the 2-stage tube.

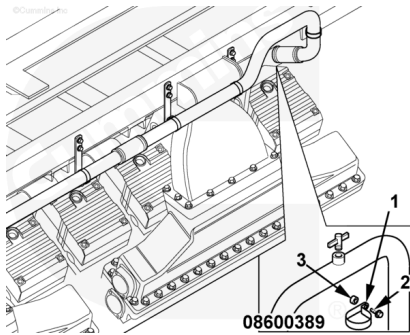

Loosen the hose clamps (1).

Remove the water transfer tubes assembly (2) from the 4-way water manifold (3) behind the thermostat housing near the number 1 cylinder.

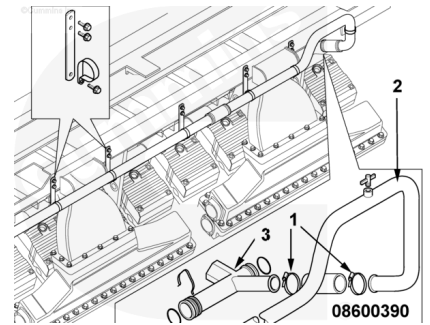


Remove the capscrew (1) and retaining clamp (2) that hold the water transfer tube (3) into the water manifold.

Remove and discard the o-ring (4).


Disconnect the water transfer tubes assembly (3) from the water manifold near to the number 8 cylinder.

Remove the complete water transfer tubes assembly from the engine.

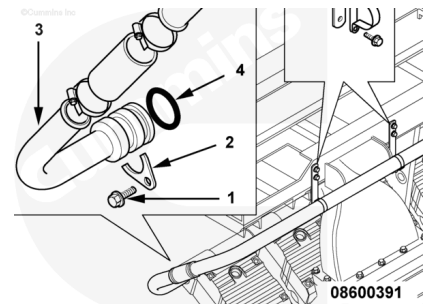


Clean and Inspect for Reuse

Flush the tubes with water to make sure the water tubes are internally clean and free of debris before refitting.

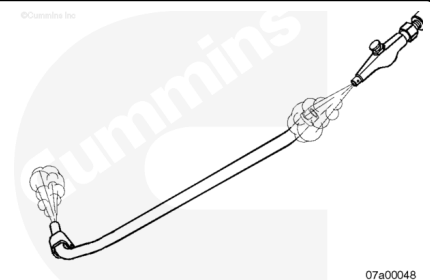

Check that the tubes are free from dents, cracks, and other damage.

The o-rings **must always** be replaced following removal of the water transfer tubes.

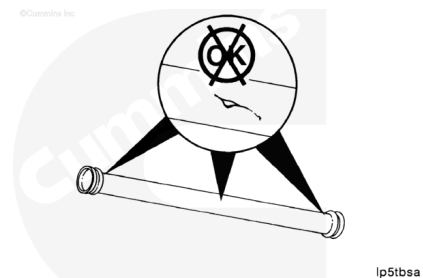


Install

Use vegetable oil to lubricate the o-ring (4). Do **not** use petroleum-based oil as this will cause swelling of the o-rings.

Install the water tube (3) into the water manifold.

Install the retaining clamp (2) and capscrew (1).


Torque Value: 45 n•m [33 ft-lb]

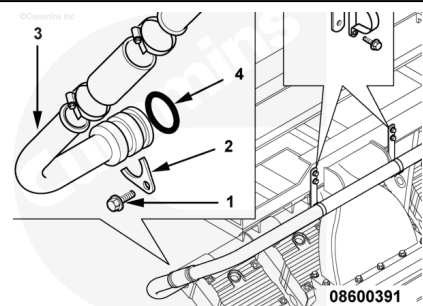

Install the water transfer tubes assembly (2) into the 4-way water manifold (3) behind the thermostat housing near the number 1 cylinder.


Tighten the hose clamps (1).

Torque Value: 5 n•m [44 in-lb]

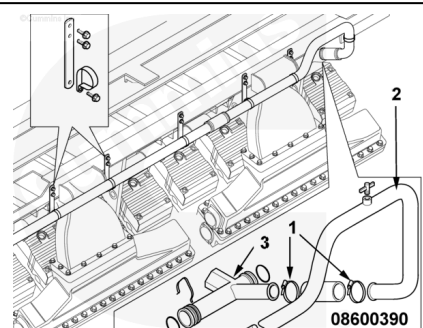


Install the p-clip (1), capscrew (2), and spacer (3) that mount the water transfer tubes assembly to the 2-stage frame.

Torque Value: 45 n•m [33 ft-lb]

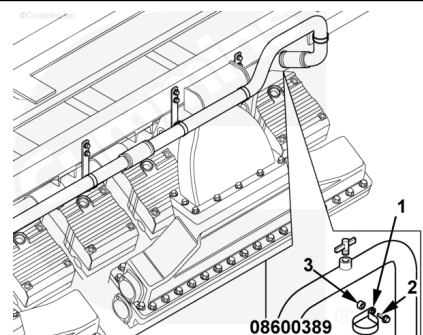

Install the p-clips (1), capscrews (2), and nuts (3) that mount the water transfer tubes assembly to the 2-stage frame.


Torque Value: 45 n•m [33 ft-lb]

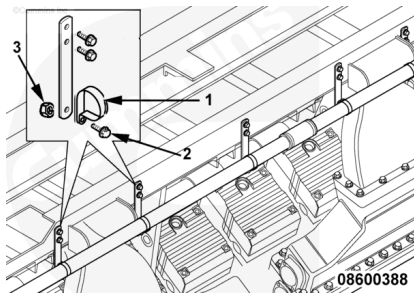

Finishing Steps

Fill the cooling system. Refer to Procedure 008-018
(</qs3/pubsys2/xml/en/procedures/56/56-008-018-tr.html>).

©Corvair Inc.

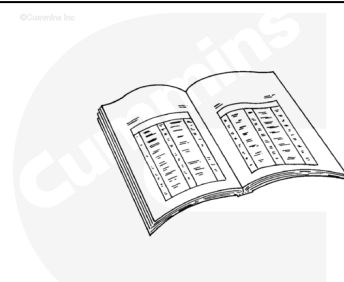

ck800wa