

Trainings ▾


Install

⚠ CAUTION ⚠

Do not lubricate the drive seal. The seal must be clean and dry or the seal will leak.

⚠ CAUTION ⚠

**Do not use a hammer to drive the pulley into position.
Damage to the thrust bearing will result.**

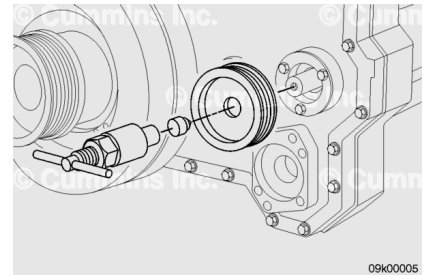

Install new oil seal. Refer to Procedure 001-003 in Section 1.
(/qs3/pubsys2/xml/en/procedures/56/56-001-003-tr.html)

Lubricate the outside of the shaft and the inside of the pulley with clean engine oil.

Insert the adapter, Part Number 3163373, into the pulley installation tool, Part Number 3376326.

Using the pulley installation tool, install the pulley on the shaft until it touches the step on the shaft.

Remove the tool and adapter.