


Trainings ▾

Preparatory Steps

⚠ WARNING ⚠

Batteries can emit explosive gases. To reduce the possibility of personal injury, always ventilate the compartment before servicing the batteries. To reduce the possibility of arcing, remove the negative (-) battery cable first and attach the negative (-) battery cable last.


- Disconnect the batteries. See equipment manufacturer service information.
- Remove the alternator belt. Refer to Procedure 013-005 in Section 13 (</qs3/pubsys2/xml/en/procedures/56/56-013-005-tr.html>).

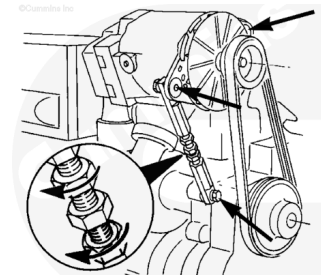

Remove


Using puller, Part Number ST-647, remove the pulley from the alternator drive pulley shaft.

Remove the puller.

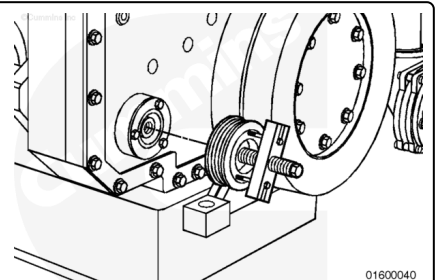


Inspect for Reuse

Inspect the pulley for nicks, cracks, excessive wear, or other damage in the belt grooves.

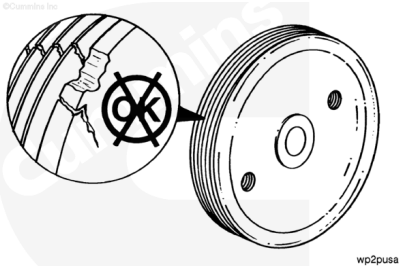


Inspect the mating surface and the bore of the pulley for damage.

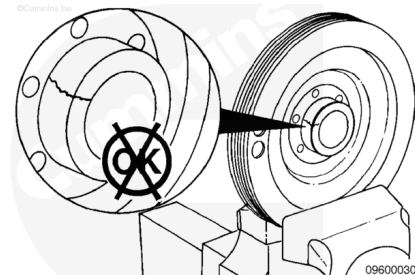

The illustration shows the rear of the pulley. Measure the inside diameter of the pulley.

Alternator Drive Pulley Inside Diameter from the Rear Face

mm		in
34.997	MIN	1.3778
35.023	MAX	1.3789

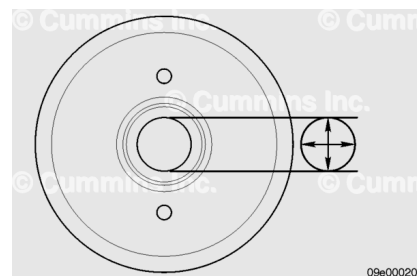

Install

⚠ CAUTION ⚠


Do not use a hammer to drive the pulley into position. The thrust washers will be damaged.

Use the pulley pusher kit, Part Number 3376085, and adapter, Part Number 5394247.

Install the correct adapter in the pusher.

Install the pulley on the shaft.


Remove the tool and adapter.

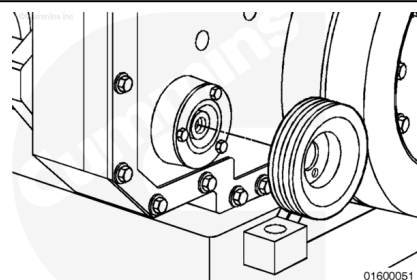

Finishing Steps

⚠ WARNING ⚠

Batteries can emit explosive gases. To reduce the possibility of personal injury, always ventilate the compartment before servicing the batteries. To reduce the possibility of arcing, remove the negative (-) battery cable first and attach the negative (-) battery cable last.

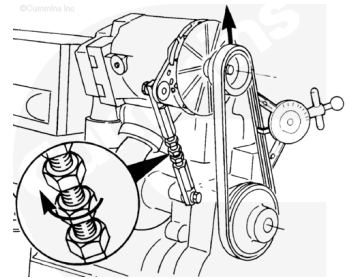

- Install and adjust the alternator belt. Refer to Procedure 013-005 in Section 13 (</qs3/pubsys2/xml/en/procedures/56/56-013-005-tr.html>).
- Connect the batteries. See equipment manufacturer service information.
- Operate the engine and check for proper operation.