

Trainings ▾

Install


Lubricate hydraulic drive bushing in the front cover with Lubriplate™ 105.

Install the new gasket.

Install the pump drive.

Align the capscrew holes.


Install and tighten the hydraulic pump drive mounting capscrews.

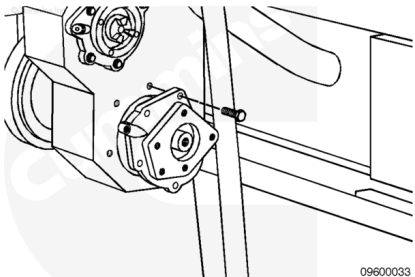

09600033

Torque Value: 45 n•m [33 ft-lb]

Measure the hydraulic pump drive end clearance after installing the drive.

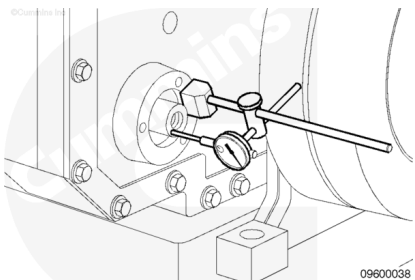


09600038

Hydraulic Pump Drive End Clearance - Installed		
mm		in
0.125	MIN	0.005
0.285	MAX	0.011

If the end clearance is **not** within specifications, the assembly **must** be inspected for correct installation.

Install a new gasket. Install the cover, if equipped.

Install the locktight capscrews or, if fitted, lock washers and the capscrews.

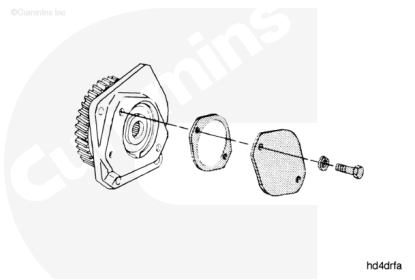

hd4drfa

Torque Value: 27 n•m [239 in-lb]

