


Trainings ▾

Disassemble

Note : Only remove the gear from the shaft when the gear or the shaft must be replaced.


Install the shaft and gear in an arbor press as shown. Use a suitable mandrel to push the shaft from the gear.

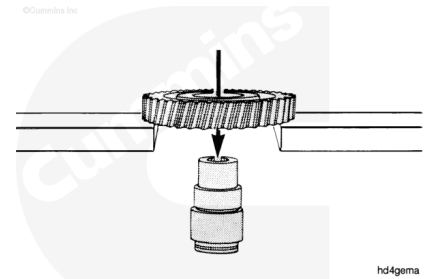

Clean and Inspect for Reuse

⚠ WARNING ⚠

When using solvents, acids or alkaline materials for cleaning, follow the manufacturers recommendations for use. Wear goggles and protective clothing to reduce the risk of personal injury.

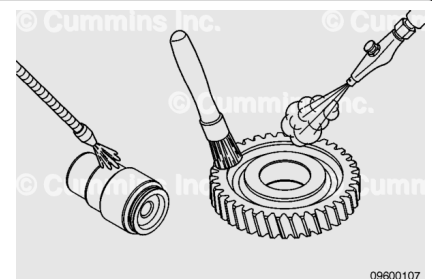

⚠ WARNING ⚠


Wear appropriate eye and face protection when using compressed air. Flying debris and dirt can cause personal injury.

Clean the shaft and gear with solvent.

Dry with compressed air.


Check the gear teeth and gear bore for damage.

Replace the gear if damaged.

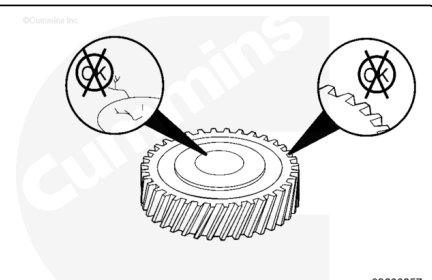


Measure the inside diameter of the gear if it is to be reused.

Hydraulic Pump Drive Gear Inside Diameter			
mm			in
44.98	MIN		1.771
45.02	MAX		1.772

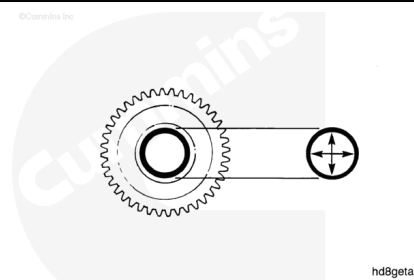


Inspect the shaft in the gear fit area for fretting, burrs, or other damage.

Clean burrs with a piece of emery cloth.

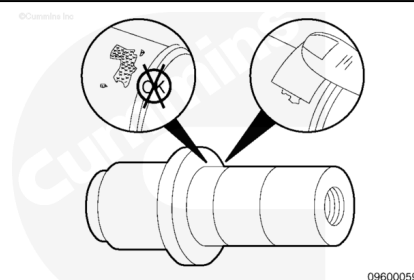

Measure the shaft diameters.

Hydraulic Pump Drive Shaft Diameters			
	mm		in
(1)	43.928	MIN	1.7294
	43.940	MAX	1.7299
(2)	45.094	MIN	1.7753
	45.106	MAX	1.7758
(3)	49.820	MIN	1.9614
	49.832	MAX	1.9619
(4)	41.994	MIN	1.6533
	42.006	MAX	1.6538

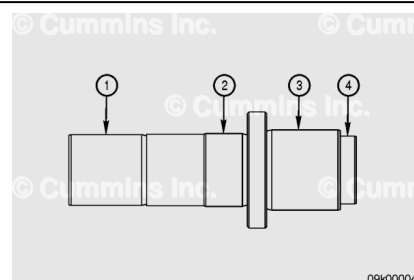

If the diameters are **not** within specification, the shaft **must** be replaced.

Assembly

Note : If replacing the gear, make sure that the replacement contains the same number of teeth.

Use Loctite™ 609, or equivalent, to apply a smooth layer on the inside diameter of the gear.

Use an arbor press to support the gear as shown with the part number facing down.

Press the shaft through the gear until the shaft shoulder touches the gear.

