


Trainings ▾

Preparatory Steps

- Remove the bolts securing the original equipment manufacturer (OEM) exhaust connection to the exhaust connection pipe. See equipment manufacturer service information.
- Repeat for the exhaust connection pipe on the other bank.

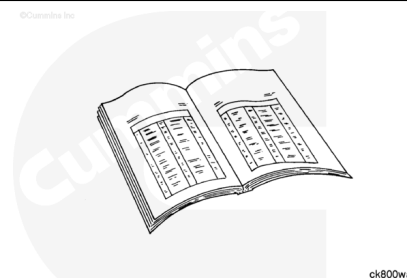


Remove

Single Stage


Note : The same procedure is used on either side of the exhaust connection pipe.

Remove the four capscrews and nuts securing the bellows to the exhaust connection pipe. Discard the gasket.

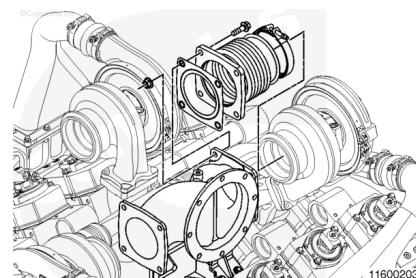

⚠ WARNING ⚠

This component or assembly weighs greater than 23 kg [50 lb]. To prevent serious personal injury, be sure to have assistance or use appropriate lifting equipment to lift this component or assembly.

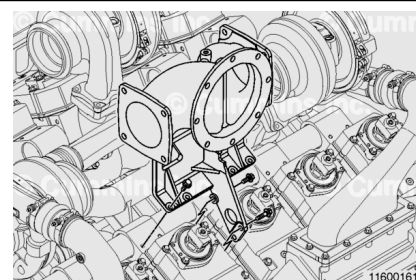

Note : The same procedure is used on either side of the exhaust connection pipe.


Remove the four capscrews securing the exhaust connection to the rocker lever housings.

Remove the capscrews securing the exhaust connection pipe to the rocker lever housings. Remove the exhaust connection pipe.

Repeat for the other side.


Two Stage

Remove the four capscrews and nuts securing the bellows to the exhaust connection pipe. Discard the gasket.

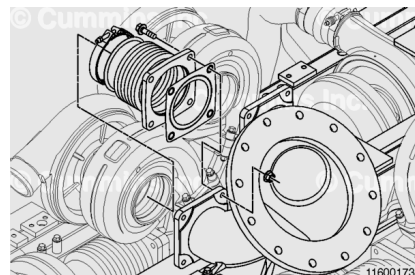

⚠ WARNING ⚠

This component or assembly weighs greater than 23 kg [50 lb]. To prevent serious personal injury, be sure to have assistance or use appropriate lifting equipment to lift this component or assembly.

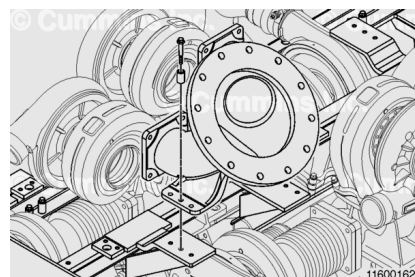


Remove the seven capscrews and spacers securing the exhaust connection pipe to the two-stage frame. Remove the exhaust connection pipe.

Clean and Inspect for Reuse

⚠ WARNING ⚠

This component or assembly weighs greater than 23 kg [50 lb]. To prevent serious personal injury, be sure to have assistance or use appropriate lifting equipment to lift this component or assembly.

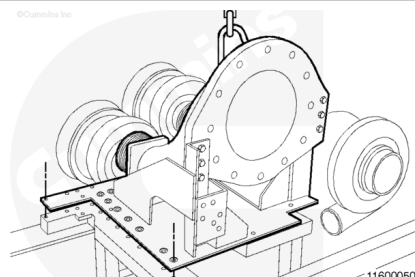

⚠ WARNING ⚠

When using solvents, acids, or alkaline materials for cleaning, follow the manufacturer's recommendations for use. Wear goggles and protective clothing to reduce the possibility of personal injury.

⚠ WARNING ⚠

When using a steam cleaner, wear safety glasses or a face shield, as well as protective clothing. Hot steam can cause personal injury.

Use solvent to clean the exhaust connection pipe.

Clean the exhaust connection pipe with a steam cleaner to remove any remaining residue.

Inspect the exhaust connection pipe for any signs of damage or deterioration.


If damage is found that will allow exhaust gas leakage, replace the exhaust connection pipe.

Install

Single Stage

⚠ WARNING ⚠

This component or assembly weighs greater than 23 kg [50 lb]. To prevent serious personal injury, be sure to have assistance or use appropriate lifting equipment to lift this component or assembly.

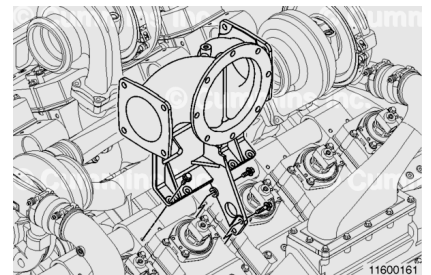

Note : The same procedure is used on either side of the exhaust connection pipe.

Install the four capscrews securing the exhaust connection to the rocker lever housings.

Torque Value:

Exhaust Connection to Rocker Lever Housing 45 n•m [33 ft-lb]

Install the three capscrews securing the exhaust connection pipe to the rocker lever housing.

Torque Value:

Exhaust Connection to Rocker Lever Housing 80 n•m [60 ft-lb]

Repeat for the other side.


Secure each bellow to the turbocharger first.

Install a new gasket and the four capscrews and nuts securing the bellows to the exhaust connection pipe. The nuts **must** be located on the exhaust outlet connection side.

Torque Value:

Exhaust Connection to Bellows 195 n•m [144 ft-lb]


Repeat for the other side.

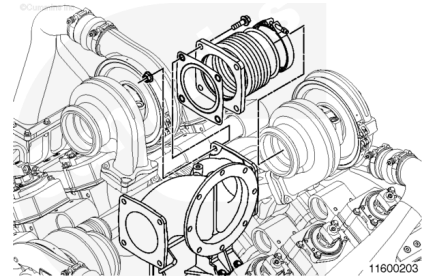

Two Stage

⚠ WARNING ⚠

This component or assembly weighs greater than 23 kg [50 lb]. To prevent serious personal injury, be sure to have assistance or use appropriate lifting equipment to lift this component or assembly.

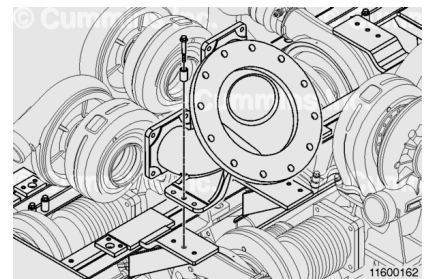

Note : The same procedure is used on either side of the exhaust connection pipe.

Install the seven capscrews and spacers securing the exhaust connection pipe to the two-stage frame.

Torque Value:

Exhaust Connection to Frame 45 n•m [33 ft-lb]

Repeat for the other side.


Secure each bellow to the turbocharger first.

Install a new gasket and the four capscrews and nuts securing the bellows to the exhaust connection pipe. The nuts **must** be located on the exhaust outlet connection side.

Torque Value:

Exhaust Connection to Bellows 195 n•m [144 ft-lb]

Repeat for the other side.

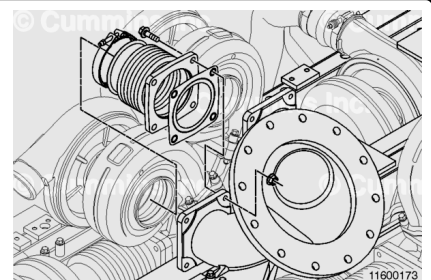

Finishing Steps

- Install the bolts securing the OEM exhaust connection to the exhaust connection pipe. See equipment

manufacturer service information.

- Repeat for the exhaust connection pipe on the other bank.

