


Trainings ▾

Remove

Industrial and Power Generation

⚠ CAUTION ⚠

The exhaust manifolds must be disassembled to remove them from the engine. Failure to disassemble the exhaust manifolds will result in exhaust manifold bellows damage.

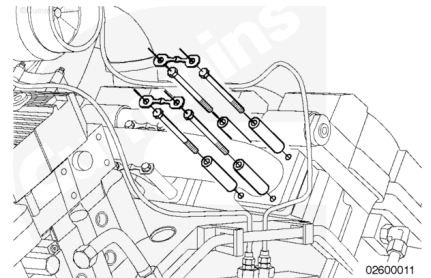

When removing the exhaust manifolds, remove one section of the exhaust manifold at a time, beginning from either end of the manifold. Note the location and orientation of each section during removal.

Remove the exhaust manifold mounting capscrew lock tabs.
Discard the lock tabs.


Remove the exhaust manifold mounting capscrews and spacers.

Note the direction of the bellows. They **must** be installed correctly for proper engine performance. If a directional arrow is **not** visible, mark the bellows. The open end of the sleeve inside the bellows **always** points in the direction of exhaust flow (toward the turbine inlet).

Remove the V-band clamp from either end of the bellows.


Remove the end section of the exhaust manifold.

Discard the manifold gaskets.

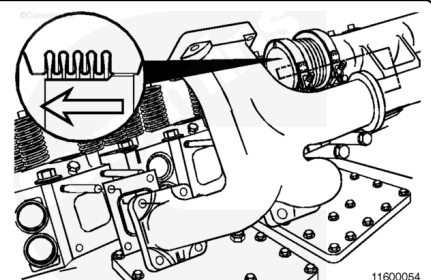

⚠ CAUTION ⚠

Never attempt to compress the exhaust manifold bellows. Bellows compression can result in damage to the bellows and an exhaust leak.

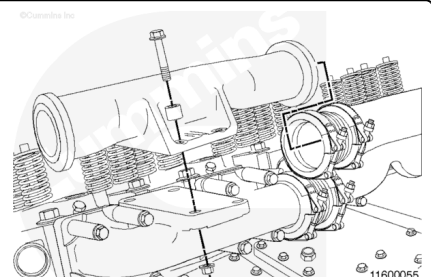

Note : It is not always necessary to remove all exhaust manifold sections and bellows. Remove only those components required.


Remove the V-band clamp and the bellows section from the next section of the exhaust manifold.

Repeat the steps above until the required sections of the exhaust manifold and bellows have been removed.

QSK60 Marine Applications

⚠ CAUTION ⚠

The exhaust manifolds must be disassembled to remove them from the engine. Failure to disassemble the exhaust manifolds will result in exhaust manifold bellows damage.

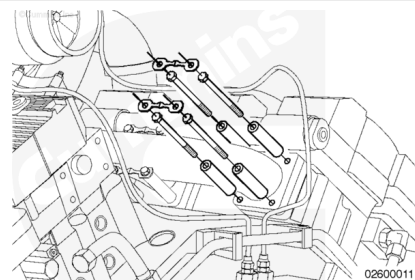


When removing the exhaust manifolds, remove one section of the exhaust manifold at a time, beginning from either end of the manifold. Note the location and orientation of each section during removal.

Remove the exhaust manifold mounting capscrew lock tabs.
Discard the lock tabs.

Remove the exhaust manifold mounting capscrews and spacers.

Note the direction of the bellows. They **must** be installed correctly for proper engine performance. If a directional arrow is **not** visible, mark the bellows. The open end of the sleeve inside the bellows **always** points in the direction of exhaust flow (toward the turbine inlet).

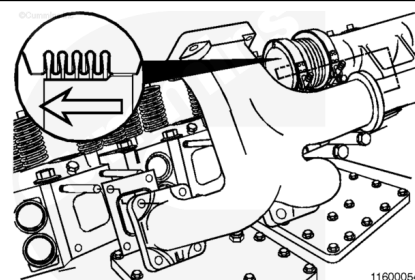

Remove the V-band clamp from either end of the bellows.

Remove the end section of the exhaust manifold.

Remove the exhaust manifold bellows gaskets located on either side of the bellows.

Discard the manifold gaskets.

⚠ CAUTION ⚠

Never attempt to compress the exhaust manifold bellows. Bellows compression can result in damage to the bellows and an exhaust leak.

Note : It is **not always** necessary to remove all exhaust manifold sections and bellows. Remove **only those components required**.

Remove the V-band clamp and the bellows section from the next section of the exhaust manifold.

Remove the exhaust manifold bellows gaskets located on either side of the bellows.

Repeat the steps above until the required sections of the exhaust manifold and bellows have been removed.

