


Trainings ▾

Remove

⚠ WARNING ⚠

Batteries can emit explosive gases. To reduce the possibility of personal injury, always ventilate the compartment before servicing the batteries. To reduce the possibility of arcing, remove the negative (-) battery cable first and attach the negative (-) battery cable last.

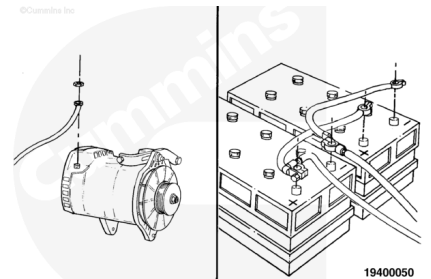

Disconnect the batteries.


Disconnect the wiring from the alternator.

Loosen the adjusting link and the alternator mounting capscrews.

The lower jam nut has left-hand threads.

Loosen both of the jam nuts. Turn the adjusting screw to relieve the belt tension.

Remove the alternator belt.

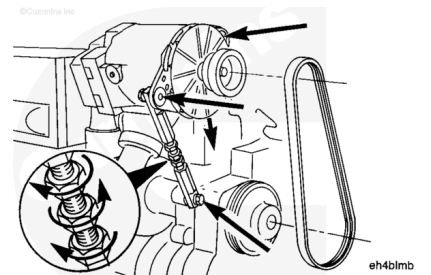

The three capscrews are SAE Grade 8 and the three spacers are hardened. Keep the parts together to aid the assembly procedure.

Remove the parts as shown.

