

Trainings ▾


General Information

The engine lifting brackets are located on the cylinder block between the cylinder heads.

They are mounted with a spacer under the lifting bracket and secured with two capscrews.

On the QSK45 they are located on the right bank, between cylinders R-1, R-2 and R-5, R-6 on on the left bank, between cylinders L-21, L-2 and L-5 and L-6.


On the QSK60 they are located on the right bank, between cylinders R-2, R-3 and R-7, R-8. On the left bank they are located between cylinders L-1, L-2 and L-6, L-7.

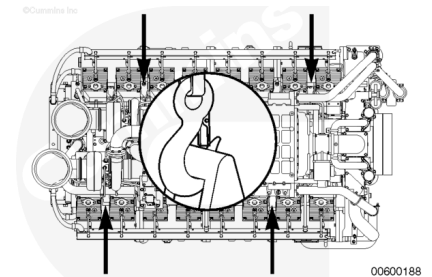

Remove

Remove the capscrews, lifting bracket and spacer.

Discard the capscrews.

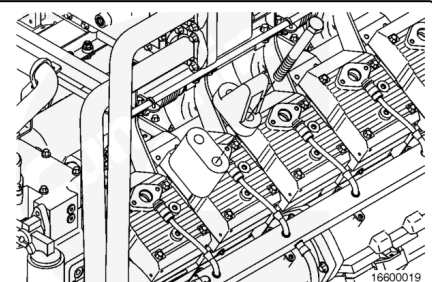

Clean and Inspect for Reuse

⚠ WARNING ⚠


When using solvents, acids, or alkaline materials for cleaning, follow the manufacturer's recommendations for use. Wear goggles and protective to reduce the possibility of personal injury.

⚠ WARNING ⚠

Wear appropriate eye and face protection when using compressed air. Flying debris and dirt can cause personal injury.

Clean the lifting brackets and spacers with solvent.


Check the lifting brackets and spacers for cracks.

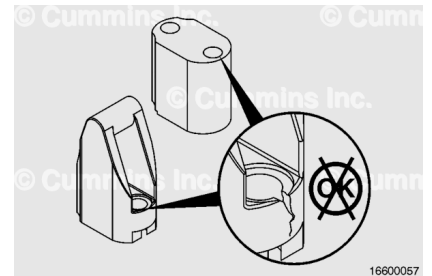

Install

Insert two new capscrews through the lifting bracket and spacer.

Note : The cut outs in the spacer (1) and lifting bracket (2) must line up.

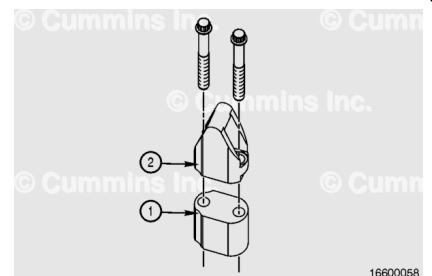

Install the lifting bracket assembly to the engine in the relevant position.

Torque Value: 280 n•m [207 ft-lb]

Note : The cut outs must face inward, toward the center of the engine.

