


Trainings ▾

Install

⚠ WARNING ⚠

This component or assembly weighs greater than 23 kg [50 lb]. To prevent serious personal injury, be sure to have assistance or use appropriate lifting equipment to lift this component or assembly.

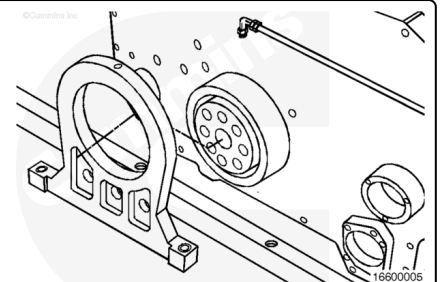

Lubricate the inside diameter of the front support and the outside diameter of the front gear cover wear ring with industrial grease.

Note : Make sure the offset on the mounting pads is facing away from the front of the engine.

Install the front engine support over the wear ring.


Lower the engine until the front engine support is in position.

Install and tighten the mounting capscrews.

Connect the lubrication tube from the top of the support bracket.

See equipment manufacturer service information for torque specifications.


Remove engine lifting fixture.

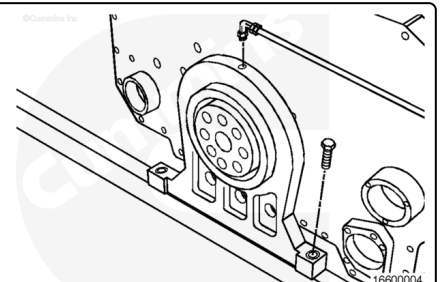

Use high performance, industrial-type grease (NLGI Grade Number 2) fortified with extreme pressure (EP) additives, such as BP Energrease™ FPG or Castrol Spheerol™ EPL 2 grease, or its equivalent.

If the above greases are **not** available locally, contact a Cummins® Distributor for advice on other Cummins® approved equivalents.

Lubricate the support until grease appears on the outside of the support.

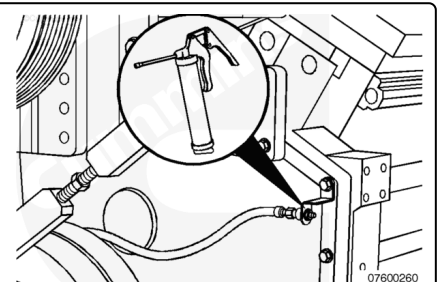

Last Modified: 11-Mar-2026
