


Trainings ▾

Remove

⚠ WARNING ⚠

This component or assembly weighs greater than 23 kg [50 lb]. To prevent serious personal injury, be sure to have assistance or use appropriate lifting equipment to lift this component or assembly.

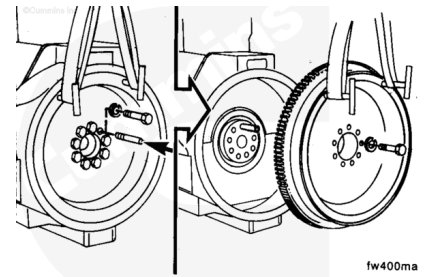

Note : For the QSK45 excavator applications that use the 12-point head capscrews, remove and discard the flywheel, capscrews, and spacer at end of every life rebuild.

Remove two capscrews and install two guide studs.

Install two T-handles.

Install the lifting straps.

Remove the remaining capscrews.

A mallet can be used to tap the flywheel, if necessary.

Remove the flywheel.

Remove and discard the roll pin in the rear face of the crankshaft.