


Trainings ▾

Remove

⚠ WARNING ⚠

Inspect the engine lifting brackets for damage or cracks. Do not attempt to lift the engine if any cracks or damage is visible. Using damaged lifting equipment can cause serious personal injury and or property damage.

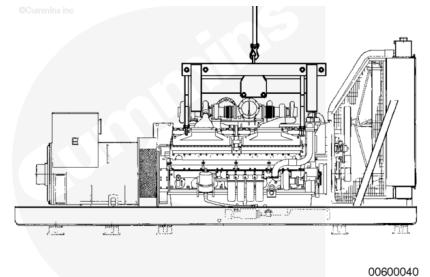

⚠ WARNING ⚠


The QSK45 and QSK60 series engines can weigh as much as 9980 kg [22,000 lb]. Use a properly rated hoist and lifting fixture, Part Number 3163264, to lift the engine. Rigging and lifting must be done by trained, experienced personnel.

Install the engine lifting fixture.

Remove the capscrews from the engine mounts.


Use the engine lifting fixture to lift the engine up until the engine mounts are free from the frame.

Remove the adapter cover plate or oil sump, whichever is in the front position.

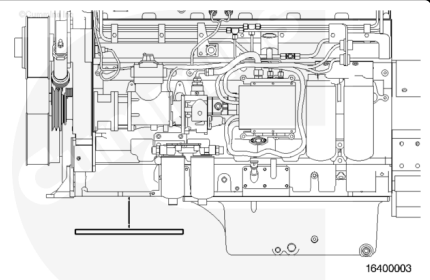

⚠ CAUTION ⚠


Put a wooden block the width of the oil pan adapter between the jack stands and the oil pan adapter to prevent damage to the engine. Use a minimum of four jack stands to support the engine.

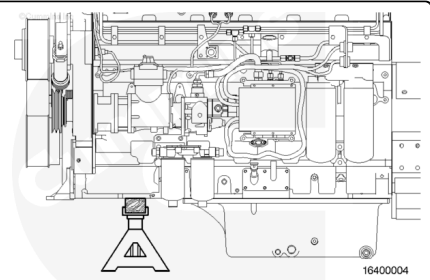

Each jack stand **must** be rated at a minimum of 2,722 kg [6,000 lbs].


Use the engine lifting fixture to lift the engine and support the front and rear on both sides of the engine with jack stands and wooden blocks.

Remove the rear engine mounts from the flywheel housing.

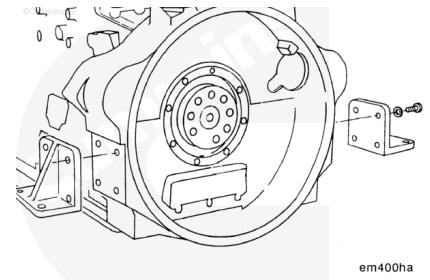

⚠ WARNING ⚠

This component or assembly weighs greater than 23 kg [50 lb]. To prevent serious personal injury, be sure to have assistance or use appropriate lifting equipment to lift this component or assembly.

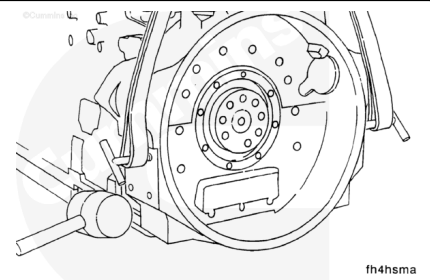

Remove two capscrews and install the guide studs.

Use a hoist, T-handles, and a lifting sling to remove the flywheel housing.

Install the lifting sling, and adjust the hoist until there is tension in the lifting sling.


Remove the remaining flywheel housing mounting capscrews.

Use a mallet to tap the flywheel housing off the two locating dowel pins.

Note the gasket orientation. Engine damage can occur if the gasket is **not** properly installed when installing the flywheel housing.


Remove the gasket.

Remove the two capscrews securing the gasket in place to the engine block. Remove the gasket.

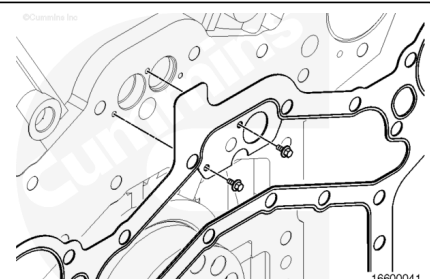

⚠ WARNING ⚠

Wear appropriate eye and face protection when performing this procedure. Springs are under tension and can act as a projectile if released, causing personal injury.

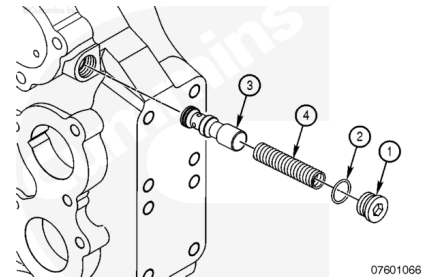

Remove the pressure regulator from the flywheel housing.

Remove the plug (1), springs (4), and plunger (3) from the flywheel housing. Remove and discard the o-ring (2) from the plug.