


Trainings ▾


Remove

Remove the pipe plug.

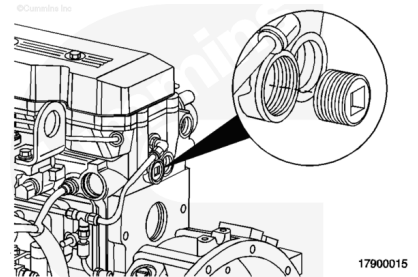

Clean and Inspect for Reuse

Use spray cleaner, Part Number 3375433, or equivalent to clean the threads of the pipe plugs and threaded bores.

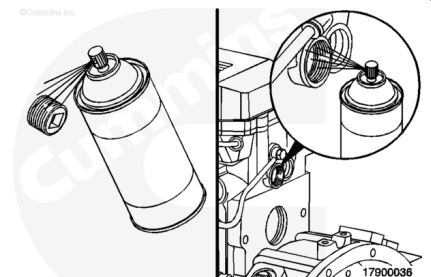


Inspect the threads of the pipe plug for damage.

Replace the pipe plug if damaged.

Inspect the threaded bore for damage.


Repair the threaded bore if damaged.

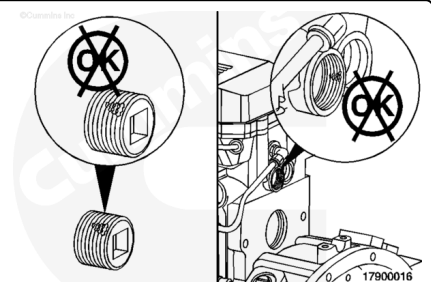

Install

Apply a film of pipe plug sealant, Part Number 3375066, or equivalent to the pipe plug threads.

Install the pipe plug.

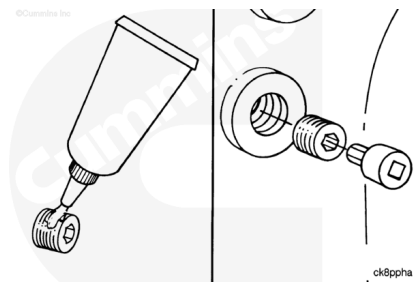

Tighten the pipe plug.

Refer to the chart in the graphic for torque values.

©Cummins Inc.

Pipe Plug Torque Values					
Size			Torque		Torque
Thread	Actual Thread O.D.		In Aluminum Components		In Cast Iron or Steel Components
in.	mm	[in]	N•m	[ft-lbs]	N•m [ft-lbs]
1/16	8.1	[0.32]	5	[45 in-lb]	15 [10]
1/8	10.4	[0.41]	15	[10]	20 [15]
1/4	13.7	[0.54]	20	[15]	25 [20]
3/8	17.3	[0.68]	25	[20]	35 [25]
1/2	21.6	[0.85]	35	[25]	55 [40]
3/4	26.7	[1.05]	45	[35]	75 [55]
1	33.5	[1.32]	60	[45]	95 [70]
1 1/4	42.2	[1.66]	75	[55]	115 [85]
1 1/2	48.3	[1.90]	85	[65]	135 [100]

ck8ppha