

Trainings ▾

Engine Disassembly/Assembly


Tool Number

3823495

Depth Gauge Assembly

Used to measure the cylinder liner protrusion and the cylinder liner counterbore ledge angle.

©Cummins Inc

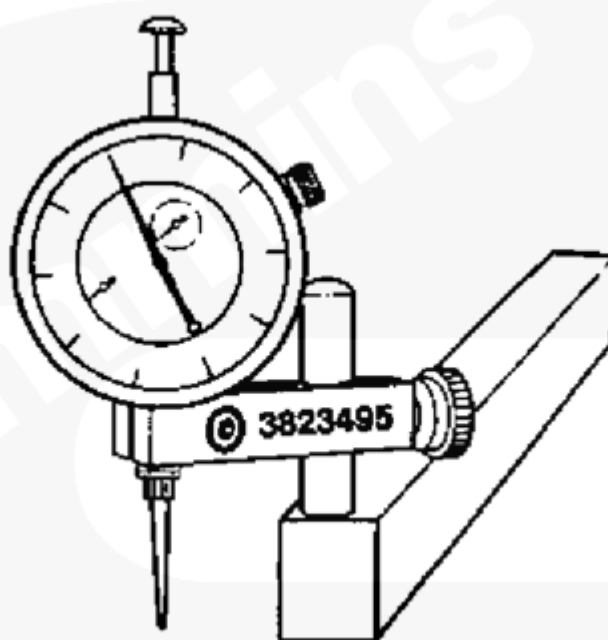

3823495


Tool Number

ST-647

Puller

Used to remove the alternator and accessory drive pulleys.

©Cummins Inc

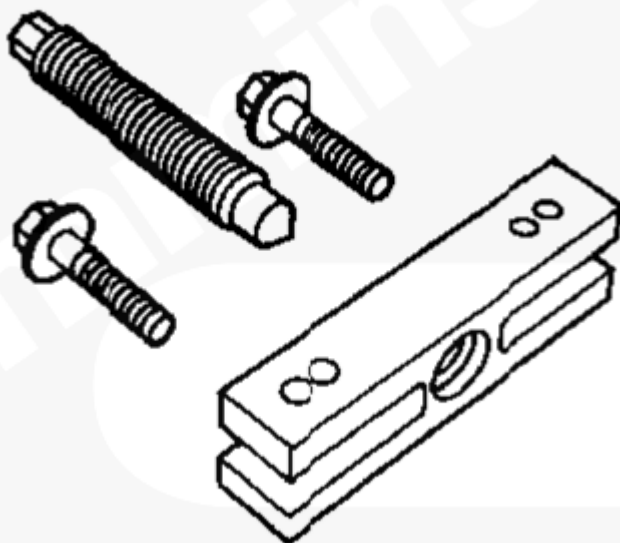

ad8toga


Tool Number

ST-1116

Main Bearing Cap Puller

Used to remove the main bearing caps from the cylinder block

©Cummins Inc

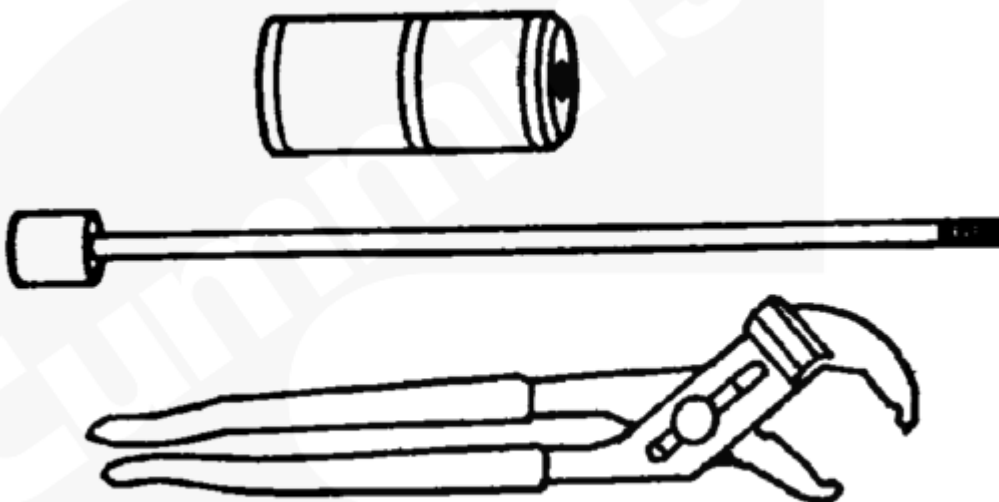

mb8toga



Tool Number

ST-1232

Drill Ream Fixture

Used to machine the dowel hole, and to install oversize dowels in the cylinder block and flywheel housing. Use with a drill, reamer, and appropriate drill/ream bushing set.

©Gummine Inc

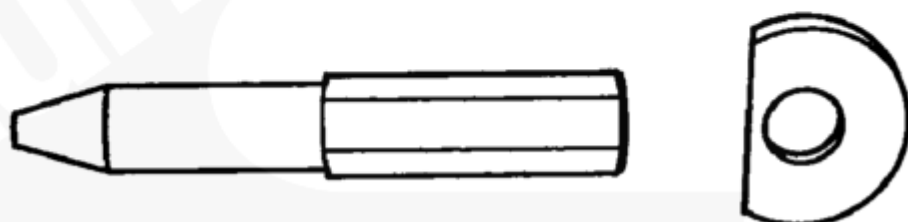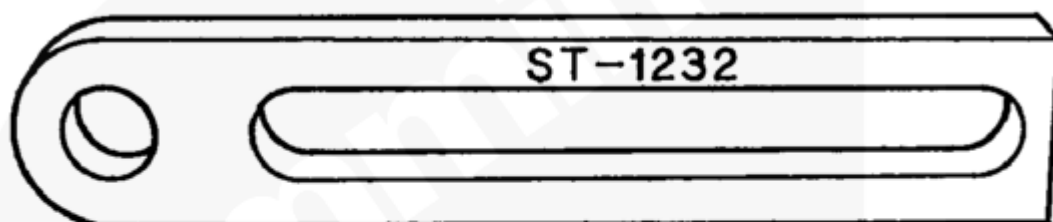

st-1232

Tool Number

3824879

Anti-Seize Compound

Used to speed the assembly and disassembly of studs, bolts, capscrews, flanges, and fittings.

©Cummins Inc


**3377132****Tool Number**

ST-1269

Piston Ring Expander

Used to remove the piston rings from the piston without damaging or distorting the piston rings.

©Cummins Inc

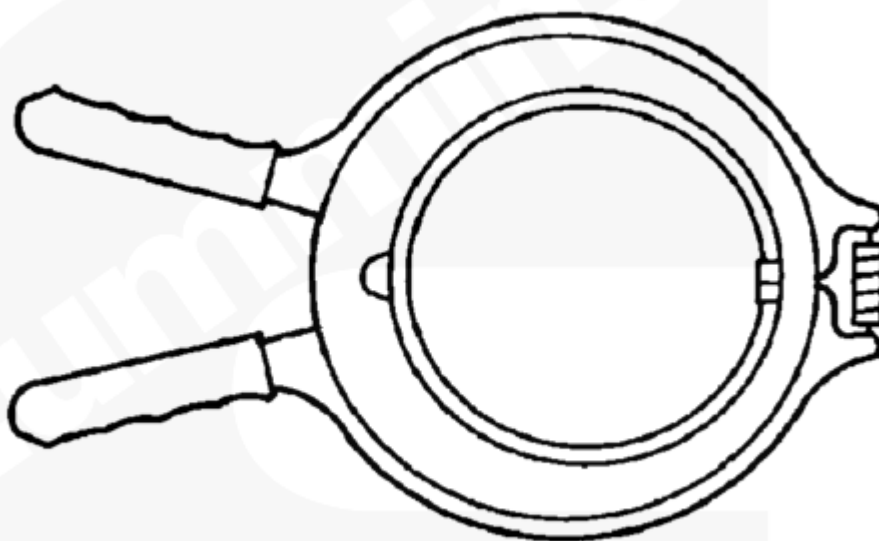**pi8togd**



Tool Number

3163329

Liner Installation Tool

Used to install the cylinder liner into the engine.

©Cummins Inc

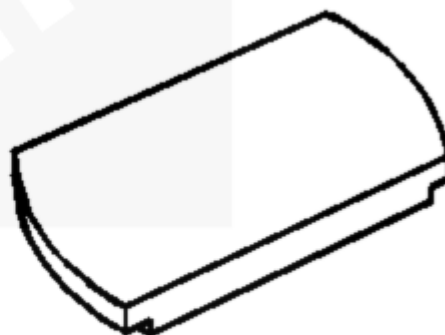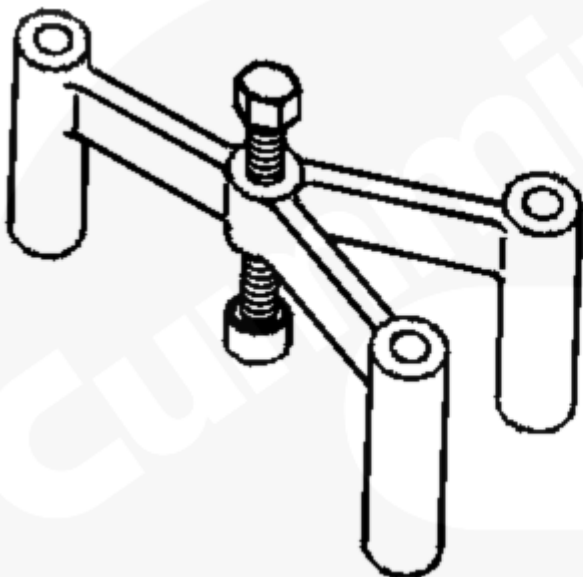

22600107



Tool Number

3164870

Liner Installation Tool

Used to install the cylinder liner into the engine.

©Cummins Inc

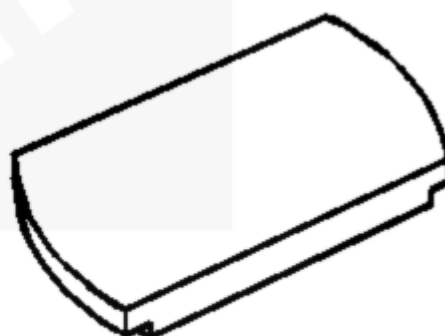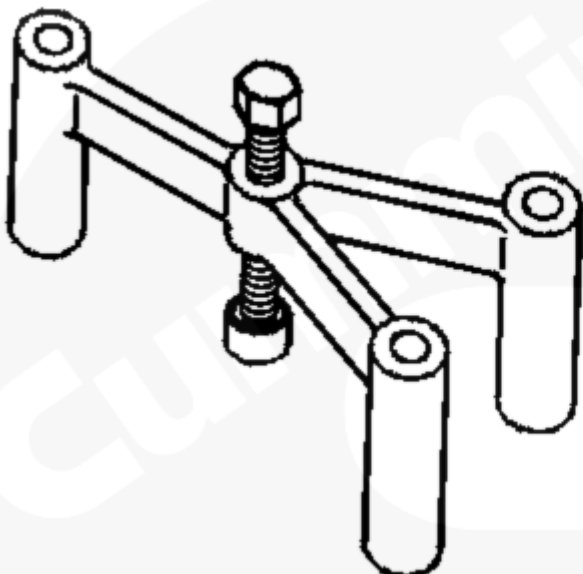

22600107


Tool Number

3824942

Injection Timing Tool

Used to check the injection timing. The timing fixture is designed to determine the push tube travel in relation to piston travel. Used with indicator stem extension, Part Number 3163305, alignment gauge, Part Number 3163306, and hold down screw, Part Number 3163307.

©Cummins Inc

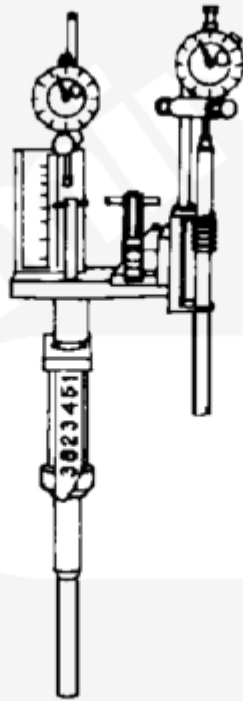

3823451


Tool Number

3824946

Universal Injector Timing Tool Fixture Kit Update

Used with injection timing tool, Part Number 3824942.

©Cummins Inc

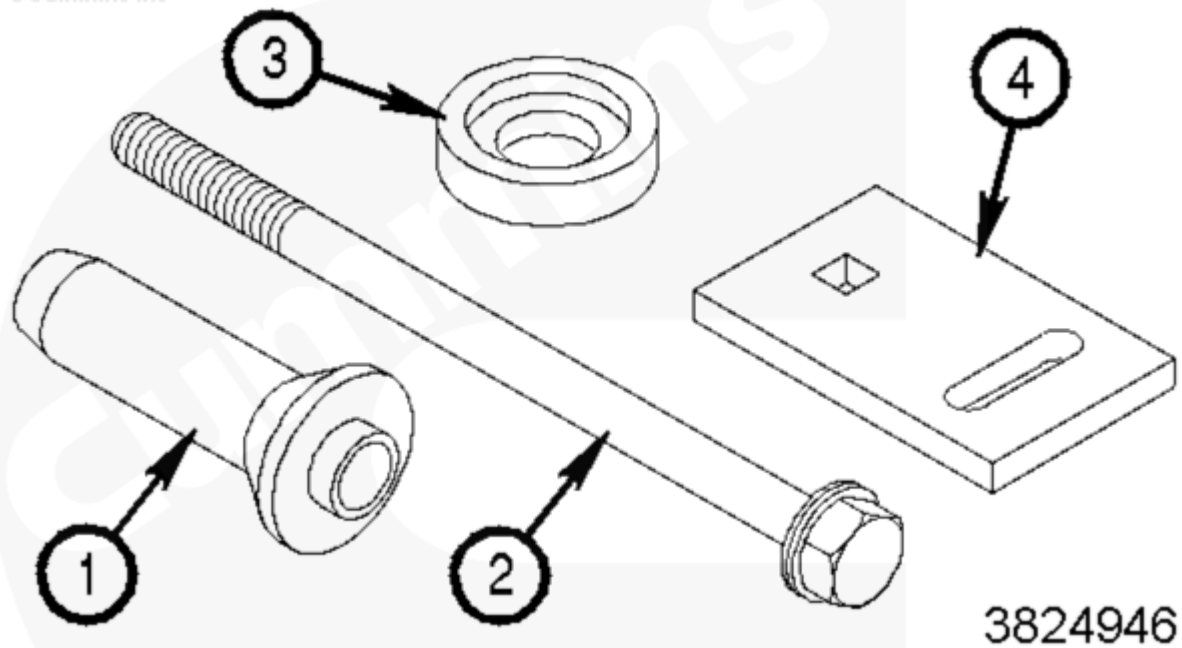


Tool Number

3375784

Light Duty Puller Kit

Used to remove small bushings, oil seals, and bearings.

©Cummins Inc

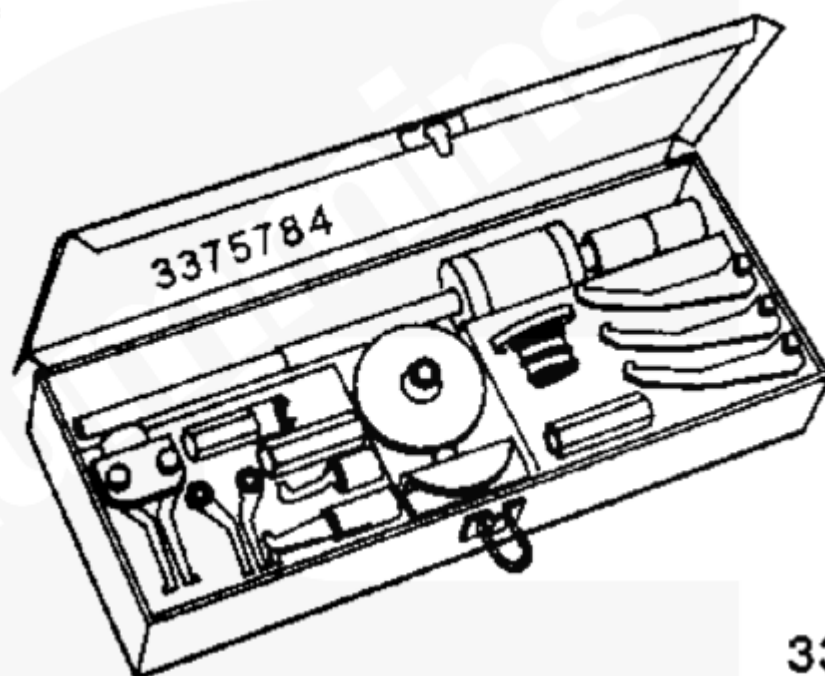


Tool Number

3164378

Puller Assembly

Used to remove the crankshaft and camshaft gears. Use with tool, Part Numbers 3164375 and 3164376.

©Cummins Inc

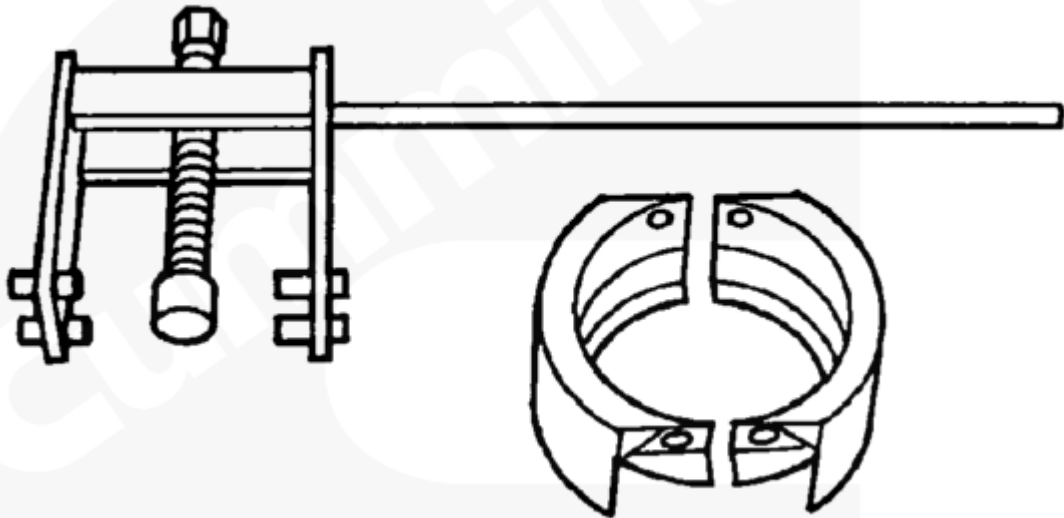

ks8togd


Tool Number

3163745

Universal Liner Puller

Used to remove the cylinder liner from the engine. Use with the liner remover plate, Part Number 3162886.

©Cummins Inc

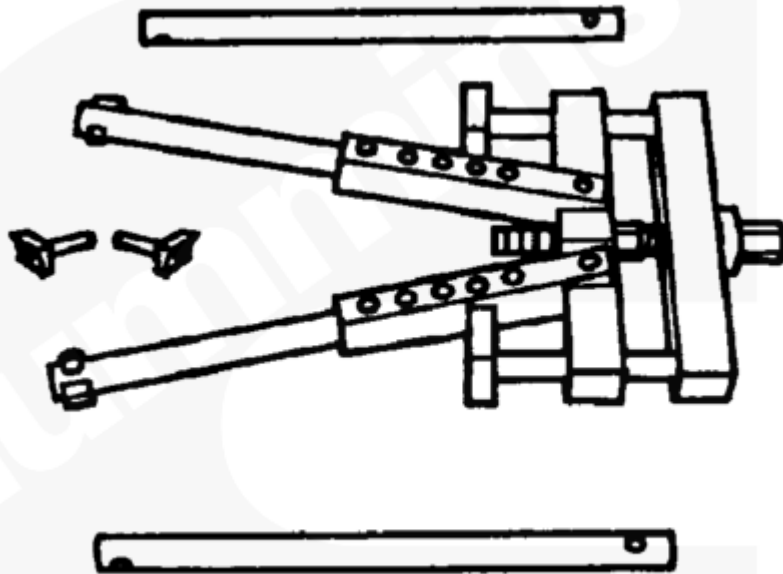

ck8togr


Tool Number

3376085

Pulley Installation Tool

Used to install the alternator and accessory drive pulleys. Use with the pulley installation adapter, Part Number 3163373, and pulley adapter kit, Part Number 3824502.

©Cummins Inc

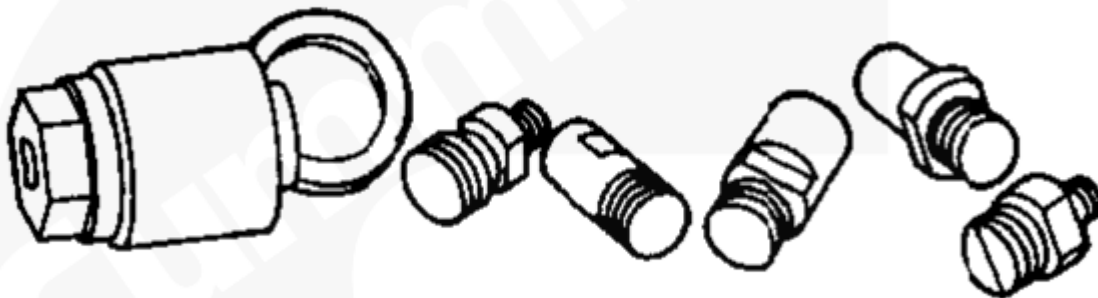

ad8togb


Tool Number

3823494

Cummins Sealant

Used to prevent coolant or oil leaks. This is a one part room temperature vulcanizing silicone rubber adhesive and sealant material having high heat and oil resistance, and low compression rate.

©Cummins Inc

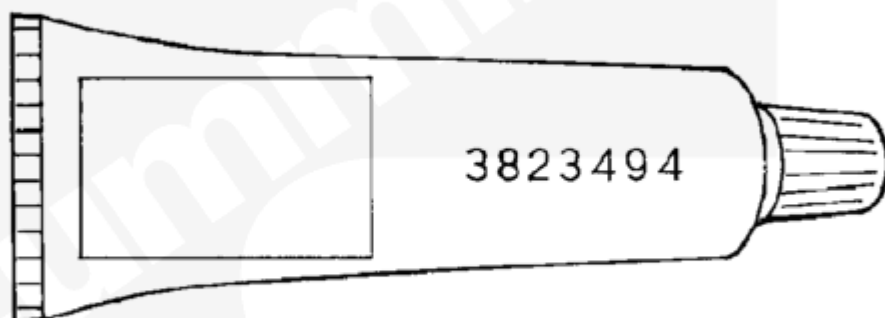**3823494**


Tool Number

3163195

Camshaft Removal/Installation Kit

Used to remove and install camshaft without damaging the camshaft bushings or camshaft.

©Cummins Inc

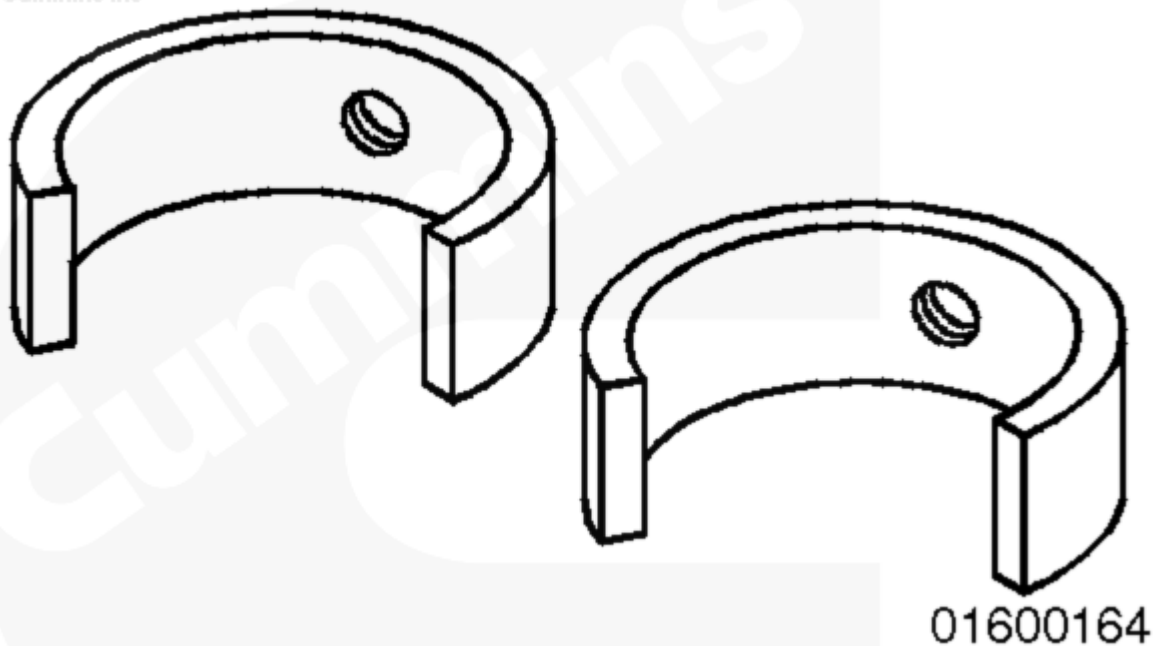

01600164


Tool Number

3163169

Torque Wrench Adapter

Used to secure the rocker lever adjusting screw while tightening the locknut.

©Cummins Inc

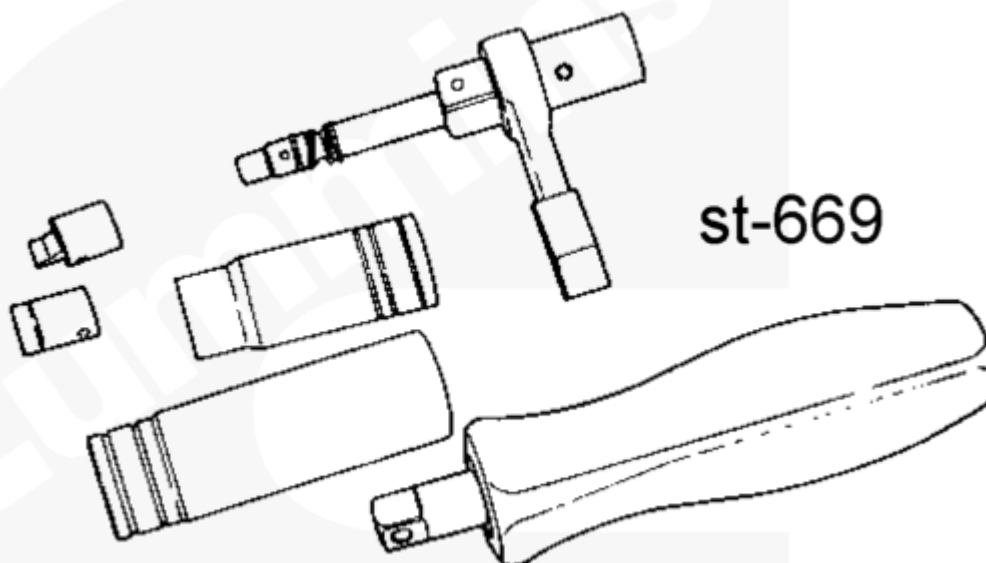

st-669


Tool Number

ST-669

Torque Wrench Adapter

Used to secure the rocker lever adjusting screw while tightening the lock nut.

©Cummins Inc

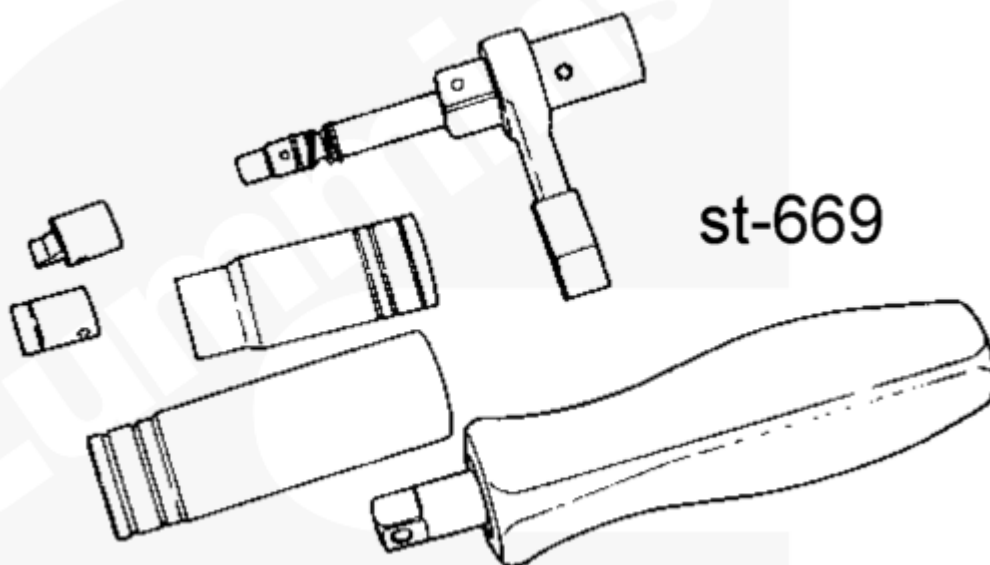
**Tool Number**

ST-1319

Water Tube Driver

Used to install or remove the water transfer tubes from the rocker housings.

©Cummins Inc

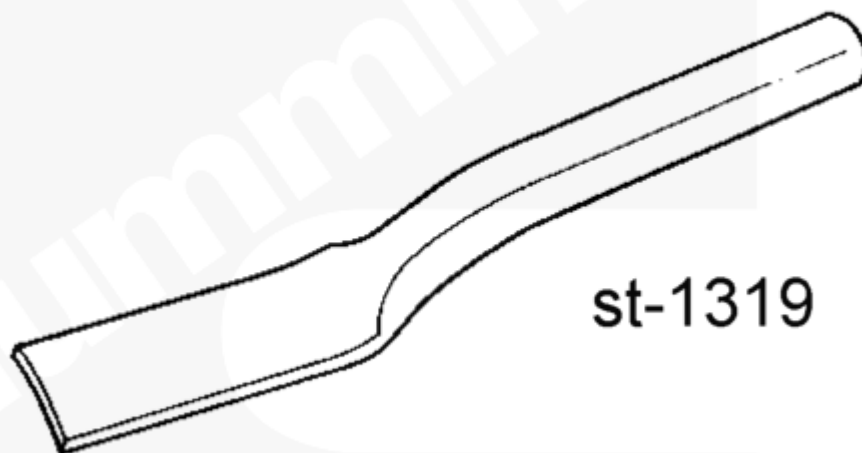


Tool Number

3164795

Torque Wrench


A dial-type torque wrench used to accurately adjust injectors in inch-pounds.

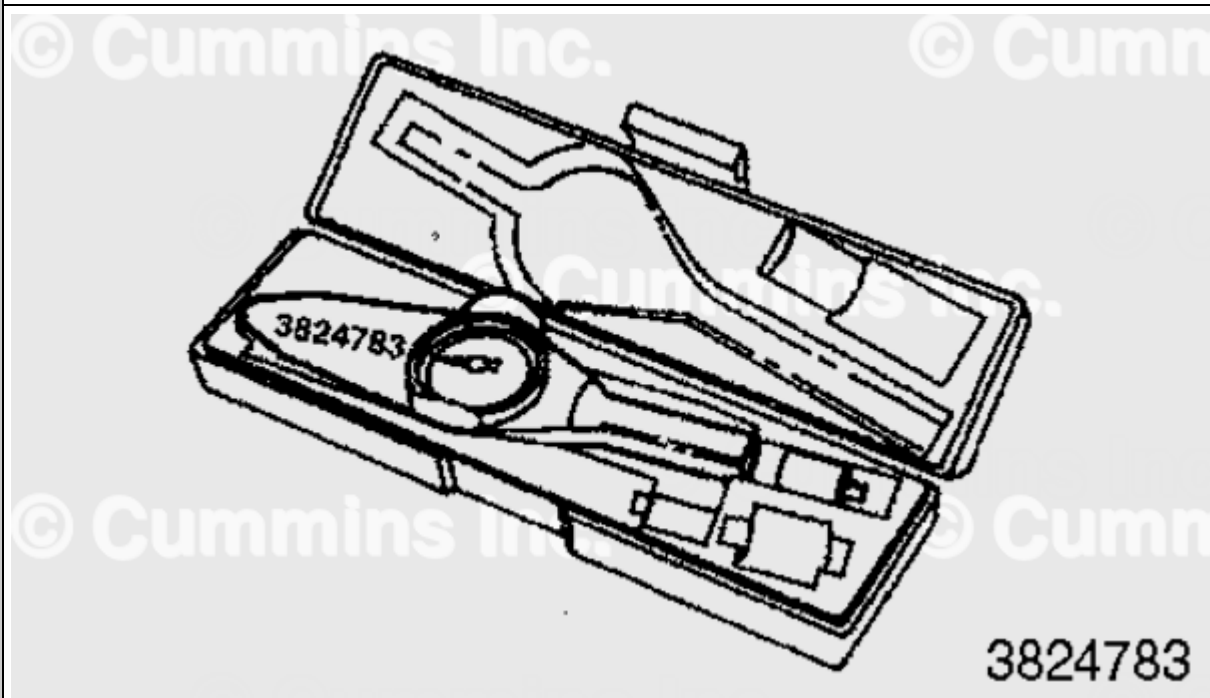**Tool Number**

3824783

Torque Wrench

A dial-type torque wrench used to accurately adjust injectors in inch-pounds.

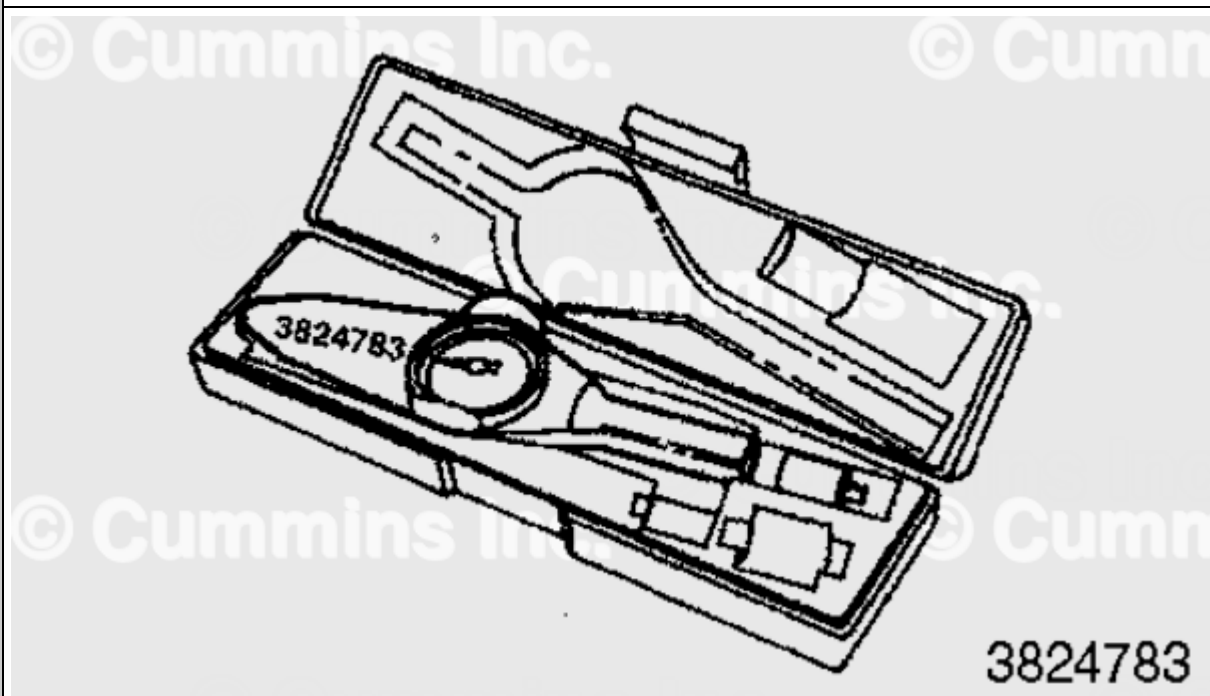


Tool Number

3376596

Torque Wrench

Inch-pound torque wrench used to tighten the valve lever adjusting screw. Does not require screwdriver attachment.

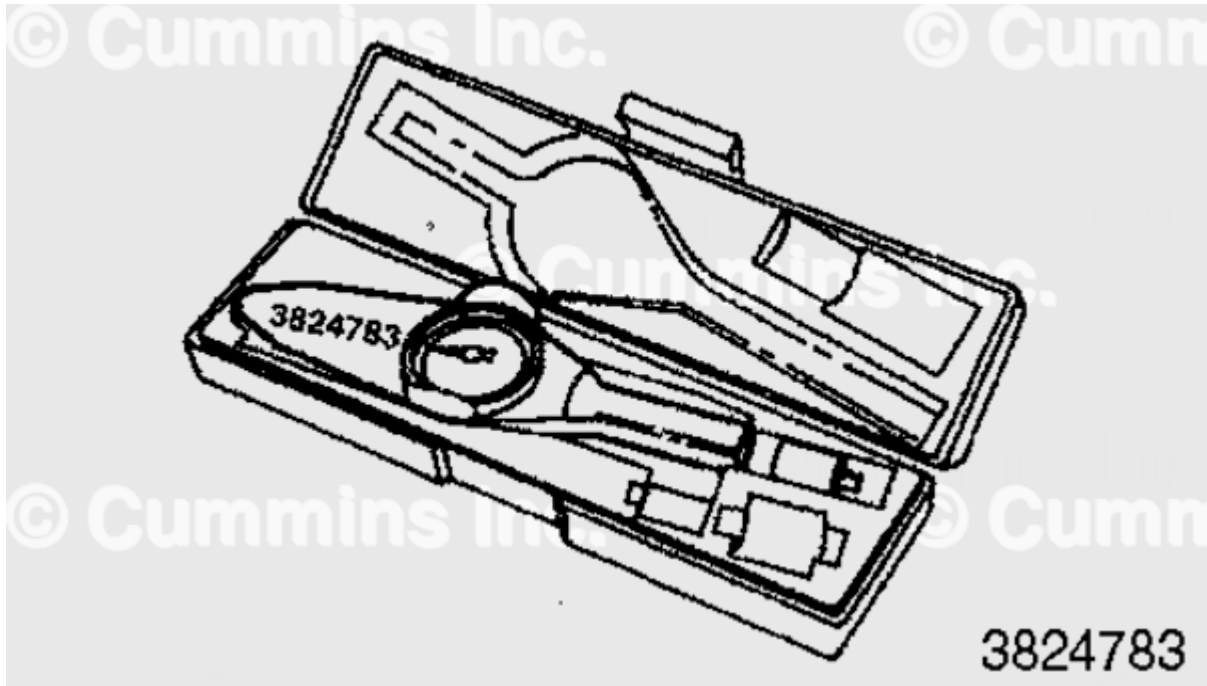


Tool Number

3824901

Valve Setting Gauge Kit

The kit contains two 25.4 mm [1 in] size feeler gauges for centering under the swivel foot of the rocker lever when setting the valves. This kit contains an intake valve gauge at 0.36 mm [0.014 in] and an exhaust valve gauge at 0.081 mm [0.032 in].

©Cummins Inc

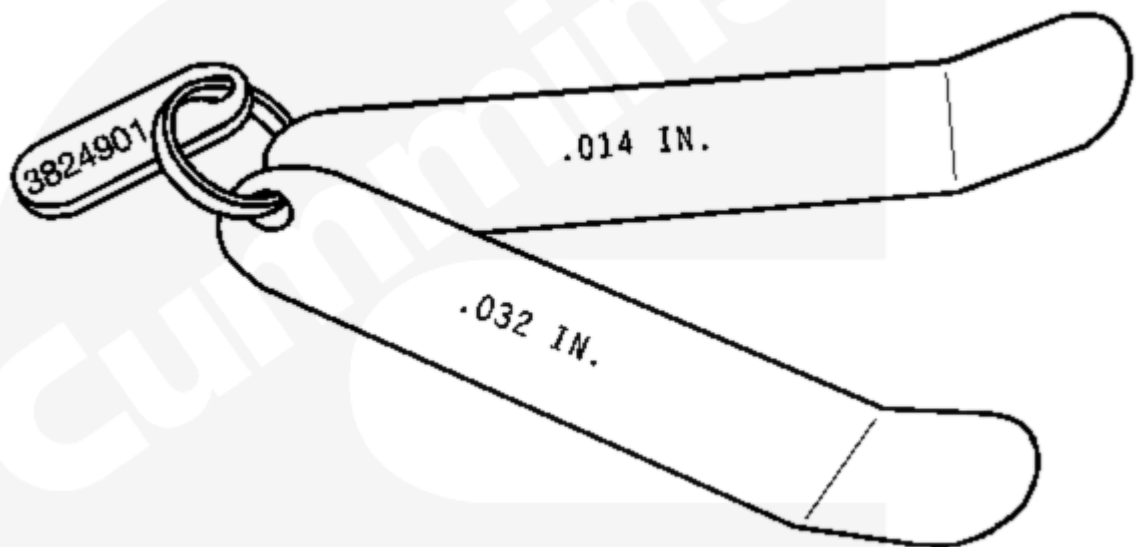**3824901**


Tool Number

3375049

Filter Wrench

Used to remove the spin-on filters.

©Cummins Inc

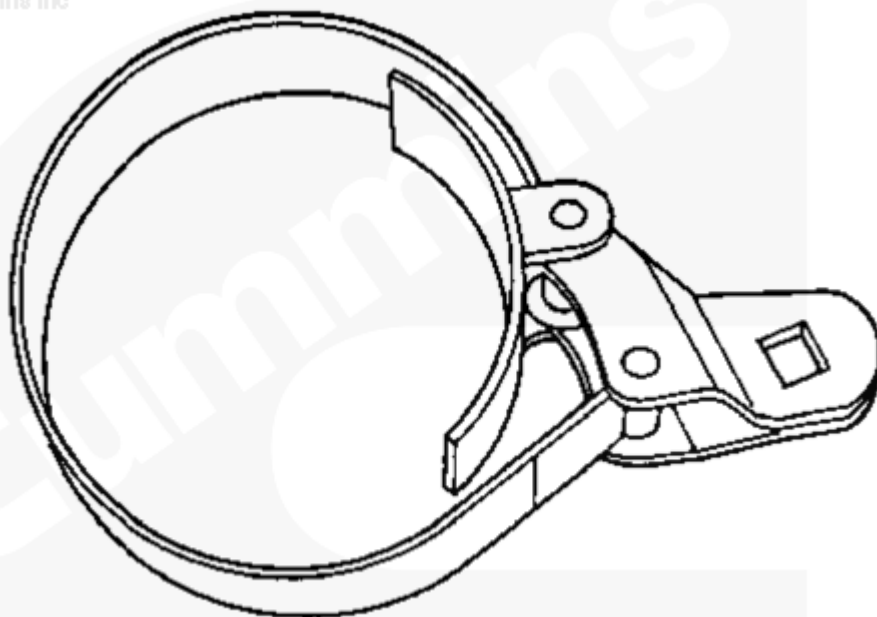**3375049**


Tool Number

3824830

Injector Removal/Installation Tool

Used to remove and install the injectors.

©Cummins Inc

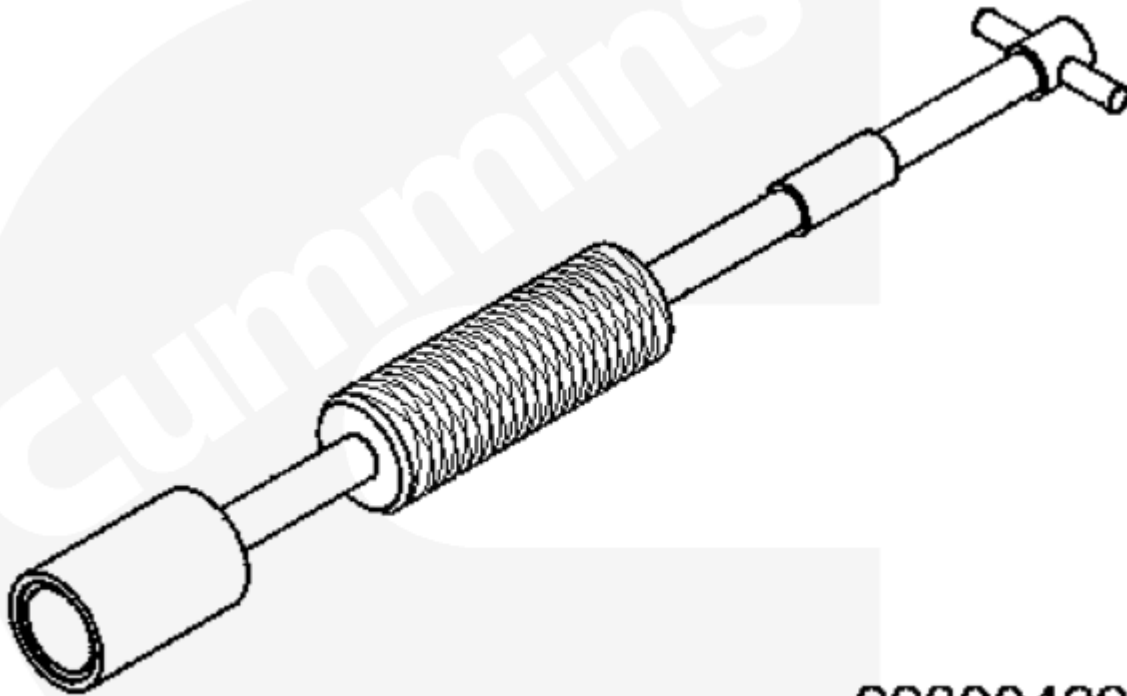**22800429**


Tool Number

3375411

Thermostat Seal Mandrel

Used to install the thermostat seal into the thermostat housing.

©Cummins Inc

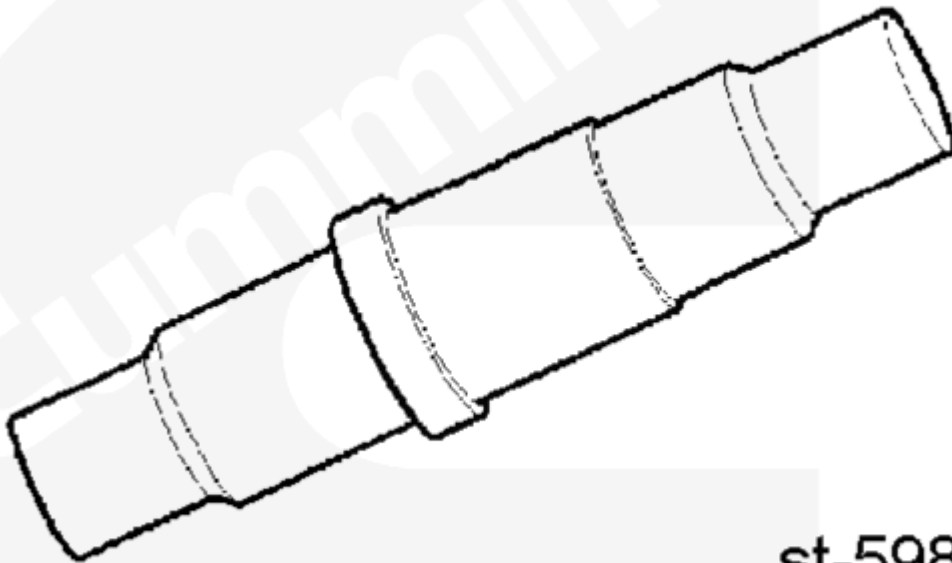

st-598


Tool Number

ST-1138

Belt Tension Gauge

Used to measure the accessory drive belt tension.

©Cummins Inc

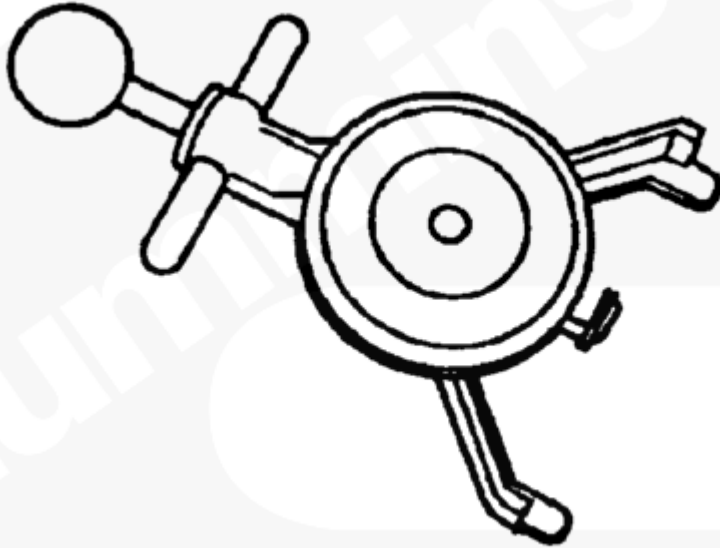

fa8togc


Tool Number

3163349

Oil Seal Remover/Installer

Used to remove and install front and rear crankshaft oil seals.

©Cummins Inc

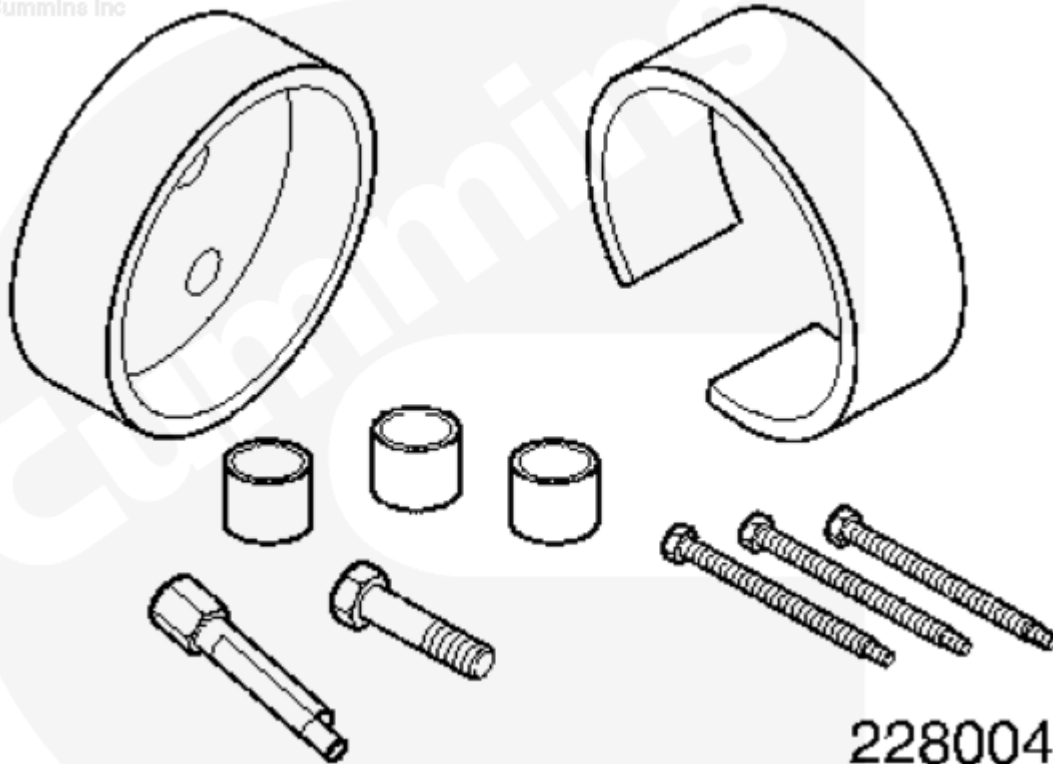

22800431


Tool Number

3376399

O-Ring Pick

Used to remove and install o-rings.

©Cummins Inc

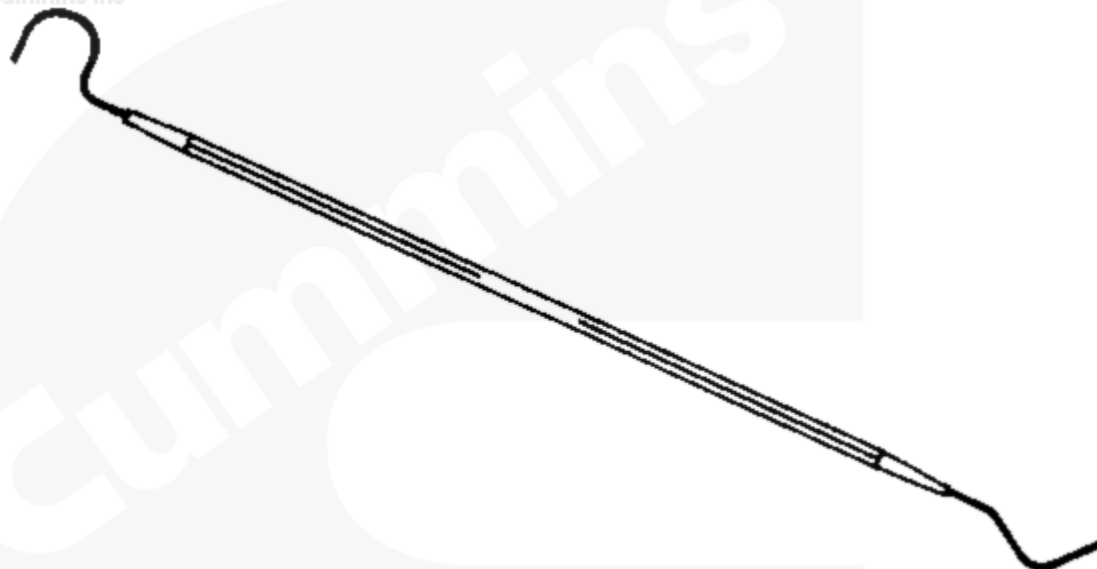

3376399

Tool Number

3823843

Deep Well Socket (1-1/4 inch)

Used to remove and install sensors and actuators

©Cummins Inc



3823843

Tool Number

3824510

Electrical Contact Cleaner

A non-petroleum cleaner used to clean electrical contacts and connectors.

©Cummins Inc



oi8togt

Tool Number


3164794

Torque Wrench

Used to tighten capscrews to 13 to 136 N•m [10 to 100 ft-lb].

© Cummins Inc.

© Cumn

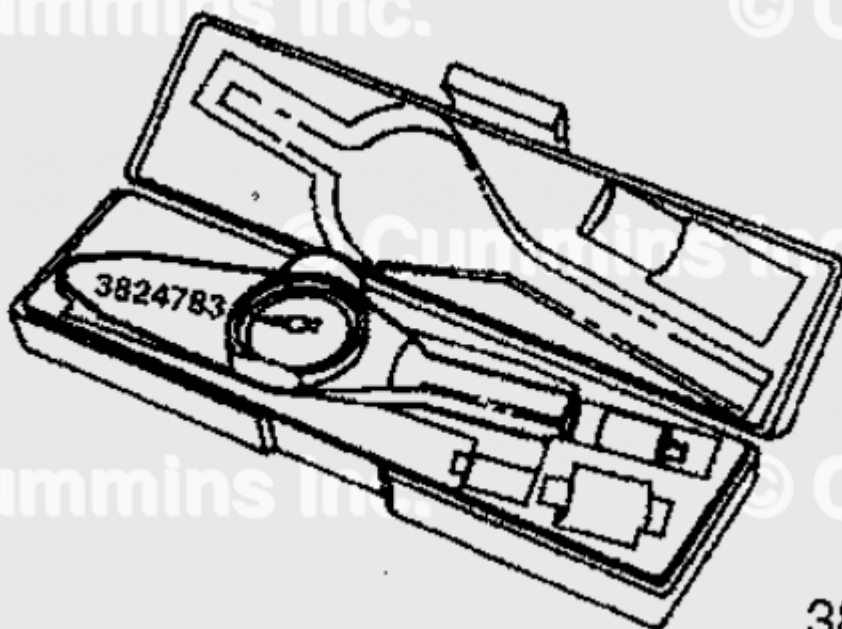

© Cummins Inc.

© Cumn


3824783

Tool Number

3164798

Torque Wrench


Used to tighten capscrews to 136 to 813 N•m [100 to 600 ft-lb].

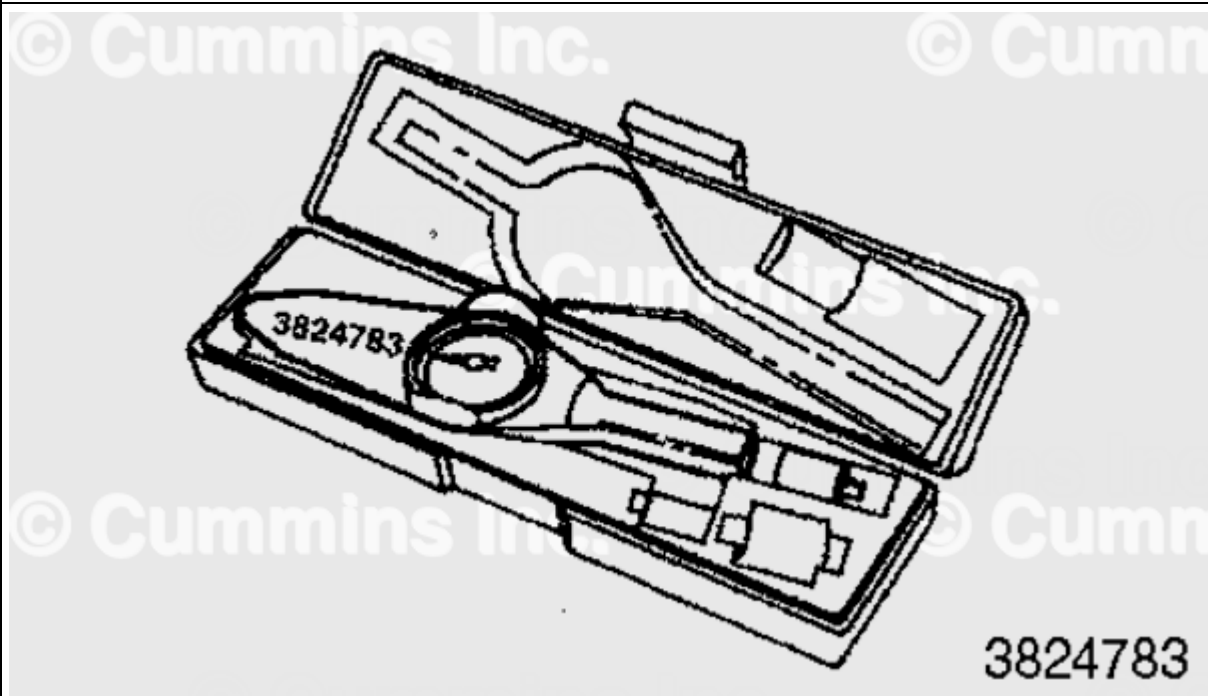**Tool Number**

3376050

Dial Indicator

Used to check bore and face of the flywheel.

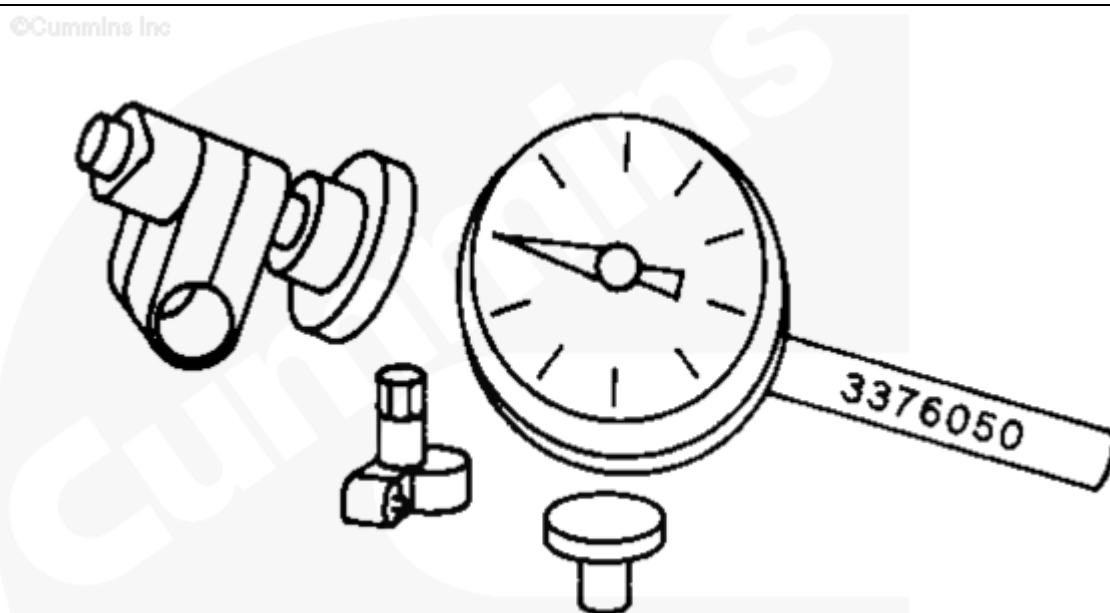


Tool Number

3377399

Magnetic Base Dial Indicator Holder

Used in conjunction with the dial indicator assembly.

©Cummins Inc

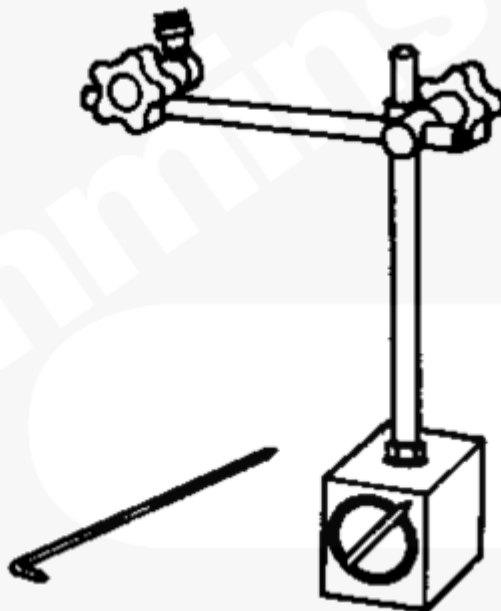

3377399


Tool Number

ST-1325

Flywheel Housing Indicator

Used to measure runout of the flywheel housing.

©Cummins Inc

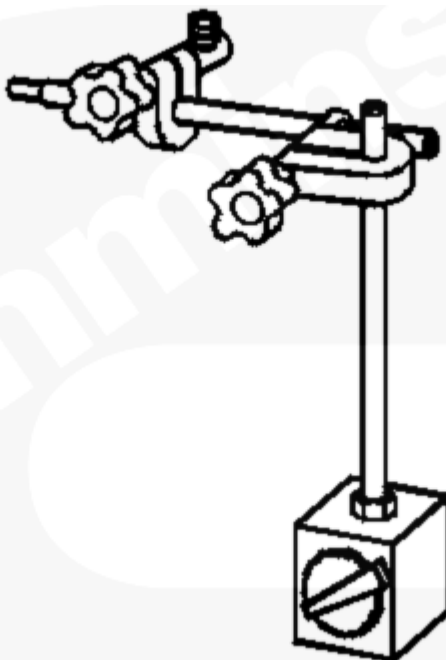

22600063


Tool Number

3823294

Piston Ring Compressor

Used to compress the piston rings onto the piston.

©Cummins Inc

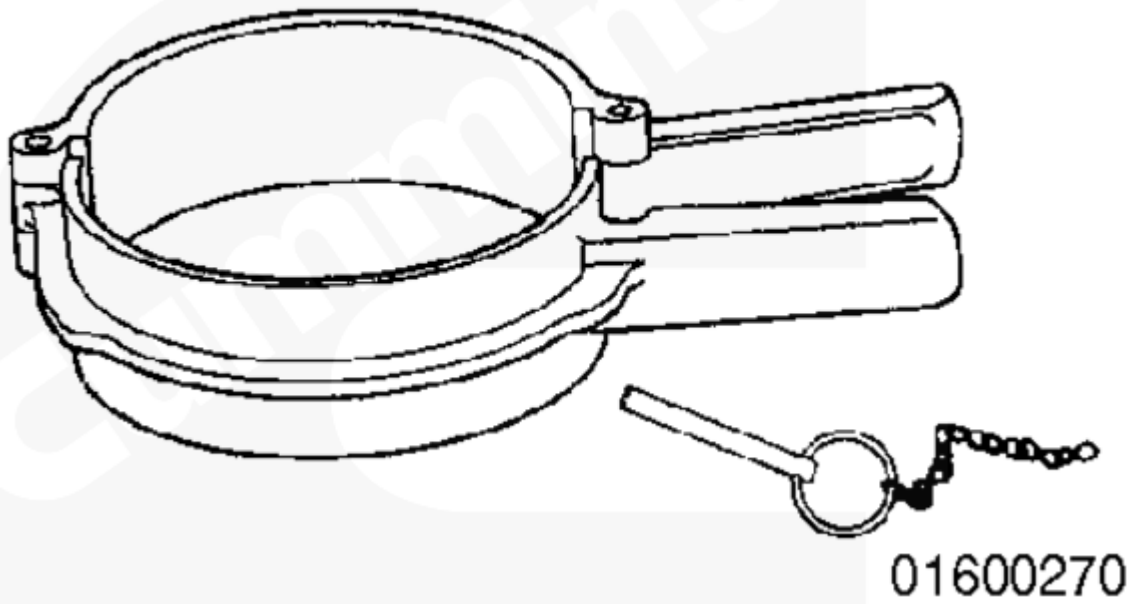

Last Modified: 18-Jan-2010
