

Trainings ▾


Tool Number

ST-647

Gear Puller

Used to remove the drive pulleys and impellers.

©Cummins Inc

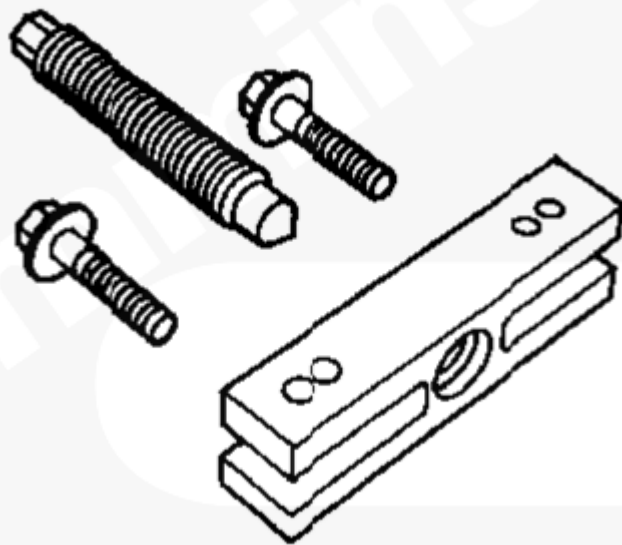

ad8toga


Tool Number

3376663

Coupling Puller

Used to remove the splined coupling gear from the compressor drive, fuel pump, and air compressor.

©Cummins Inc

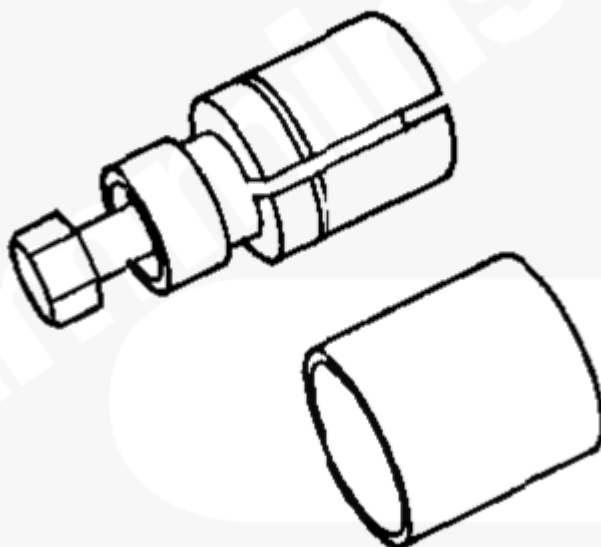

bp8togg


Tool Number

3823765

Adapter Kit

Contains most adapters for removing accessory drive pulleys.

©Cummins Inc

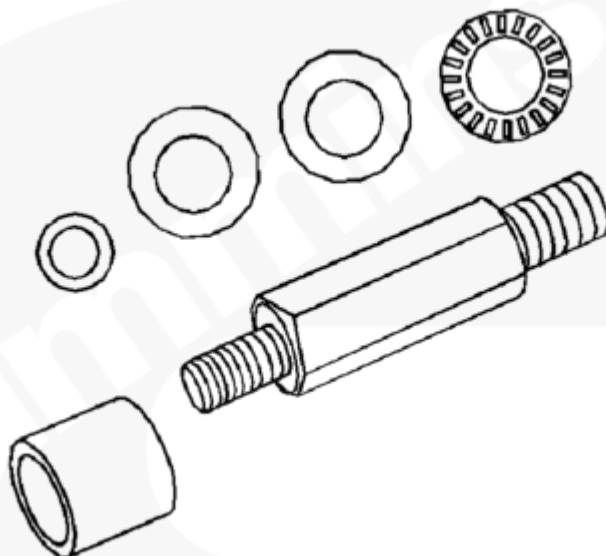

22800558

Tool Number

3377132

Sealant (RTV)

Applied to the portion of the cover that will be in the bore of the front cover.

©Cummins Inc


**3377132****Tool Number**

3824502

Pulley Adaptor Kit

Used with pulley installation tool, Part Number 3376326, to assemble pulleys onto shafts.

©Cummins Inc

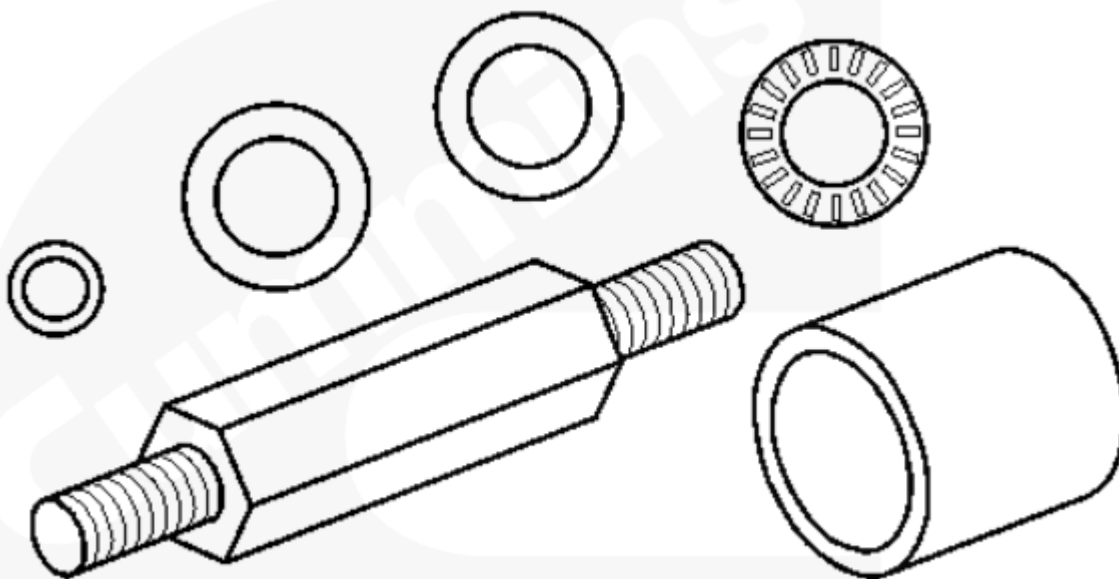**3824502**


Tool Number

3824922

Accessory Drive Oil Seal Installer

Used to assemble accessory drive oil seals into the front cover.

©Cummins Inc

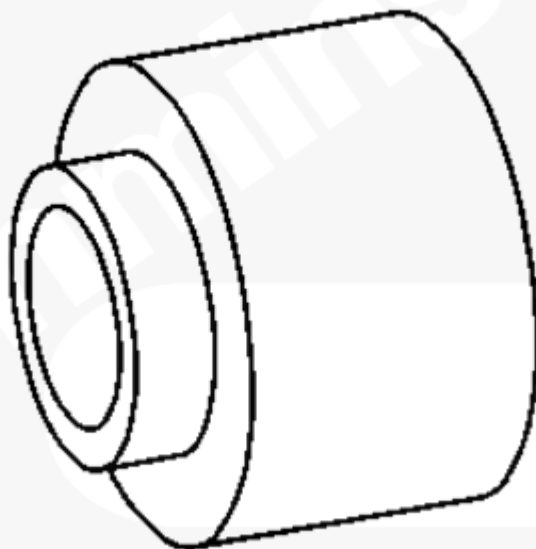

3824922

Tool Number

3376326

Pulley Installation Tool

Contains a variety of adaptors to assemble pulleys onto shafts.

©Cummins Inc



ad8togb

