


Trainings ▾

General Information

The alarm and safety system consists of the following components:

- Full or Classed Auxiliary Customer interface Box
- Full or Classed Propulsion Interface Box and Engine Room Panel
- Local Analog Display (Front and Back)
- Remote Analog Panel
- Safety Module Display (Front and Back)
- Classed Auxiliary Printed Circuit Board
- Sensors and Switches.


Component List

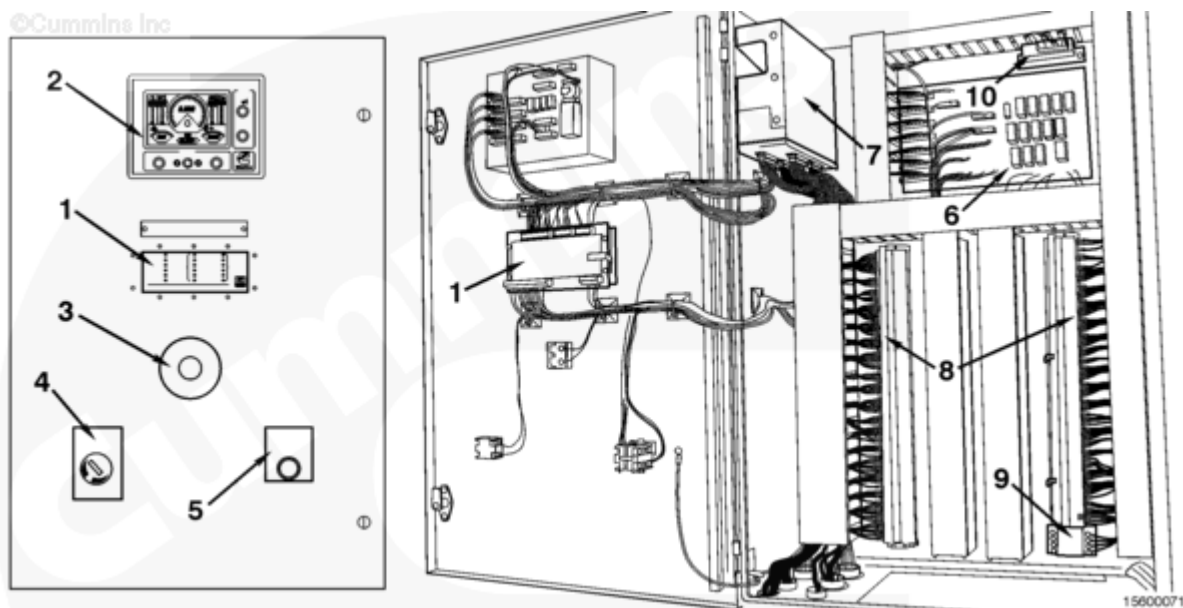

Full or Classed Auxiliary Customer Interface Box


1. Safety module
2. Local analog display
3. Emergency-stop button
4. Master switch
5. Engine speed switch

6. Printed circuit board
7. Dominion electronic control module
8. Vessel interface terminal strip
9. Power module
10. Speed comparator.

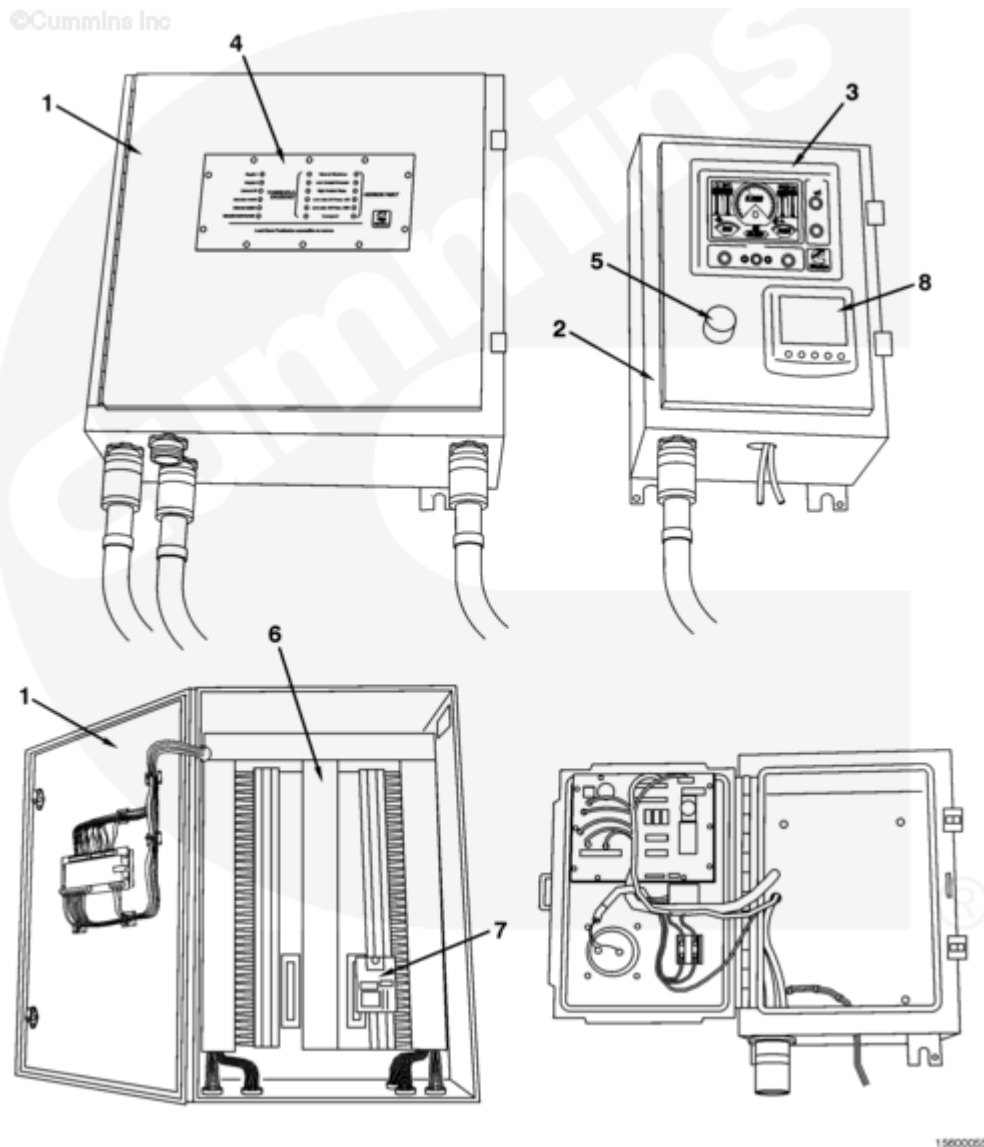

Full or Classed Propulsion Customer Interface Box and Engine Room Panel


1. Customer interface box
2. Engine room panel
3. Local analog display
4. Safety module display
5. Master switch
6. Vessel interface terminal strip
7. Power module
8. Cetrek display.

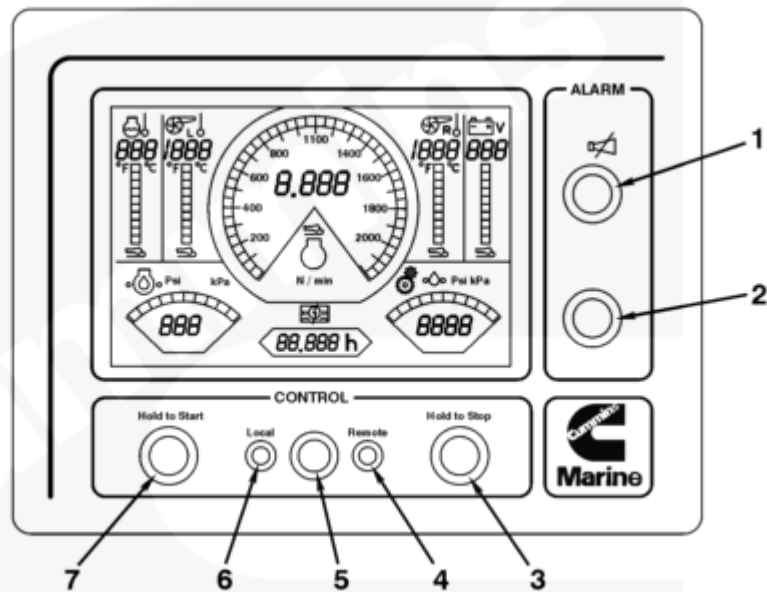

15600088

Local Analog Display View.


1. Silence alarm horn button
2. Acknowledge button
3. Hold to stop button
4. Remote Lamp
5. Control button
6. Local Lamp
7. Hold to start button

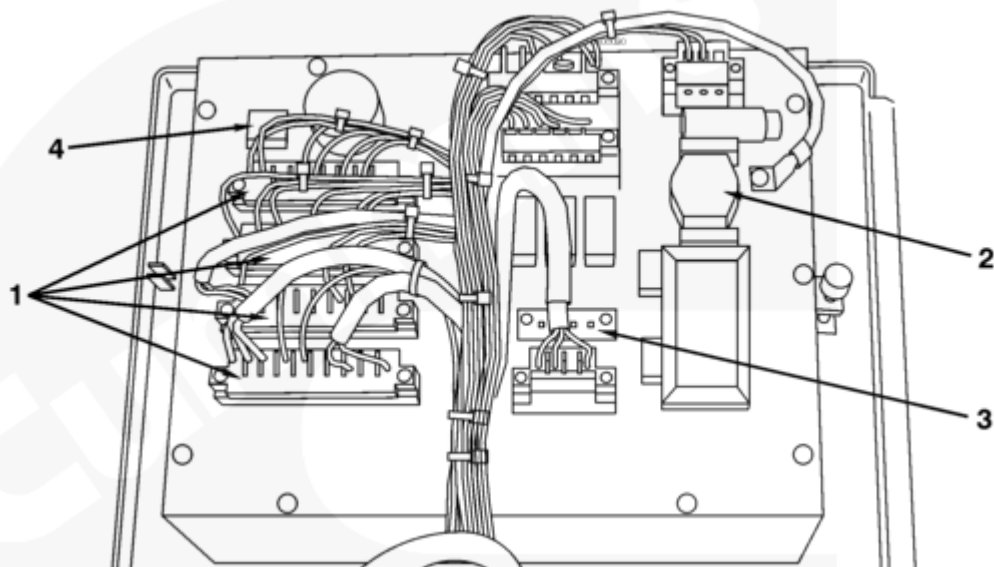

15600090

Local Analog Display Rear View.


1. Connectors
2. Fuse
3. RS232 service connector
4. Reset button

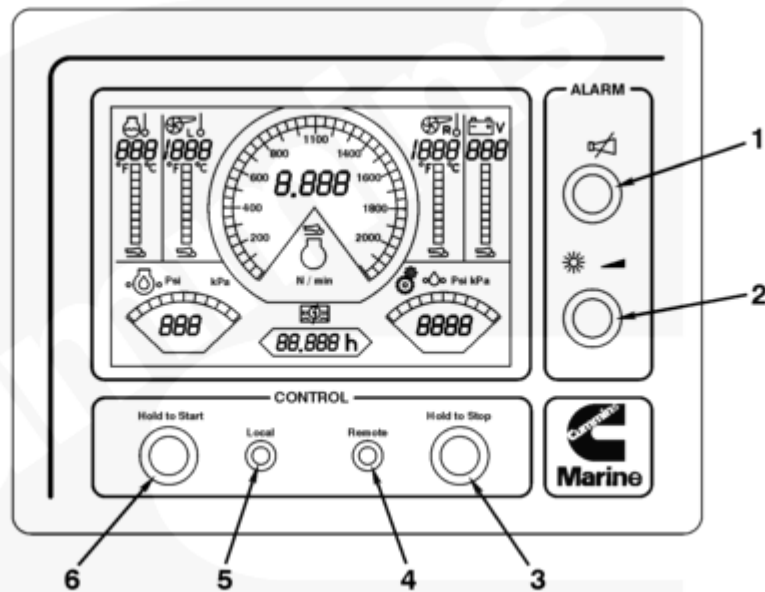

15600089

Remote Analog Panel View.


1. Silence alarm horn button
2. Dimmer button
3. Hold to stop button
4. Remote Lamp
5. Local Lamp
6. Hold to start button.

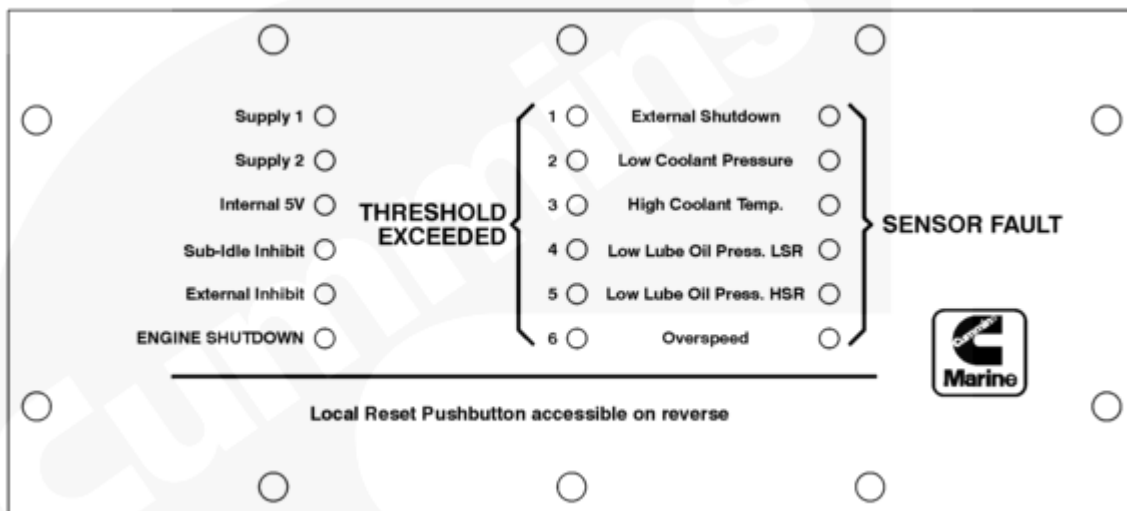

15600061


Safety Module Front Display.

- Left half, information lamp array
- Right half, alarm lamp array

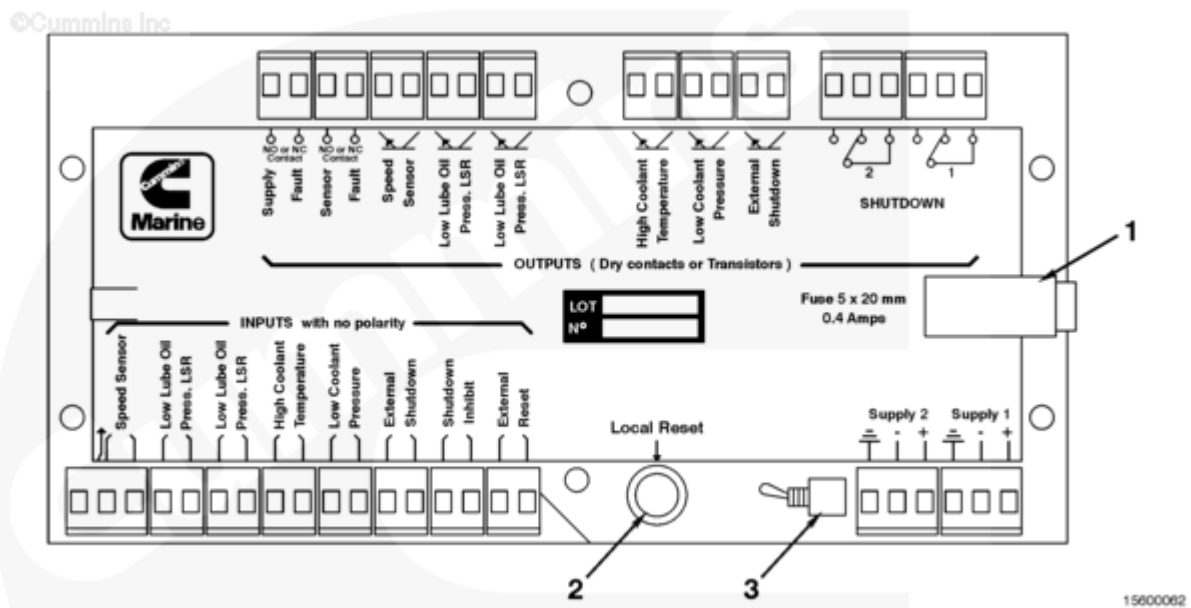

Safety Module Back View.

1. Fuse
2. Reset button
3. Overspeed setpoint switch.

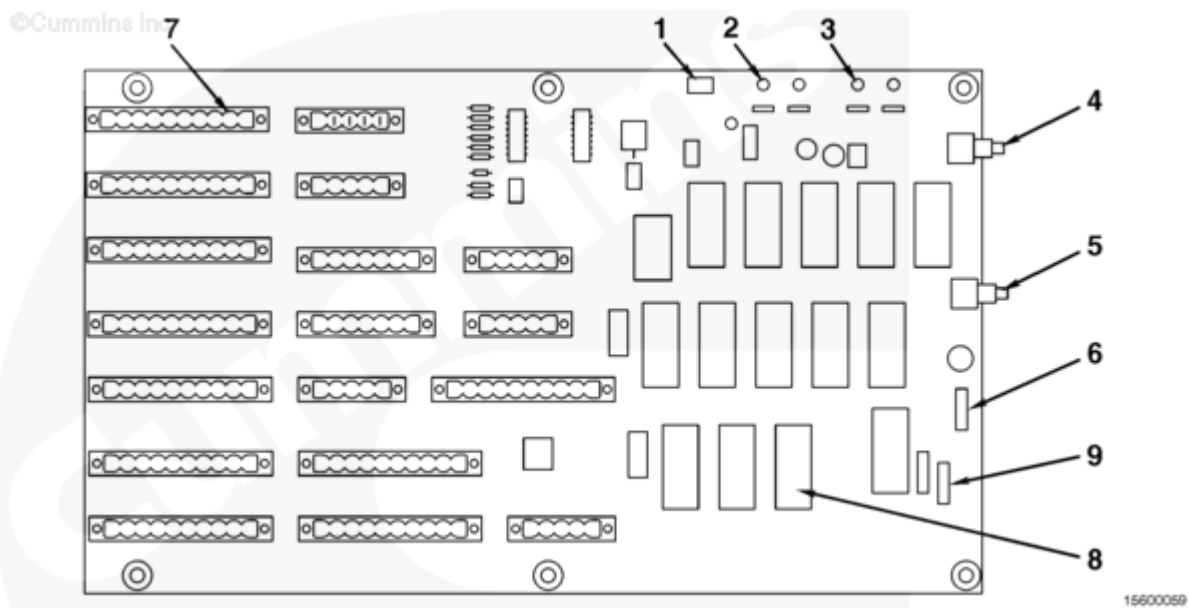

Classed Auxiliary Printed Circuit Board.

1. Droop potentiometer
2. Droop and isochronous lamps
3. Diagnostic and normal lamps
4. Diagnostic mode switch
5. Dominion fault reset button
6. 5A Fuse
7. Connectors
8. Relays

9. 10A Fuse.


⚠ WARNING ⚠

To reduce the possibility of personal injury, avoid direct contact of hot oil with your skin.

⚠ WARNING ⚠


Do not remove the check valves while the engine is running. This will result in pressurized hot oil to be sprayed. Only remove the sensor.

©Cummins Inc

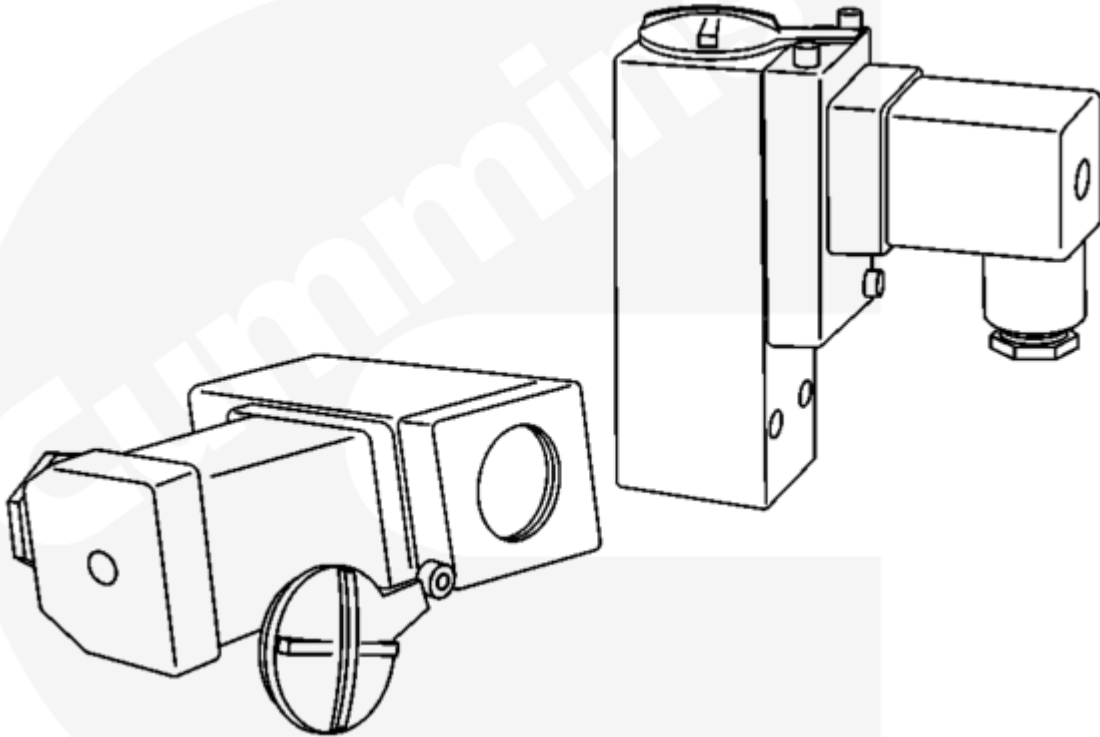


15600085

Alarm Sensor

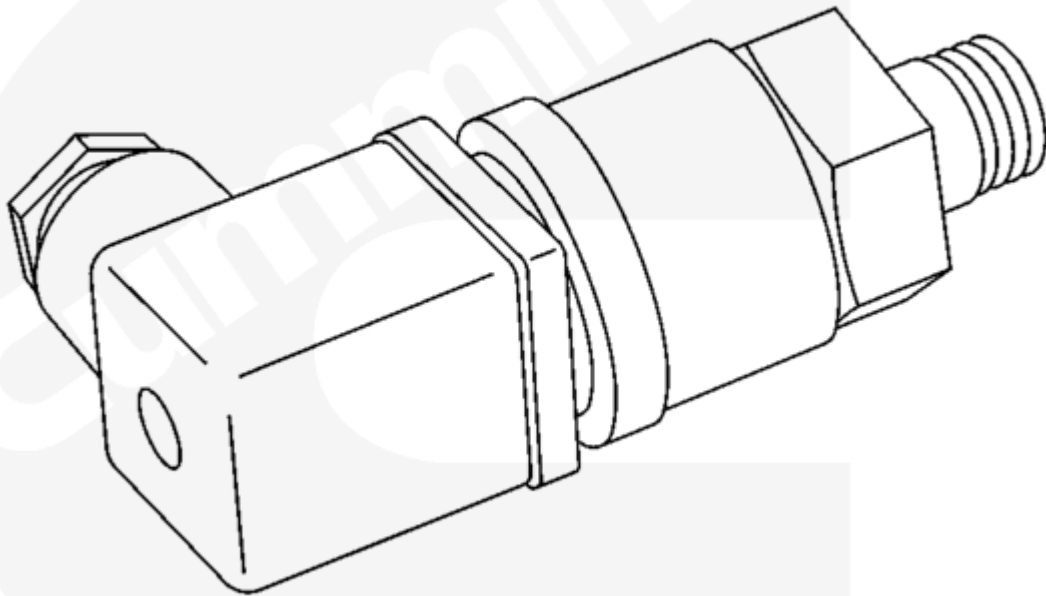


15600086

Pressure Sensor

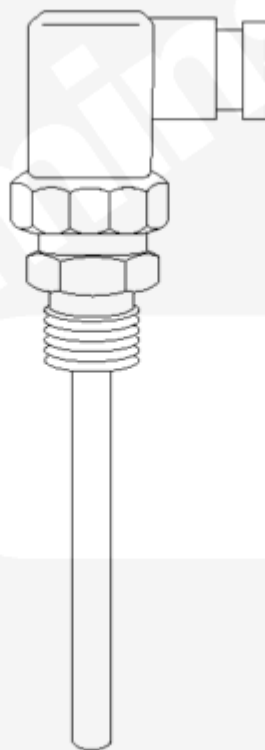

15600087


Temperature Sensor

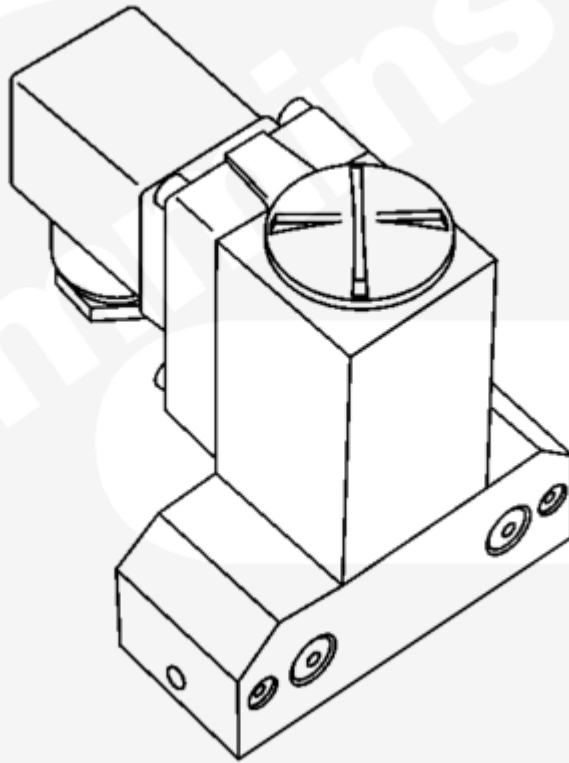

15600084


Fuel Filter Differential Pressure Sensor

Note : While some sensors look alike, they have different setpoints set at the factory. There are multiple part numbers for a common sensor type (pressure, temperature, etc.). Do not change the preset setpoint. If a setpoint has been changed it must be changed back to the setpoints set at the factory. Refer to Setpoint Adjustment in Procedure 209-001 (</qs3/pubsys2/xml/en/procedures/56/56-209-001.html>).

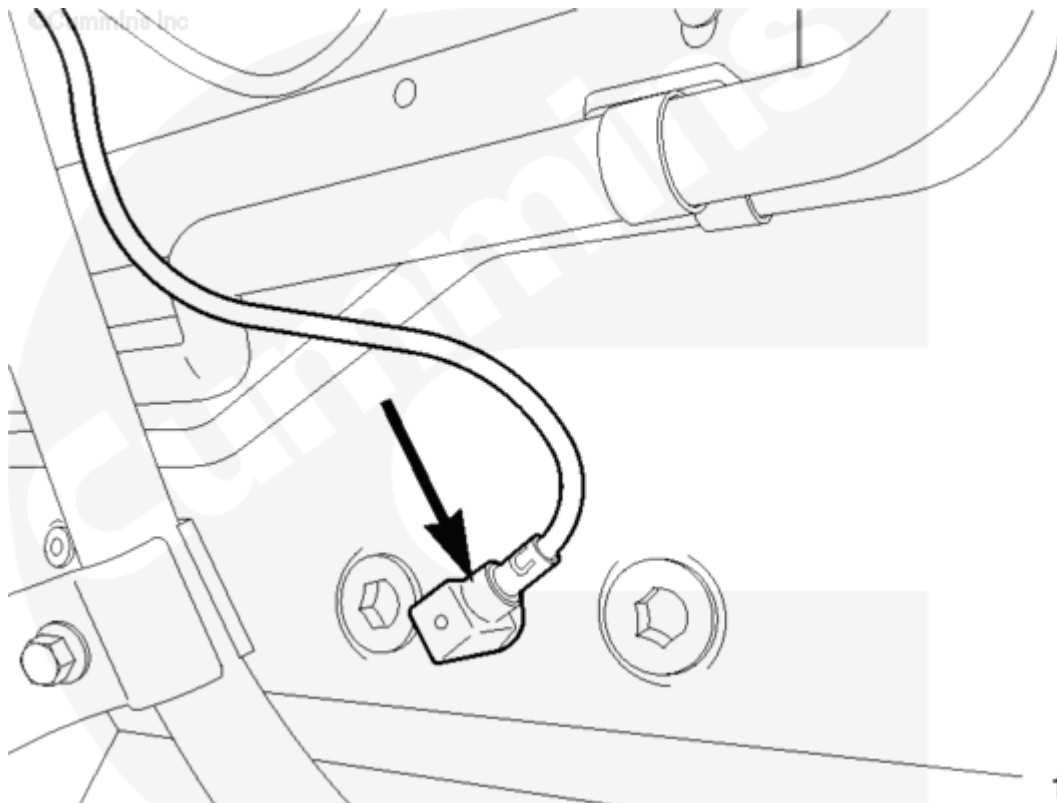


15600080

Oil Pan Temperature (left bank in oil pan)

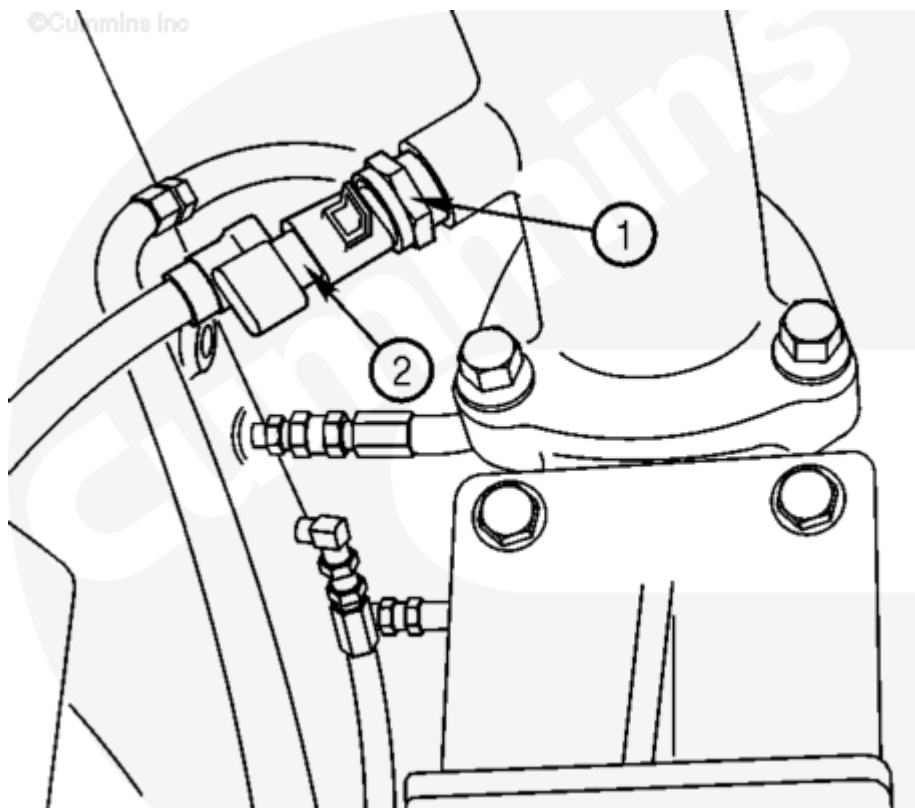


15600081

Aftercooler Water Inlet Temperature (front)(2) and Adapter (1)

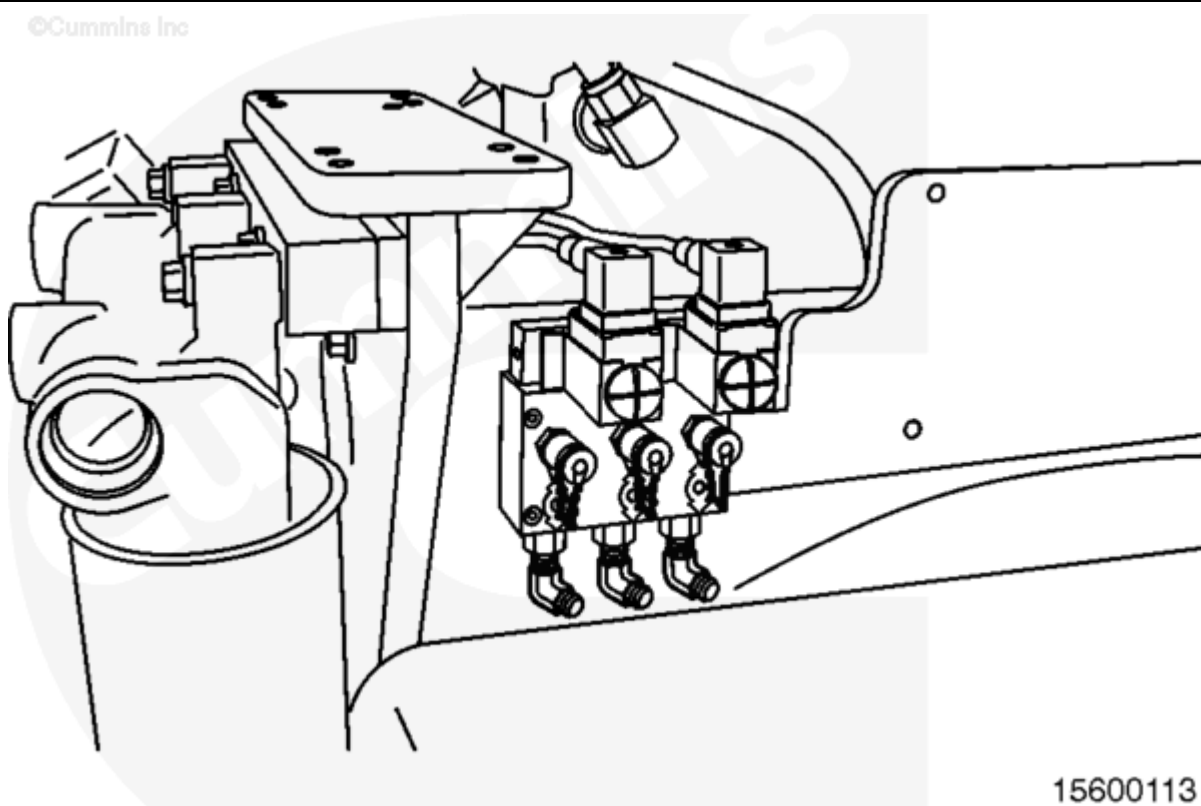


15600113

Fuel Filter Outlet Pressure and Fuel Filter Differential Pressure (left bank rear)

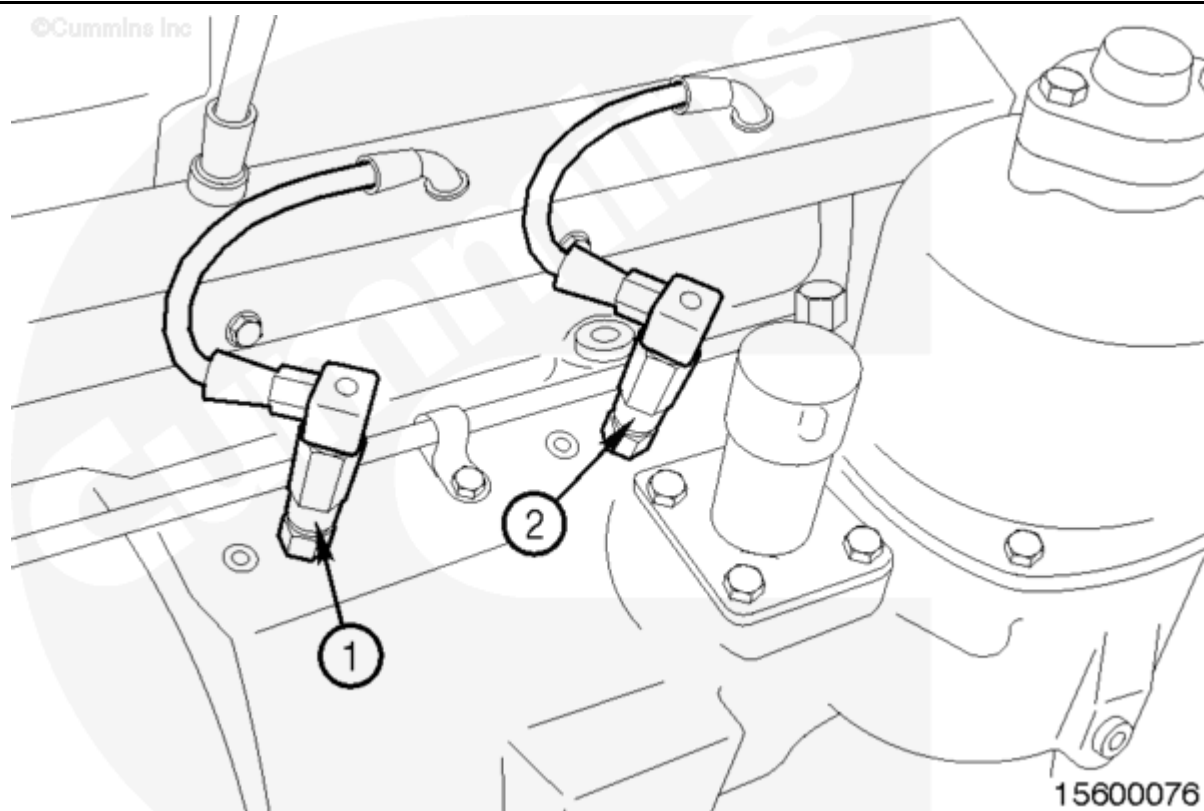


Lubricating Oil Filter Inlet Pressure (2) and Lubricating Oil Filter Outlet (1).

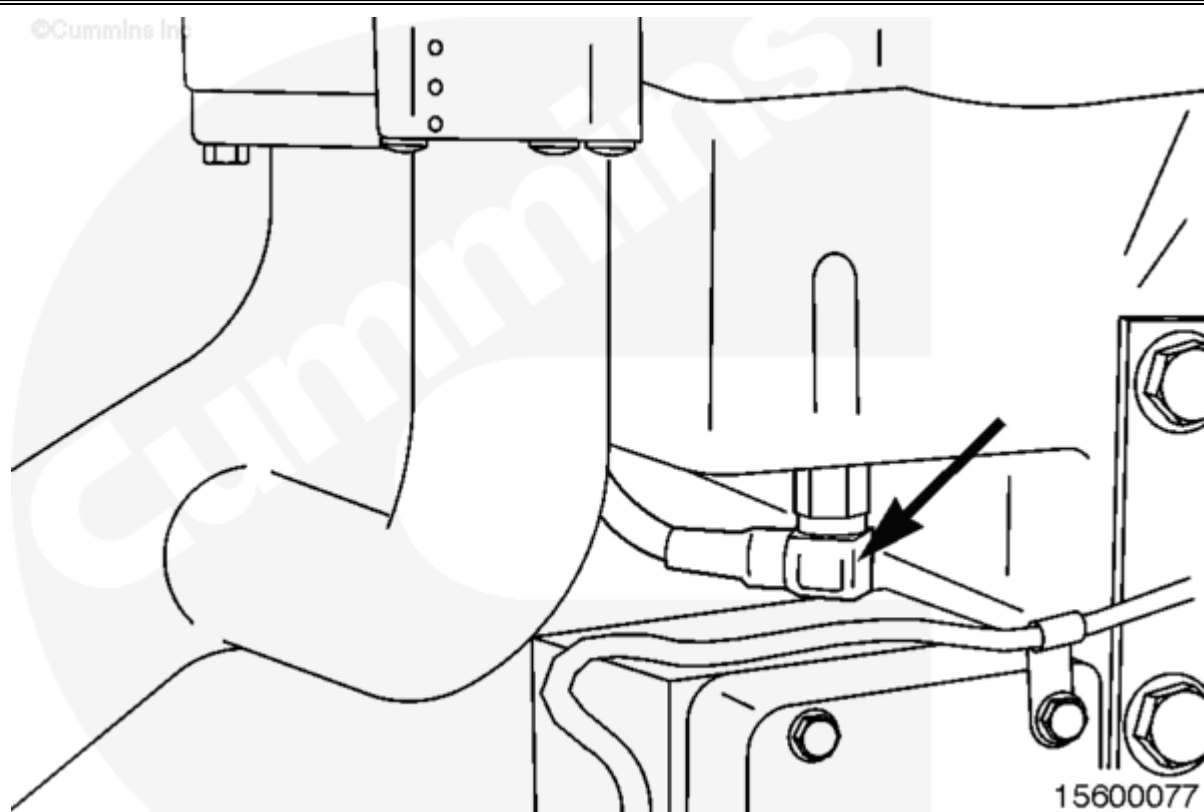


Coolant Temperature (front).

The check valves serve the same purpose as the manifold blocks. They allow the removal of the sensor from the engine while it is running so a known pressure source can be applied to the sensor for testing purposes as required by agencies.

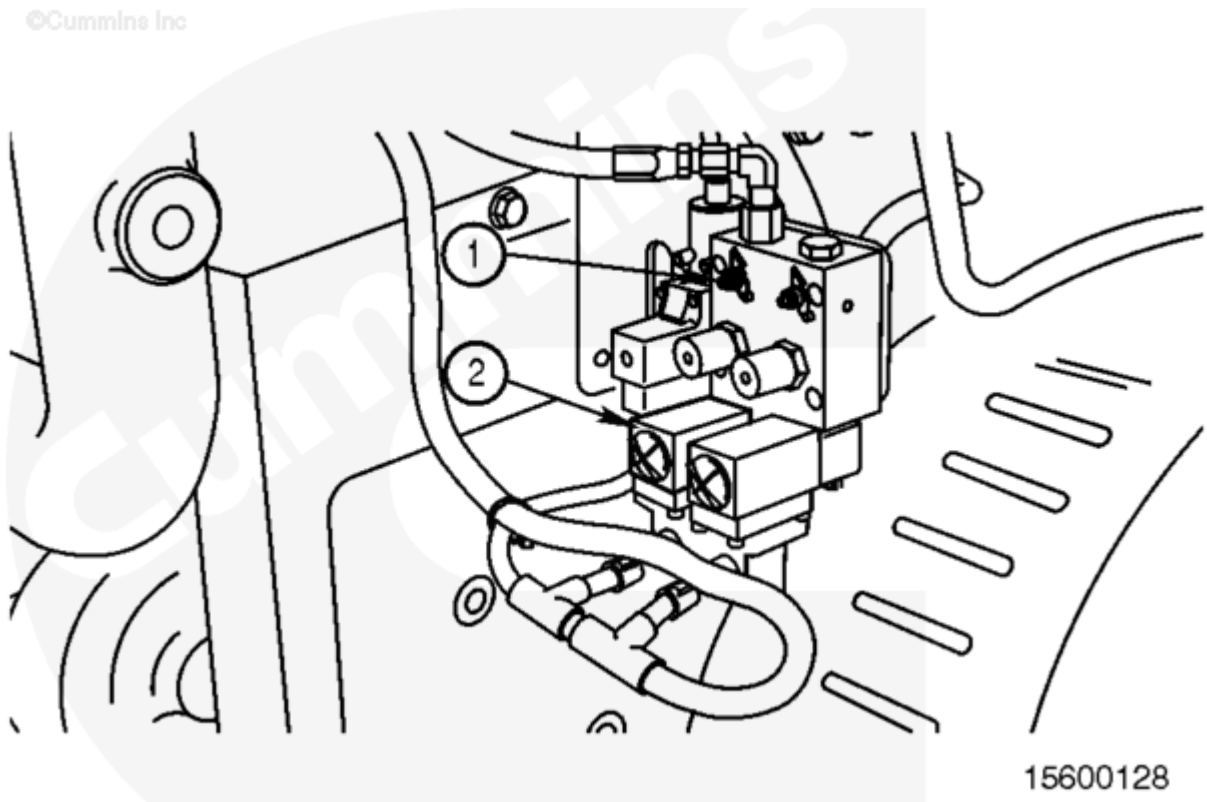


Coolant Pressure Isolation Valve (1) and Coolant Pressure Safety Switch (2)

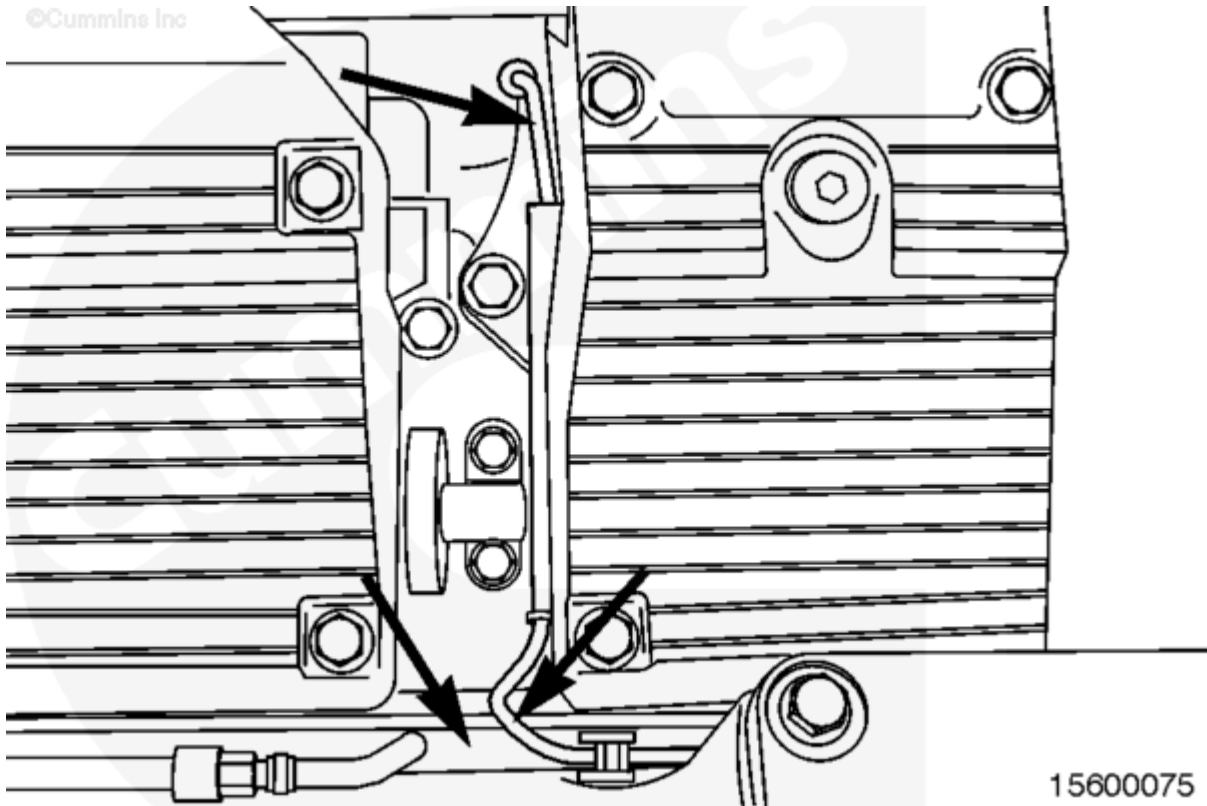


15600075

Exhaust Gas Temperature (individual cylinders)

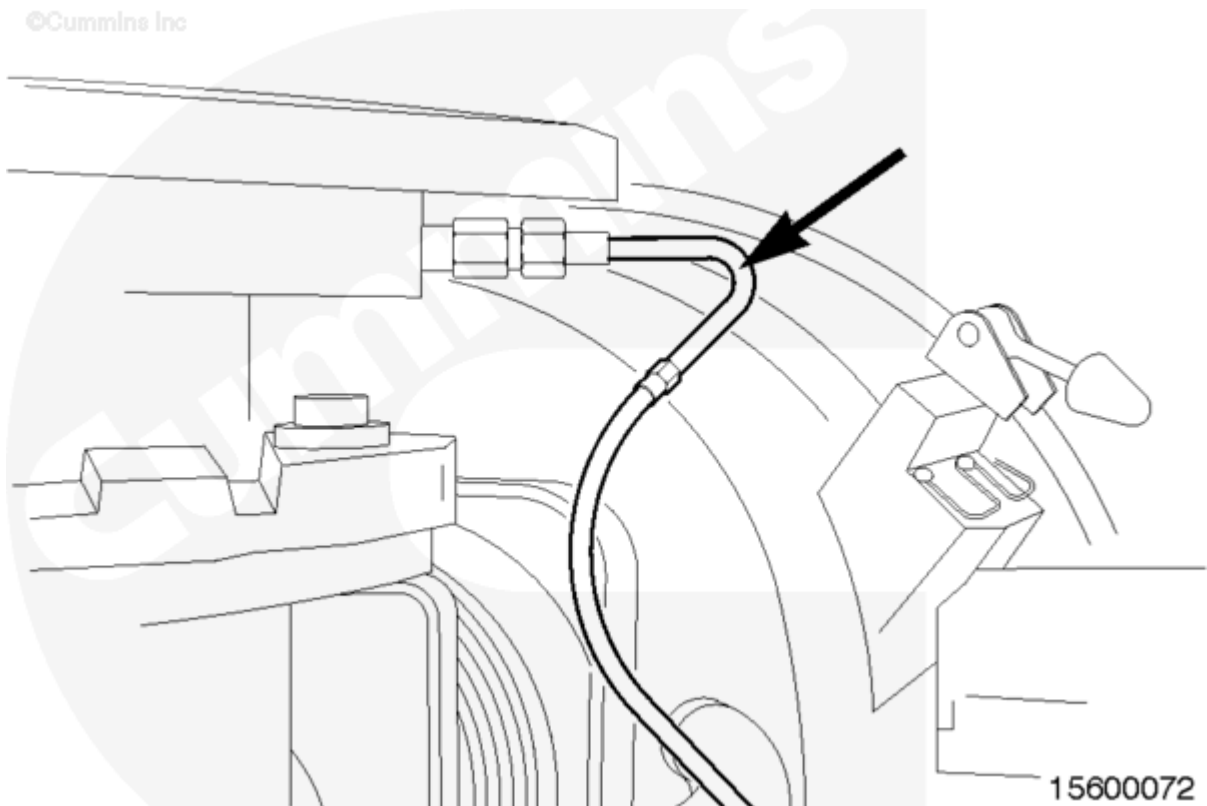


15600072


Exhaust Stack Temperature.

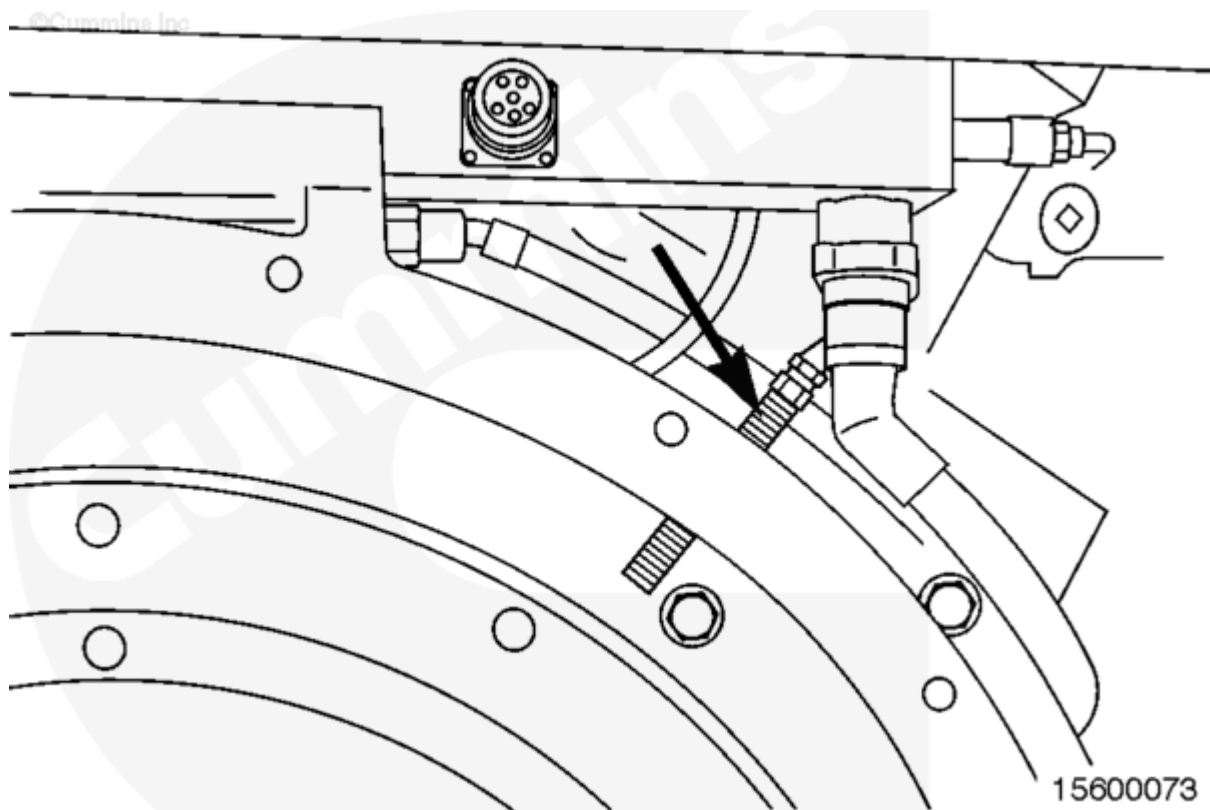

Engine Speed Sensor - Safety System (flywheel housing right bank).

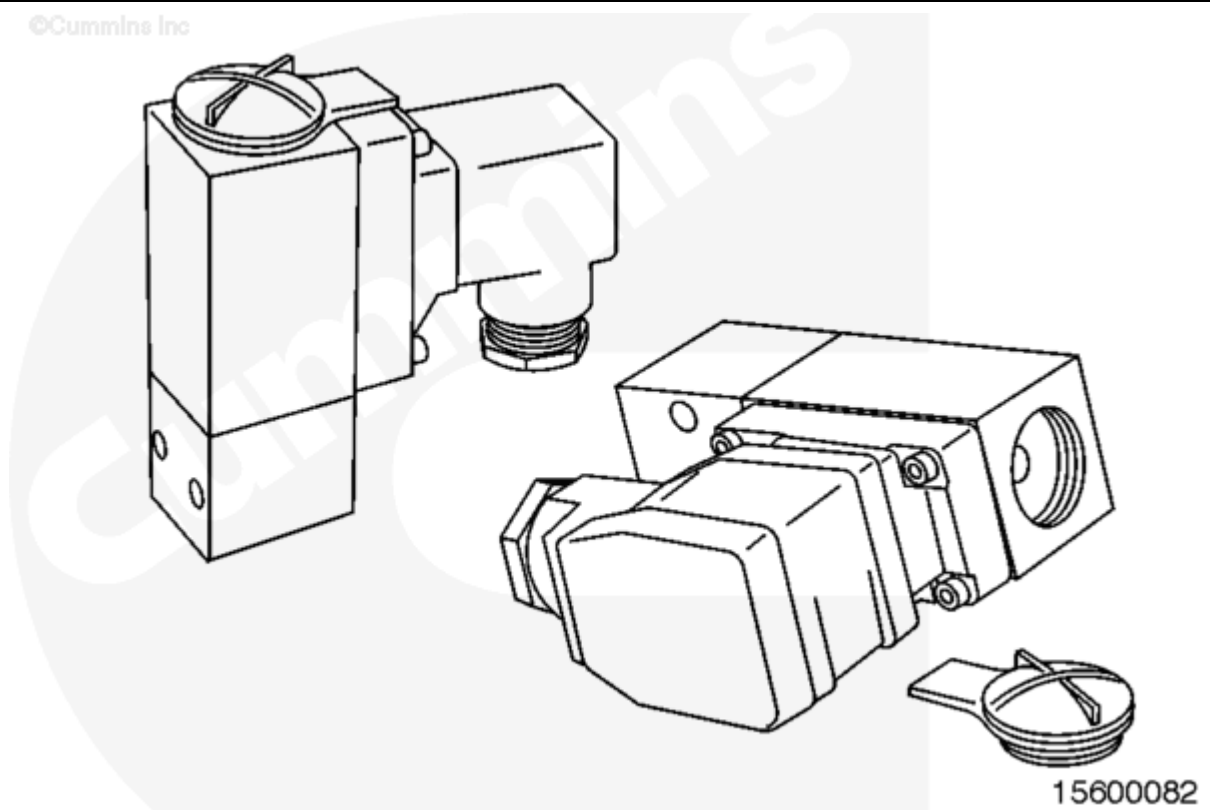


Pressure Switch

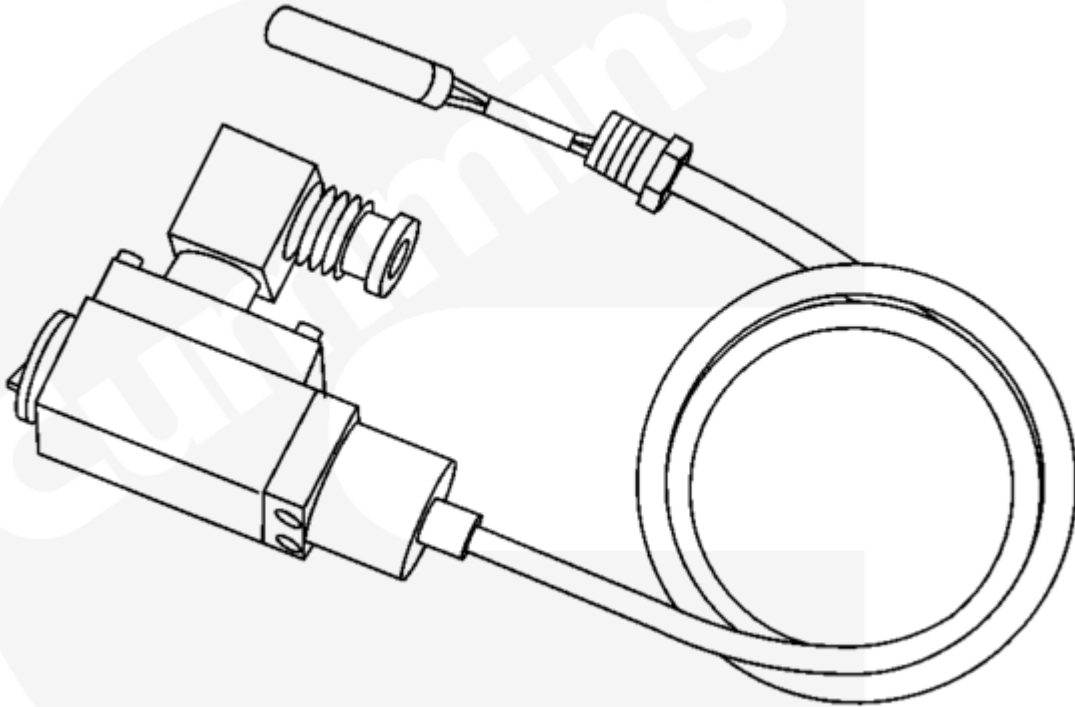


15600083

Temperature Switch.

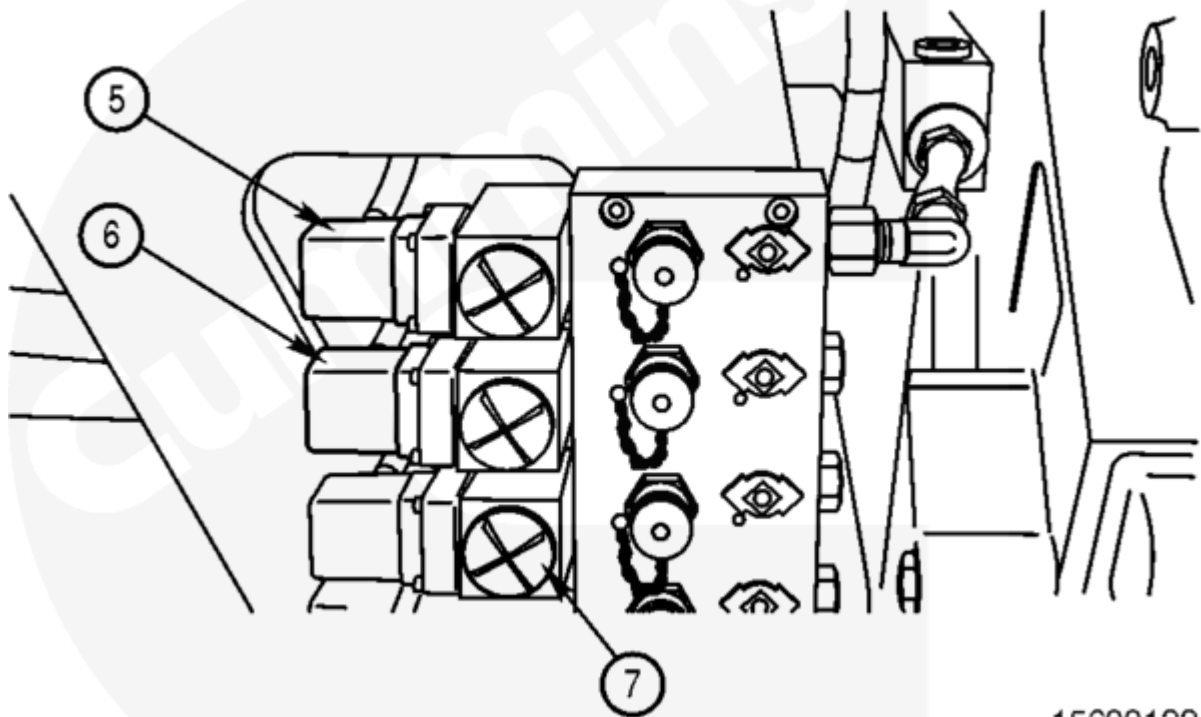


15600122

Lubricating Oil Pressure Switches (right bank rear)

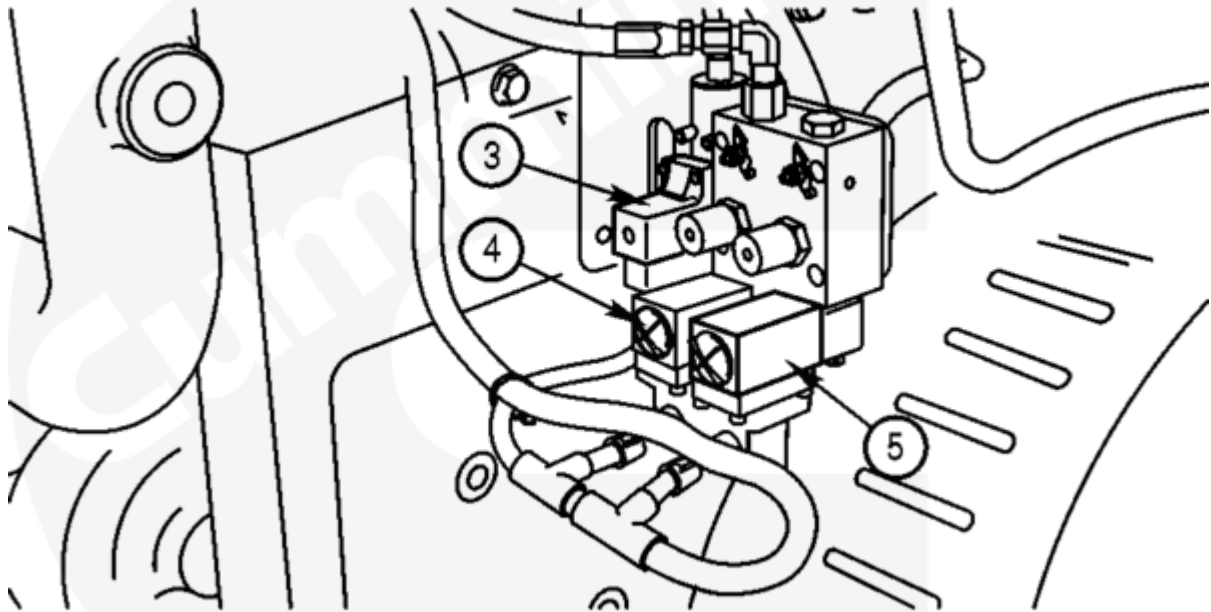

15600121

Coolant Pressure Switch and Coolant Temperature Switch (front).

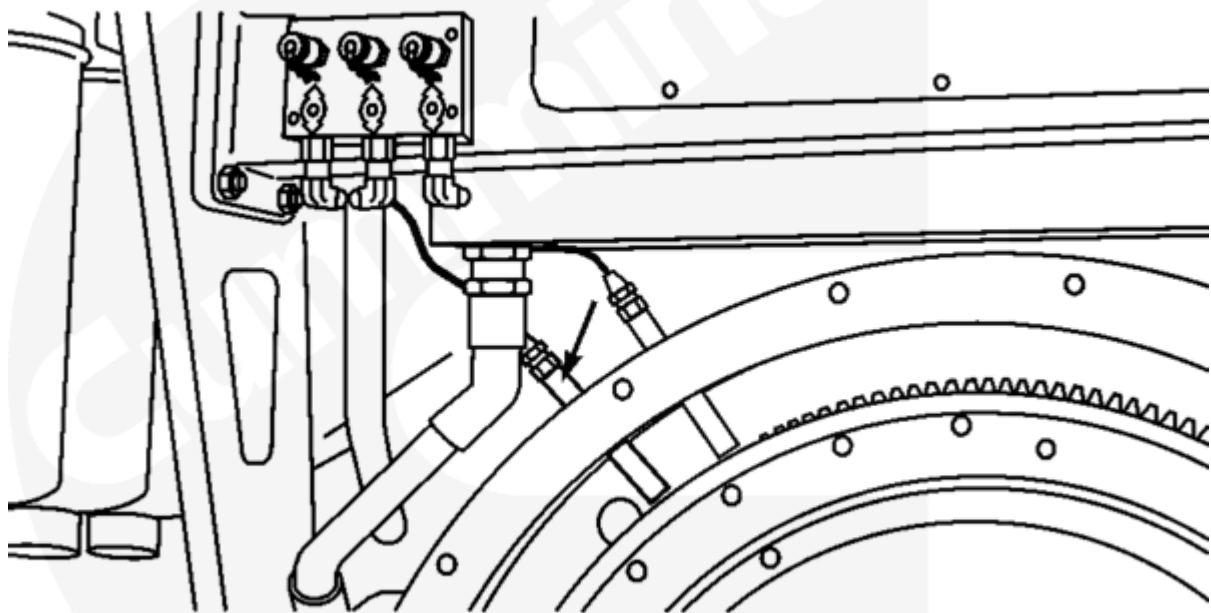

15600068

Engine Speed Sensor - Safety System (flywheel housing left bank).

